

10258955

Advanced Four-Zone Electronic Water Timer

User Instructions ■ English


73280EHO_INS_ENG_00

IMPORTANT:


Only for private use, no commercial or industrial use
Only for the use of pure water
Not for the use with unfiltered groundwater
Max. temperature of water - **37°C**

Min. and Max. ambient temperature: **4.5-48°C**
Minimum water pressure: **1 Bar**
Maximum water pressure: **6 Bar**
Lifetime of Battery - **6-8 Months**


Warning: Intended for outdoor use only. Severe electrical shock could result if water is sprayed into outlets or sources of electrical current. Do not use water more than 115°F (46°C). Do not use when the ambient air temperature is less 40°F (4.5°C). When not in use, remove batteries, drain and store indoors away from freezing temperatures.®~




Read the operating instructions




No abstraction of drinking water



Do not direct the water stream directly at electrical installations




Follow the notes



 
Save water. Close the tap after use



Do not direct the water stream at persons or animals



Do not expose to frost

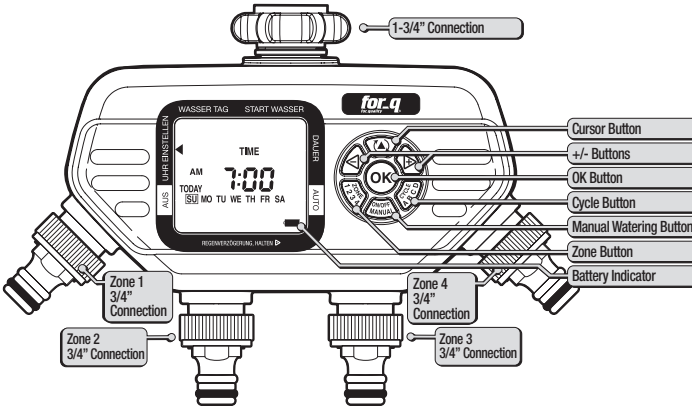


1 Understanding Zones

This is a four zone timer allowing you to water four different areas from the same faucet.
Each zone can be programmed with up to four different start times.
You can use the **PLANNING TABLE** provided on the back of this sheet to help organize your watering schedule for each zone.

Note: Do not use your timer when the air temperature is below 40°F (4.5° C). When storing your timer, be sure it is in a dry place and protected from frost.

2 Battery Installation & Assembly

 Remove the battery holder from the back of the **Timer Control Unit**. Insert two AA alkaline batteries (Do not use rechargeable batteries) as indicated on the battery holder. Replace the battery holder, making sure that it is firmly and securely placed in the **Timer Control Unit**.

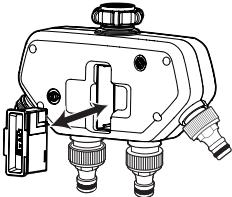


We recommend replacing batteries when the indicator reaches



Installation of the Timer


Attach the timer to an outside faucet and turn the water on very slowly. The water must be left on while the timer is attached to the faucet for your timer to operate. You may choose to program your timer before or after attaching it to the faucet.
NOTE: If water is continuously flowing through one or more valves, see **Open Valves During Installation** in the **“Useful Tips”** section for more information.

3 SET CLOCK: “Set Current Time and Day”

The Water Timer default setting is a **12-hour** mode (AM/PM). To ensure correct timing, look for either **AM** or **PM** to the left of the time. To switch between **12-hour** (AM/PM) and **24-hour** (military time), hold the **OK** button for 5 seconds. **12-hour** mode shows AM or PM while **24-hour** mode does not. **Note:** Changing time mode will erase all programs.
Before setting your watering times, you must first set the current time and day of the week. When the batteries are first installed, the arrow in the screen will point to **CLOCK**. If it is not in that position, press the  button until the arrow is pointing to **CLOCK**.



On your screen, a flashing box will appear around the **SU** (= Sunday). Simply set the timer to the current day by pressing the  and  buttons on the touchpad until the square is on the correct day. Once the correct day has been indicated, press the **OK** button.




To set the time, press the  and  buttons until the correct time appears on the screen, and then press **OK**.

Press the  button (at the top of the touch pad) to move to **WATER DAY**.



 
4 WATER DAY: “What days do you want to water?”

Check to be sure that the arrow on the screen is pointing to **WATER DAY**. With this setting, you can select specific days to water or an interval period of the day when watering will occur.
To set the watering day, use the  and  buttons to select the day-of-the-week you wish to water. Press the **OK** button when the desired day-of-the-week is highlighted on the screen. You can select as many days as you like. The days selected will have a square around them.




To water at preset intervals, press the  button on the buttonpad to navigate past the days of the week. Press the  and  buttons to set the time period (**EVERY 1 DAY** through **EVERY 7 DAY(s)**).

Press the  button to move to **START WATER**.

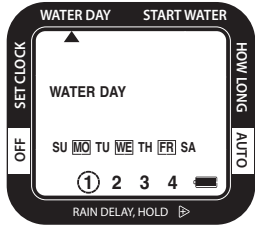Note: You will see **Zone 1** highlighted at the bottom of the screen; program Zone 1 before moving on to Zone 2.



 
5 START WATER: “What time-of-day do you want to water?”

You can select up to four independent start times (**CYCLE A, B, C, D**). With the arrow pointing to **Start Water** on your screen, **CYCLE A** should be highlighted, use the  and  buttons to select the first watering time.
If you want to set another **START WATER** time, press  to move to **CYCLE B**. Repeat the process above to set the next **START WATER** time. You may select up to four **START WATER** times.




When you have set all desired **START WATER** times, press the  button to move to **HOW LONG**.

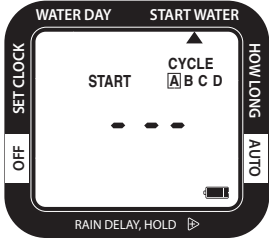


Hold the  or  buttons to advance settings more quickly.





6 HOW LONG: “Set the length of each watering cycle.”

 
With the arrow pointing to **HOW LONG**, use the  and  buttons to select the length of each watering cycle. After setting **HOW LONG** you want to water during a selected cycle, press  to move to the next cycle. Repeat until **HOW LONG** has been set for each cycle.
HOW LONG can be set for up to 360 minutes (6 hours) for each watering cycle. The Cycle length cannot overlap the next **START WATER** time.

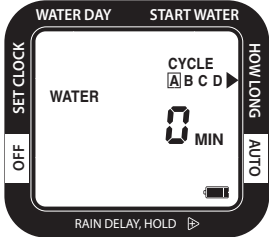
Note: You can only select Watering Cycles if you have set a start time in **Step 5** above.



7 SETTING ANOTHER ZONE: “Keep your plants watered on separate cycles.”

When you have set **WATER DAY**, **START WATER**, and **HOW LONG** for Zone 1, press the  button back to **WATER DAY**.
Press  to select another zone, and repeat steps 4-6 above on up to four individual zones.

 When all desired zones are set, press the  button to enter **AUTO** mode.

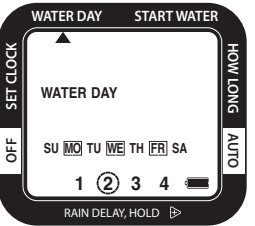

8 AUTO MODE: “Your timer is ready to go.”

In **AUTO** Mode, your timer will run the watering program you have entered.
The screen display will alternate between showing the current time and the next watering cycle of each zone.

9 RAIN DELAY: “Prevent watering when rain is in the forecast.”

If there is rain in the forecast, you can temporarily suspend your watering program on all zones for up to 7 days using the **RAIN DELAY** feature. After the selected delay has ended, your watering program will automatically resume.

To set the Rain Delay, check to make sure the arrow on the screen is pointing to **AUTO**.

Hold the  button until the word **DELAY** appears. Now press the  button to set the duration of the delay. You can choose a delay from 1-24 hours and 1-7 days. You can reduce or deactivate the delay period with the  button.


Once the delay time is selected, press the  button and wait for the number to stop flashing.

All other functions, including **MANUAL WATERING** and **OFF** are on hold during **RAIN DELAY**. To cancel **RAIN DELAY**, press the  button until **DELAY** is set to “0”.

Note: In the **RAIN DELAY** mode, the screen will alternate between the current time and the remaining delay time.

 


10 OFF MODE: “Stop watering for an extended period.”


To stop watering indefinitely, press the  button until the arrow on the screen points to **OFF**. The timer will not water while in this mode. The screen will display the word **OFF**.


To start watering automatically again, press the  button until the arrow on the screen points to the **AUTO**. The program will begin watering at the next previously scheduled **START WATER** Time.

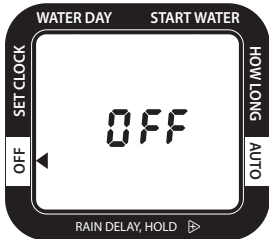

Note: Watering will be stopped for all zones when this feature is activated.

 


11 MANUAL WATERING: “Fill a bucket, clean the car or wash the dog.”

To use a hose or other watering tool, simply press the (manual) button. Then using the  button select which zone you want to use.


Using the  button, select the length of time you wish to water. After a few seconds, the valve will open, and then automatically close when the selected time is reached.

Note: The timer will hold the last manual time in its memory. To reset the manual time back to “0”, press the  and  buttons to adjust the time.

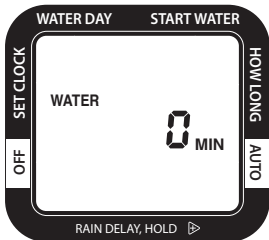


12 TIMER RESET

To completely erase all settings in the timer and return to the original factory settings, press and hold the  button for 7 seconds. The screen will display **RESET**.

You will need to press and hold the  button a second time to change the clock format.

 Note: All programming will be lost when the timer is **RESET**. After **RESET** You may need to change the time setting between **12-hour** (AM/PM) and **24-hour** (military time). See **Step 4** for further instructions.

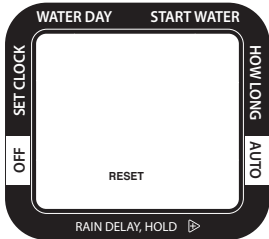

PLANNING TABLE

ZONE 1	CYCLE A	CYCLE B	CYCLE C	CYCLE D
Start Water (Time)				
How Long (Minutes)				
ZONE 2	CYCLE A	CYCLE B	CYCLE C	CYCLE D
Start Water (Time)				
How Long (Minutes)				
ZONE 3	CYCLE A	CYCLE B	CYCLE C	CYCLE D
Start Water (Time)				
How Long (Minutes)				
ZONE 4	CYCLE A	CYCLE B	CYCLE C	CYCLE D
Start Water (Time)				
How Long (Minutes)				

Manufactured for
HORNBACH Baumarkt AG
Hornbachstrasse 11
76879 Bornheim/Germany
www.hornbach.com



Do not dispose of electrical equipment in domestic waste. Hand it in at a collection point for electrical and electronic waste. By doing so, you will help to conserve resources and protect the environment. Used batteries are to be recycled. Use the collection points in your community. Ask your local authorities about the locations of the collection points.

USEFUL TIPS

Open Valves During Installation

Shaking during transportation can cause valves to be open. If this occurs, water may run continuously through the valves during installation.

 
Turn the water off.

Remove the batteries. Wait for the screen to go blank. Reinsert the batteries.

Note: Removing the batteries will not erase any existing watering schedules.

Turn the water back on.


If the problem persists, turn off the water. Use the **Manual** feature to open and close each valve 3 times.

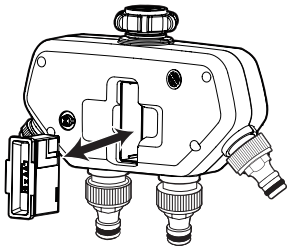


Cleaning Your Timer

You should clean your timer periodically. Debris or sediments commonly found in water can build up in your timer.

 Turn off the water. Remove the timer from the faucet and check that the filter washer is clear. If you notice any debris, remove the filter washer and clean it out with water.

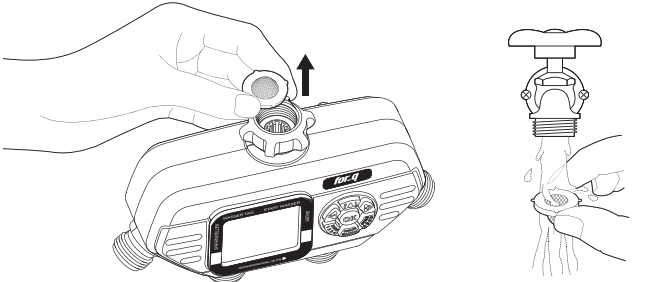

 Activate the **MANUAL** mode by pressing the **MANUAL** button. Open all of the valves and spray water through each valve and the faucet connection to flush out any built-up sediments

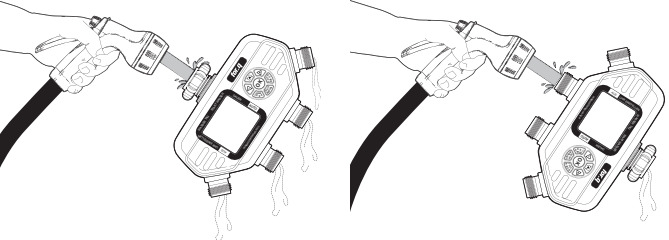

Seasonal Storage

 
Please note that ambient temperatures of 0°C and below can cause water in the timer to freeze and expand, damaging the timer.

Freezing temperatures can cause water in the timer to freeze and expand, damaging the timer.

At the end of the season or when there is frost in the forecast, turn off the water and remove your timer from the faucet.

Remove the batteries.

Be sure to store the timer indoors, away from temperatures of 0°C and below.

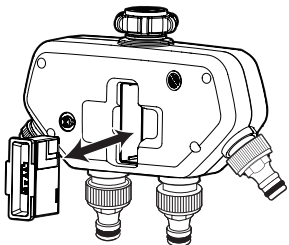

Tips for Battery Life

1. Make sure to use fresh alkaline batteries.
2. Do not use rechargeable batteries.
3. Remove the batteries at the end of the season (6-8 months) before storing.
4. Batteries should last about one season. A schedule with more frequent watering times can cause the batteries to drain faster.
5. Keep product away from children.
6. Only replace with batteries of the same type. Observe the correct polarity
7. Do not expose batteries (battery pack or inserted batteries) to excessive heat from sun light, fire, etc. Protect from mechanical shocks. Keep dry and clean. Keep out of reach of children.
8. Do not open, disassemble, cut open, or short-circuit batteries.
9. Do not use old and new batteries together.
10. Do not ingest/swallow the battery - risk of burns.
11. Observe the safety notes and other notes on the battery and its packaging.
12. Remove empty or leaking batteries, clean the battery compartment thoroughly if necessary. Avoid contact with eyes and skin.
13. If the battery compartment does not close securely, stop using the product.
14. Non-rechargeable batteries must not be charged.
15. (if present) Remove the plastic strip from the battery compartment before first use.

 


Works with



Soil Moisture Sensor
(not included)

Prevent overwatering while conserving water by connecting your timer to the HydroLogic® Soil Moisture Sensor. The easy to set sensor monitors moisture in the soil, and will suspend a watering cycle when it is raining or when the ground is already wet. Adjust the dial to maintain just the right amount of moisture for healthy lawns and gardens.

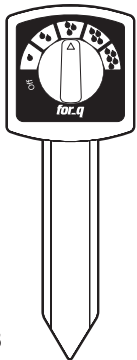

Art. Nr. 10258958