
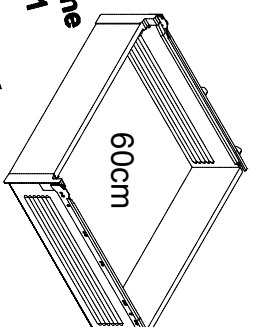








ISK51-8E

ISK61-8E

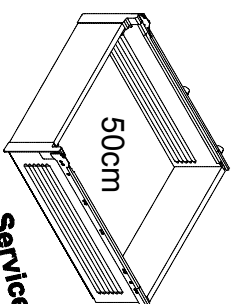

Service-Hotline
01805-678101
0,14€ pro Min.
++49 für Österreich
Auslandstakt pro Min.
Service@jaka-bkl.de
voor Nederland en België
00800-40119350
benelux@jaka-bkl.de

Montageanleitung

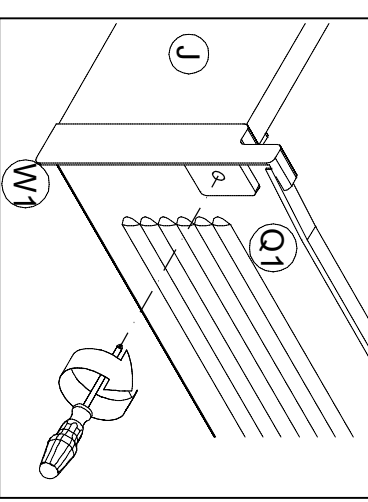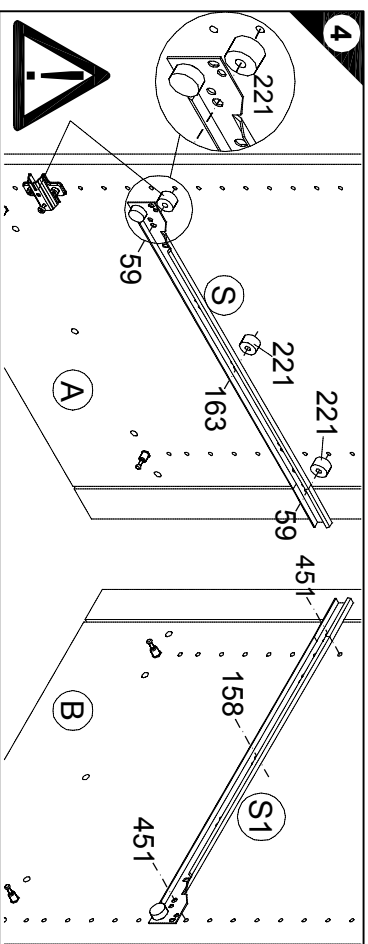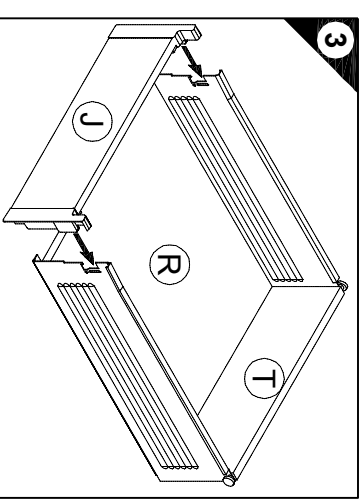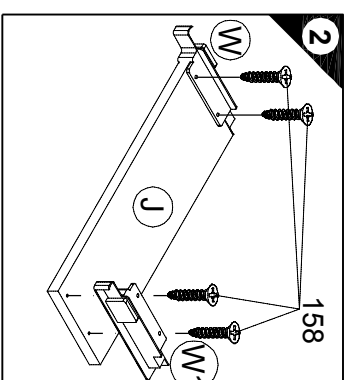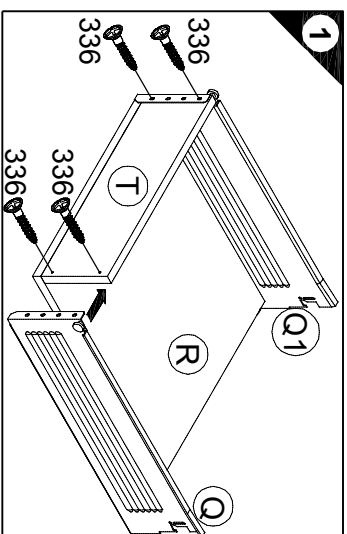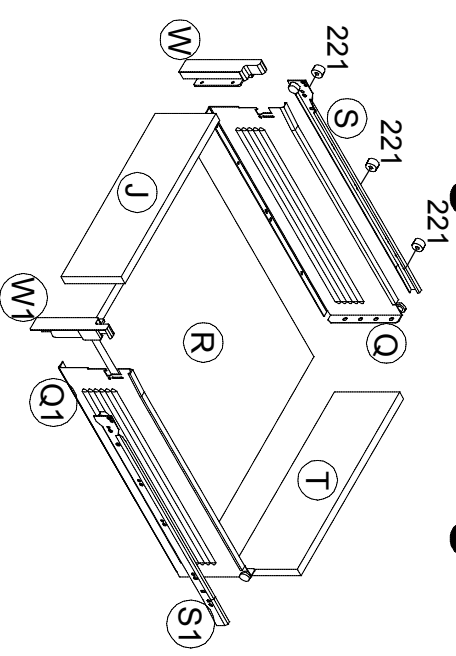

Ersatzteile/Spare parts/pièces de rechange/Reserveonderdelen/Piezas de recambio/Ricambi/Замачные части/Części zamiennne/póialkatrészek/Náhradní části/Nadomestni deli/Varosast/reservdelar/náhradné diely/Utilizaj please de schimb/Vedek parçalar

ISK51-8E J E941934 Q Q1 E946007 R E941932 S S1 E946007 T E941937 W E946008 W1 E946009
ISK61-8E J E941935 Q Q1 E946007 R E941933 S S1 E946007 T E941938 W E946008 W1 E946009