

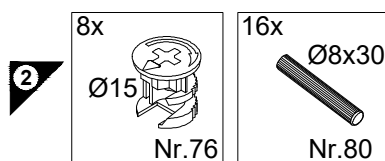
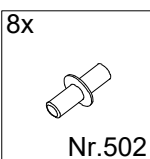
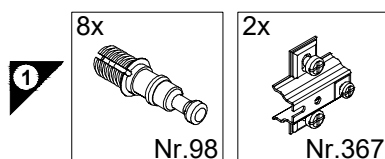





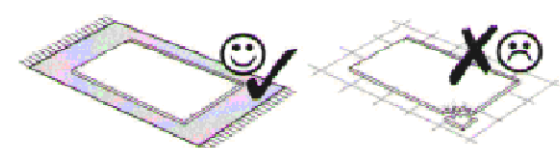


JAKA-BKL GmbH
Jaka Straße 3
D-32351 Sternwede-Wehden

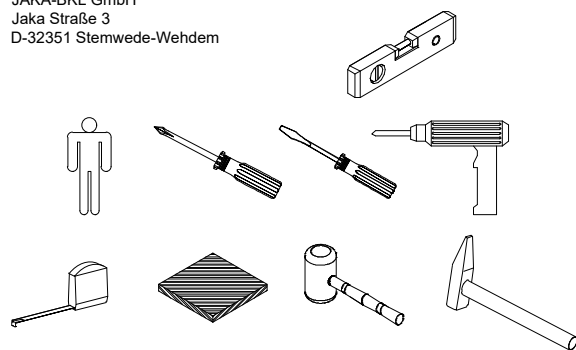

Service-Hotline
01805-678101
0,14€ pro Minute
++49 für Österreich
Auslandstarif pro Minute
service@jaka-bkl.de
voor Nederland en België
00800-40119350
benelux@jaka-bkl.de







Montageanleitung

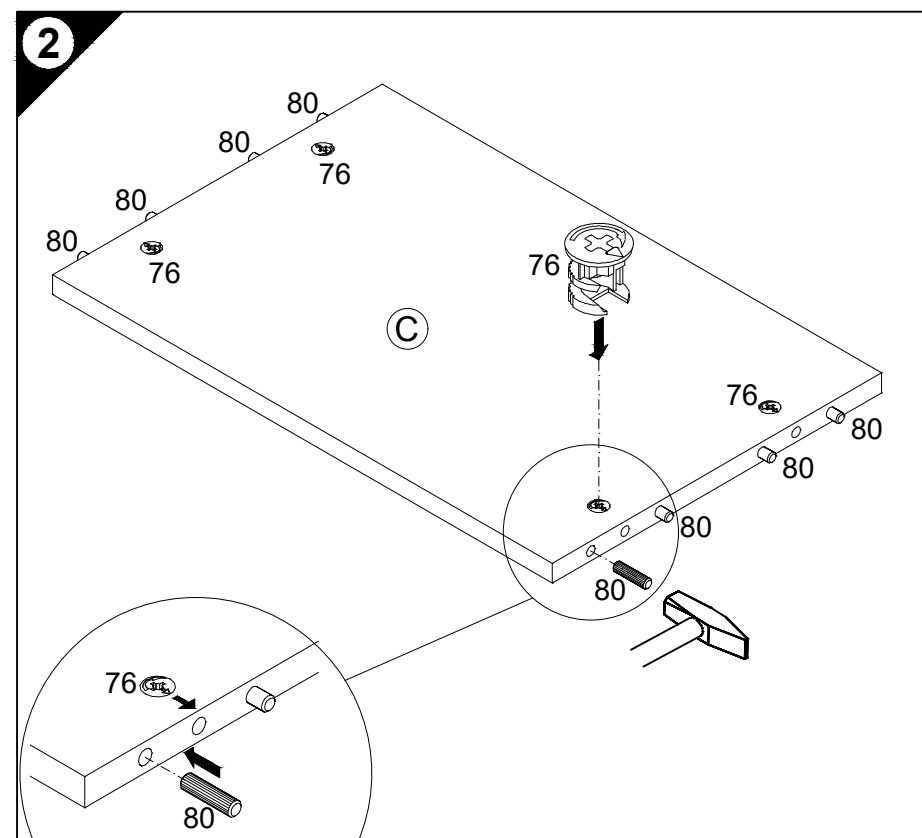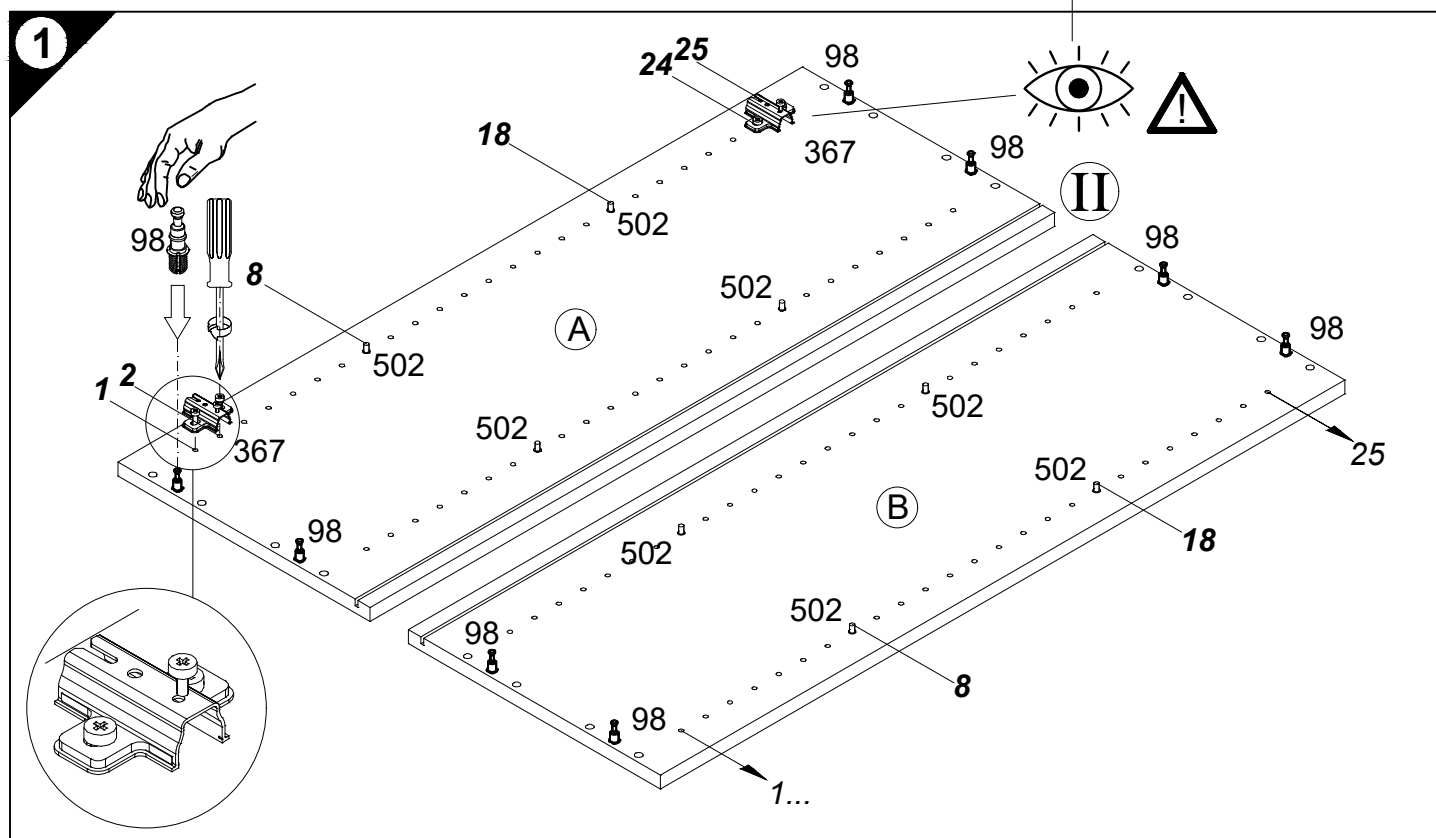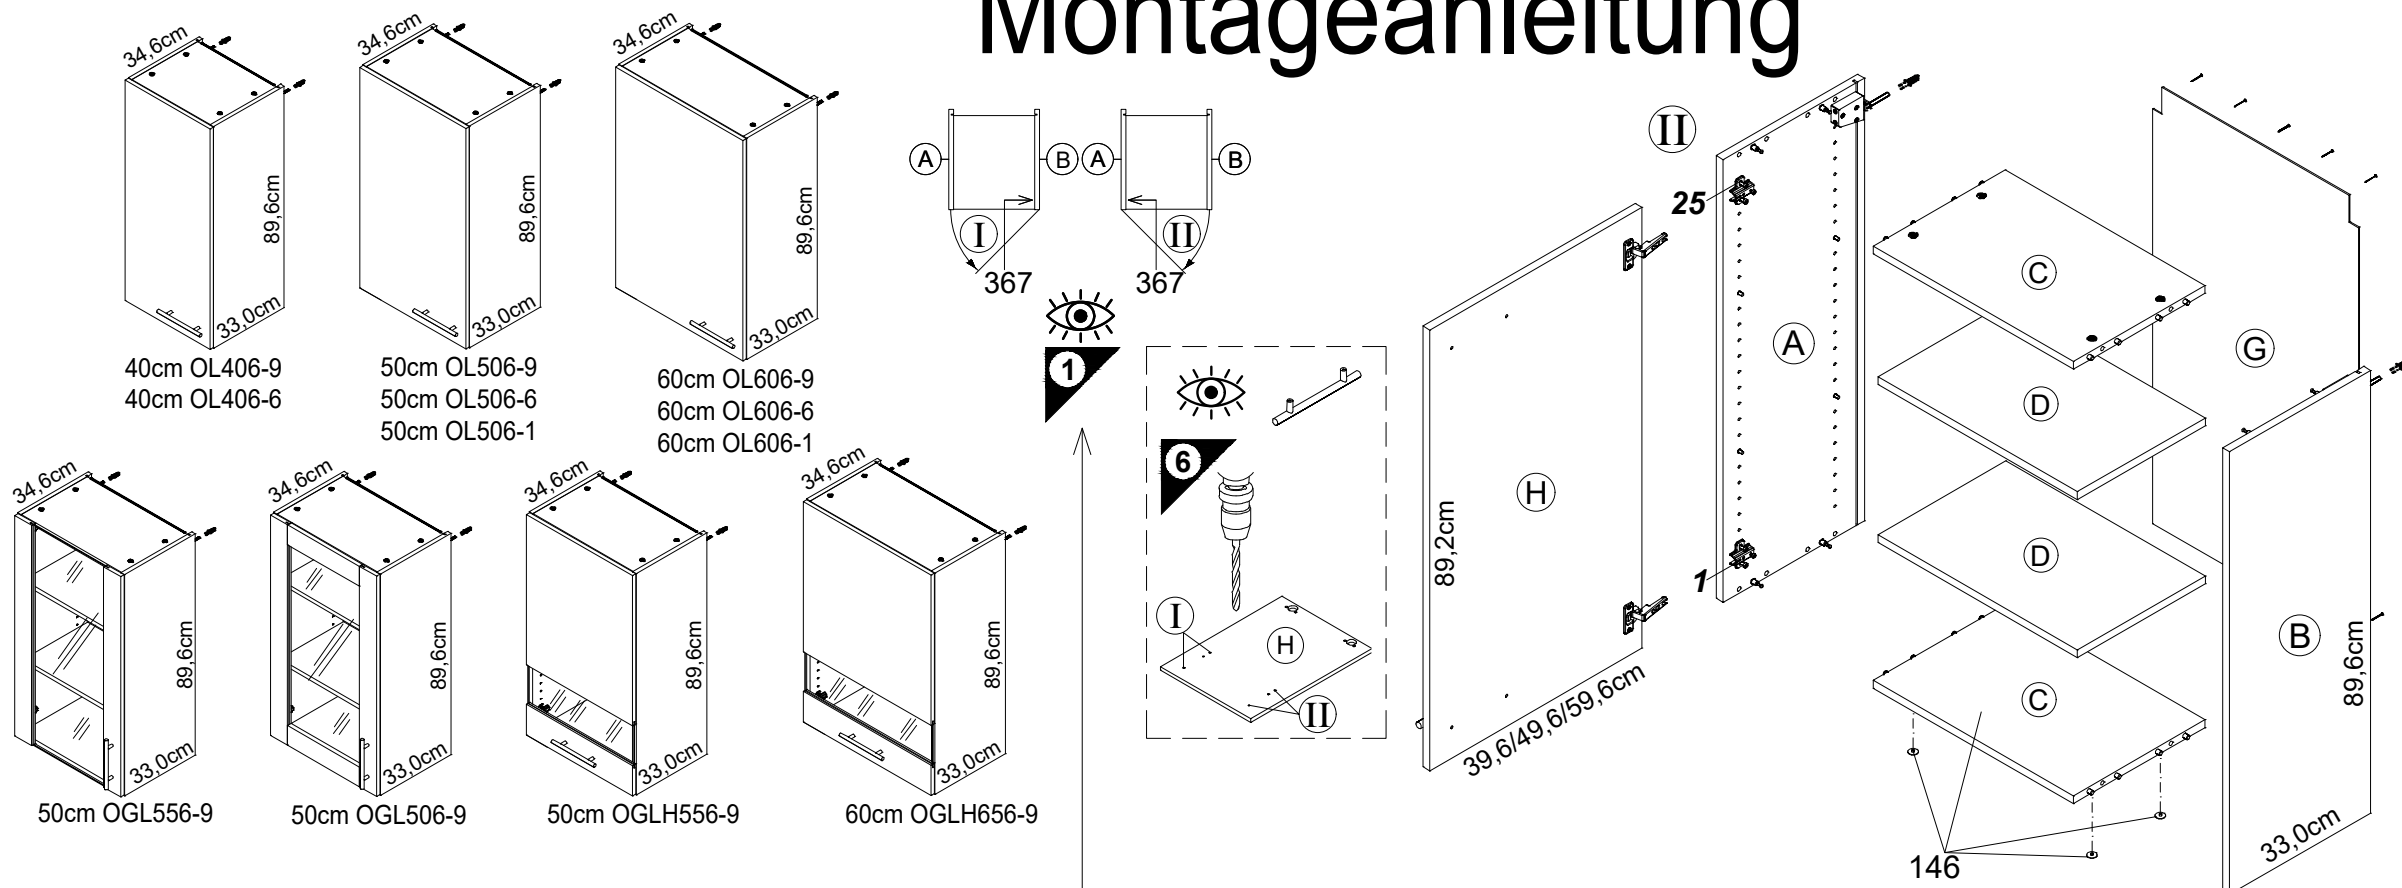

Ersatzteile/Spare parts/pièces de rechange/Reserveonderdelen/Piezas de recambio/Ricambi/Запасные части/Części zamienne/pótalkatrészek/Náhradní části/Nadomestni deli/varaosat/reservdelar/náhradné diely/Utilizați piese de schimb/Yedek parçalar

40cm OL406-6	A E940044	B E940044	C E941235	D E940335	G E970130	H E980529	50cm OGL506-9	A E940044	B E940044	C E941234	D E940334	G E970132	H E980686
50cm OL506-6	A E940044	B E940044	C E941234	D E940334	G E970132	H E980686	50cm OGL556-9	A E940044	B E940044	C E941234	D E940334	G E970132	H E940692
60cm OL606-6	A E940044	B E940044	C E941233	D E940333	G E970134	H E980605	50cm OGLH556-9	A E940044	B E940044	C E941234	D E940334	G E970132	H E940656
40cm OL406-9	A E940044	B E940044	C E941235	D E940335	G E970130	H E940529	60cm OGLH656-9	A E940044	B E940044	C E941233	D E940333	G E970134	H E940658
50cm OL506-1/-9	A E940044	B E940044	C E941234	D E940334	G E970132	H E940686							
60cm OL606-1/-9	A E940044	B E940044	C E941233	D E940333	G E970134	H E940605							

1 → 2 → 3 ...

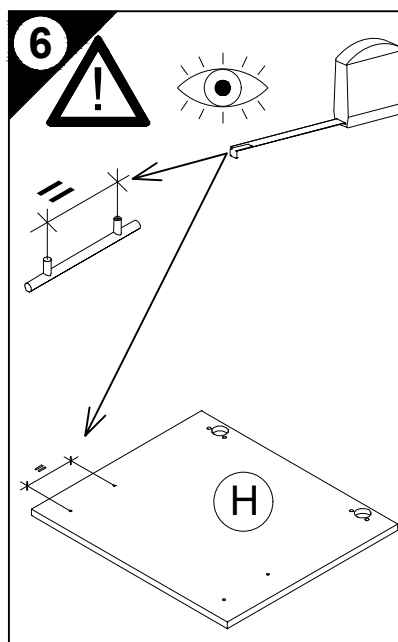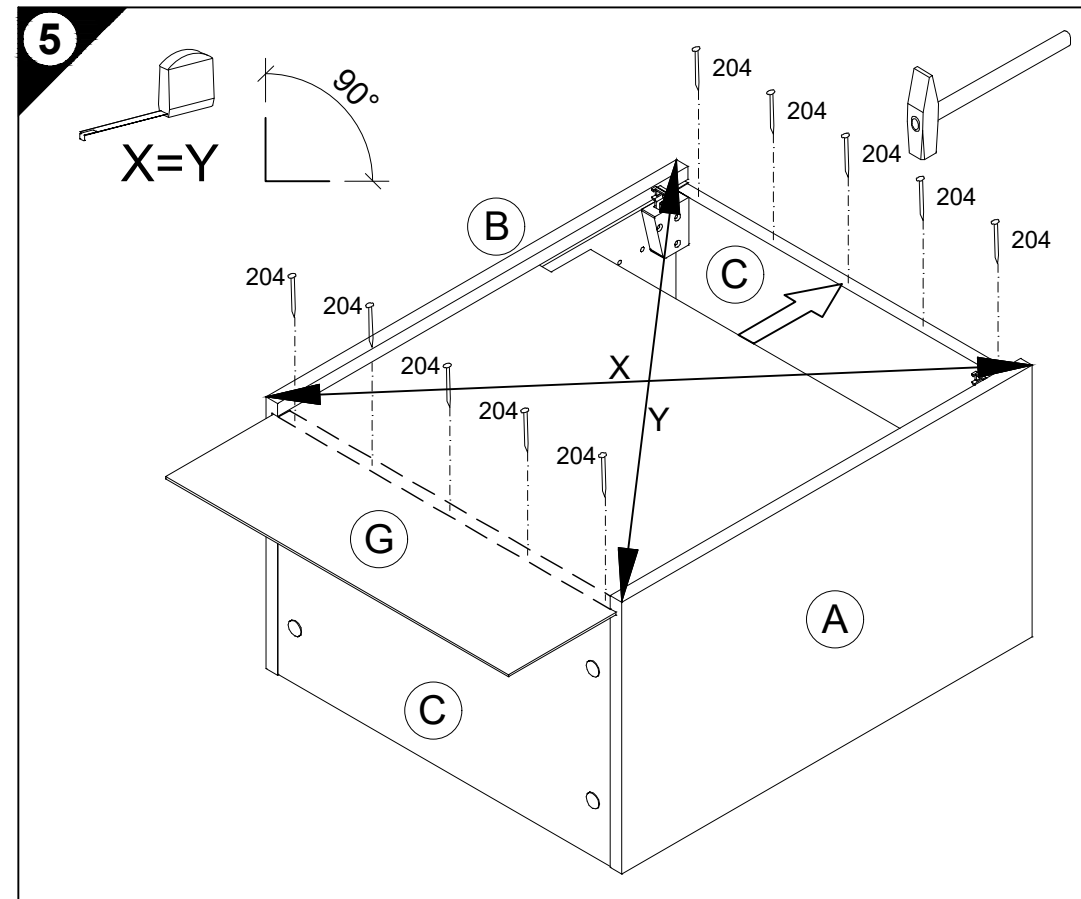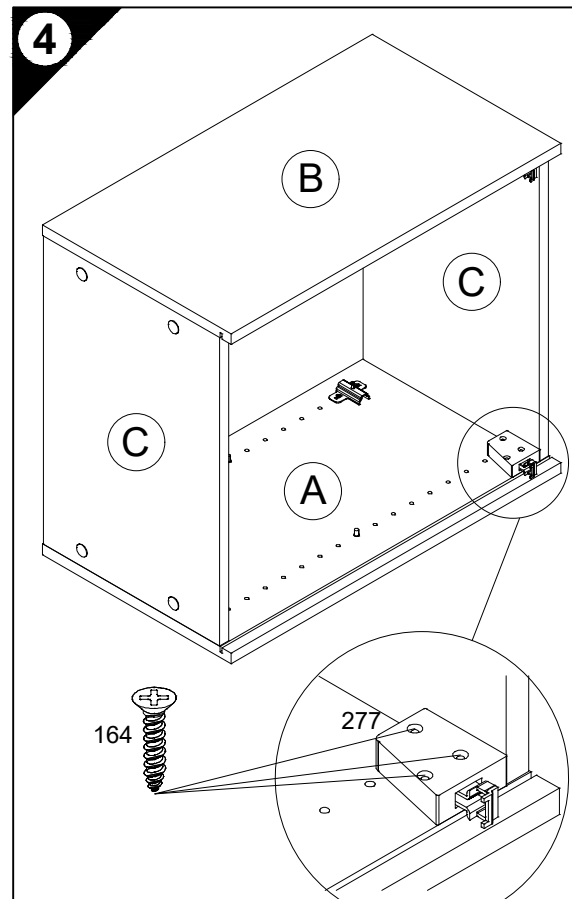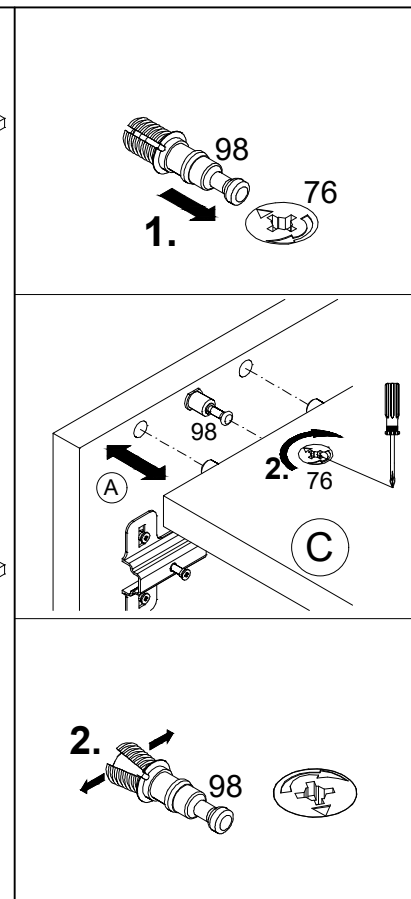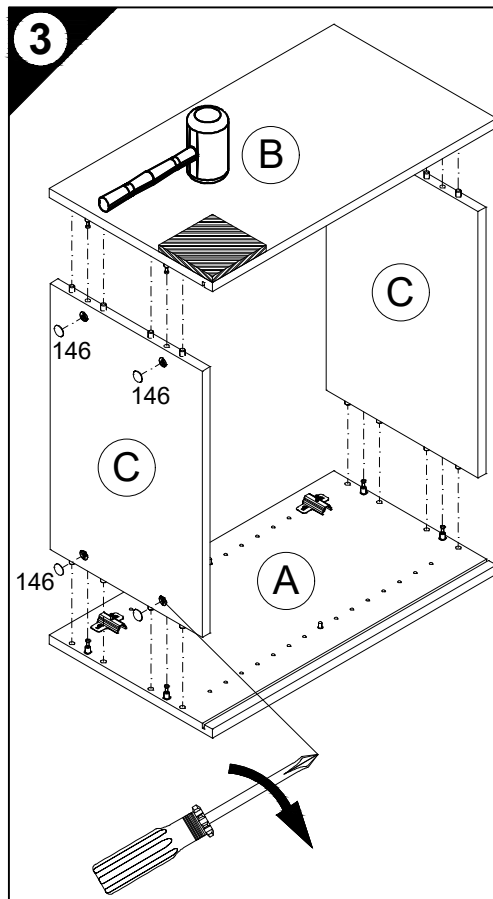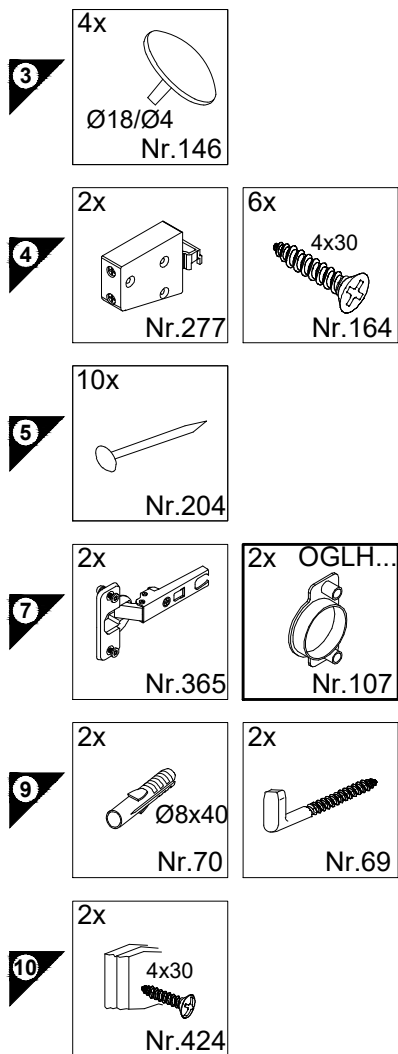

D Holzunterlage verwenden!
Front andrücken, scharfen Bohrer verwenden
und mit wenig Druck durchbohren!

GB Use a wooden base!
Press front down, use sharp drill bit
and, by applying slight pressure, drill a hole

F Utiliser un support en bois !
Appuyer sur la façade, utiliser un foret bien affûté
et percer en appliquant une faible pression !

NL Houten onderlegger gebruiken!
Druk het front aan, gebruik een scherpe boor
en oefen bij het boren weinig druk uit!

E ¡Utilizar una base de madera!
¡Presionar el frente, utilizar una broca afilada
y taladrar con poca presión!

I Utilizzare una base di legno!
Appoggiare la facciata, utilizzare una punta di trapano affilata
e trapanare esercitando solo una leggera pressione!

RUS Использовать деревянную подложку!
Прижать фасад, использовать острое сверло
и просверлить с незначительным давлением!

PL Używać podkładkę z drewna!
Docisnąć front, użyć oстрego wiertła
i przewiercić, używając małej siły nacisku!

H Alkalmazzon fa alátétet!
Nyomja le az előlapot, használjon éles fűrőt,
és kis nyomással fúrja át!

CZ Použijte dřevěný podklad!
Přitlačte čelo, použijte ostrý vrták
a provrtajte pomocí malého tlaku!

SLO Uporabite leseno podlago!
Pritisnite ličnico ter z ostrim svedrom
in z majhnim pritiskom izvrtajte luknjo!

FIN Käytä puualustaa!
Paina etulevy paikoilleen, käytä terävää poranterää
ja poraa reikä vain kevyesti painamalla!

S Använd ett träunderlag!
Tryck fronten mot underlaget, använd vass borrh
och borra igenom med ett lätt tryck!

SK Použite drevený podklad!
Přitlačte front, použite ostrý vrták a prevrtajte miernym tlakom!

RO suport de lemn!
Împingeți frontul, utilizați un burghiu ascuțit și perforați exercitând doar o presiune redusă!

TR Ahşap taban kullanın!
Önden bastırın, keskin matkap ucu kullanın ve az basınç
uygulayarak delin!

