


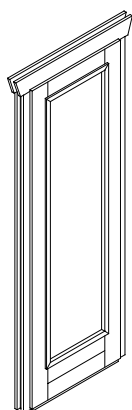

Einbau Panoramafenster

28-EF-01



B631
5,4lfdm



3 x B432-130
130cm



1 x H20/46-00
60,2cm



! Bitte zuerst die Transportleiste vom Fenster entfernen!

! Please remove before assembling the transportslat from window!

6 x B106-001



6 x B106-002



2 x B100-L




20 x B105-0030 30mm

43 x B105-0040 40mm


4 x B105-0050 50mm

6 x B105-0060 60mm

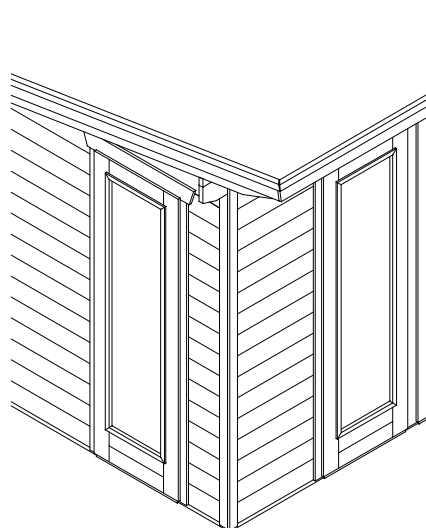


Haus Ostende
House Ostende


1.

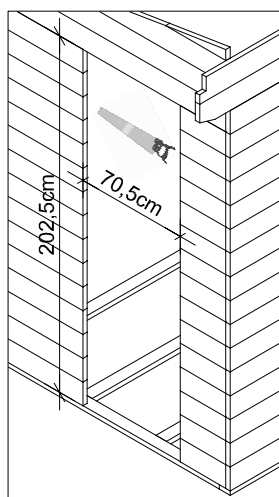


2.

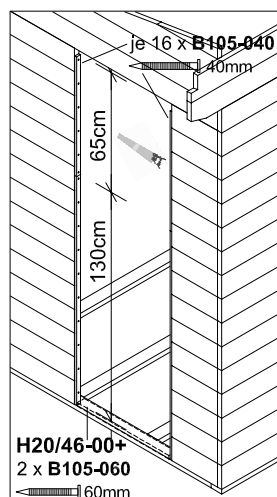

3.

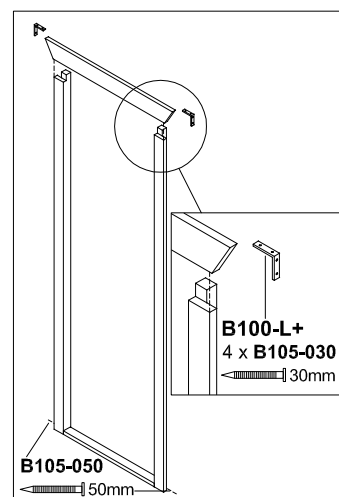

4.

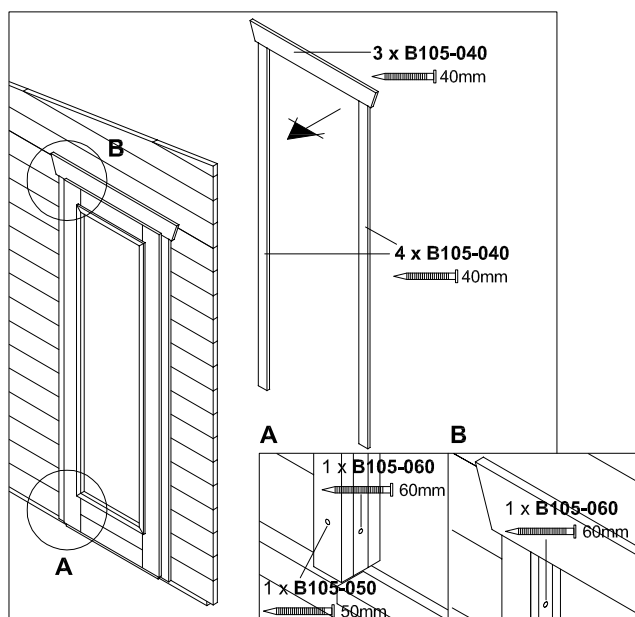

5.

