


Talis

mit Trimaxstufen

Talis Marche TRIMAX Instructions d'installation

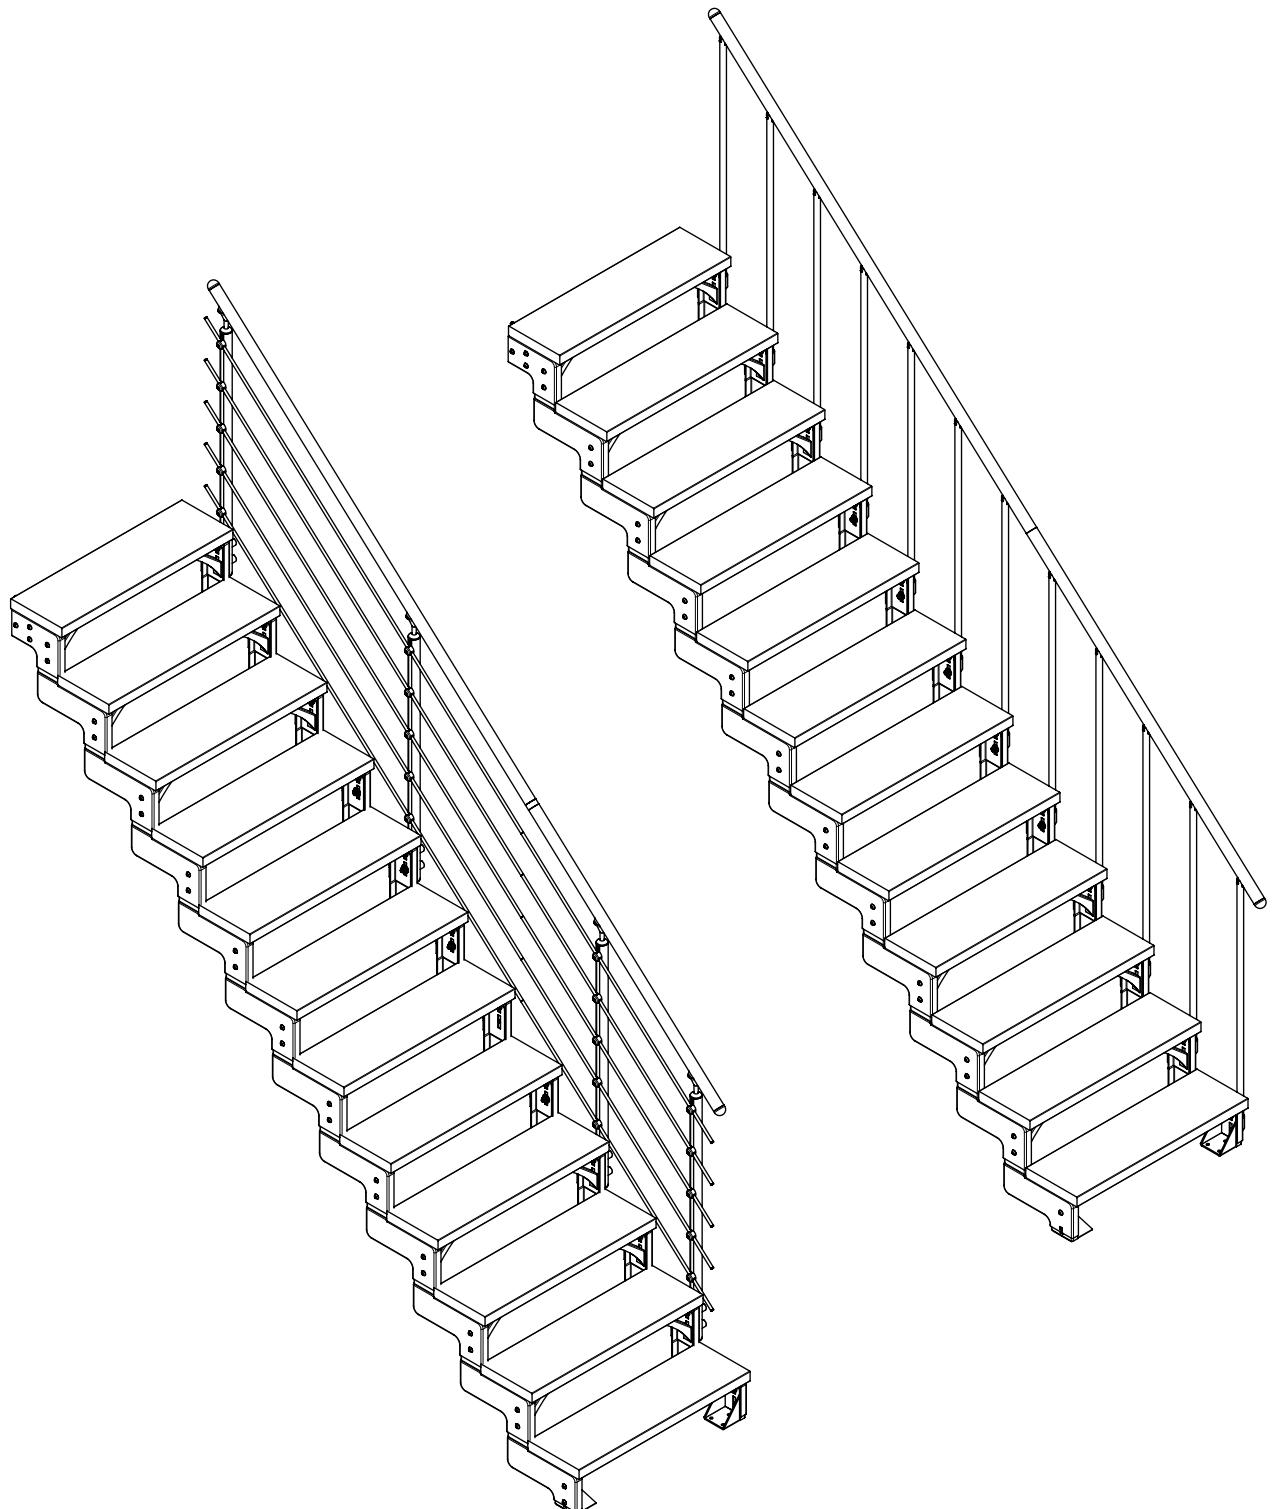

68015

Kit 1 Structure porteuse

 x 1 K1-41931	 x 1 K1-41930	 x 1 K1-41911	 x 1 K1-41910	 x 2 K2-41900
 x 14 K3-02045 M10x25	 x 2 K3-04110 Ø10	 x 8 K3-04198 Ø10	 x 14 K3-03051 M10	 x 12 K3-08001 Ø12 x 60
 x 12 K3-06269 Ø6 x 35	 x 4 K3-05022 M8 x 20	 x 12 K3-04010 Ø10,5		 x 12 K3-06070 Ø10 x 60

68016


KIT 2: Extensionset

 x 1 K1-41921	 x 1 K1-41920	 x 4 K3-02045 M10 x 25	 x 4 K3-04198 Ø10	 x 4 K3-03051 M10
		 x 6 K3-06269 Ø6 x 35		

68020

Angle des marches

9 10

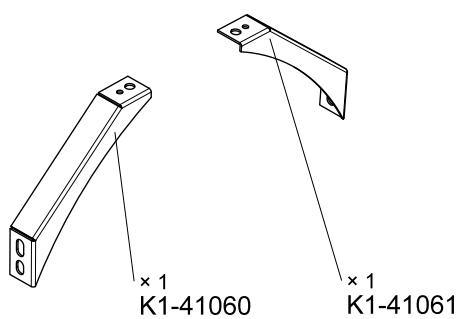

If more than 6 steps:

Add

(9) + (10)

Si vous ajoutez plus de six

(9) + (10)

niveaus


59

$\times 1$
K3-06269
 $\varnothing 6 \times 35$



80 cm / 100 cm

11

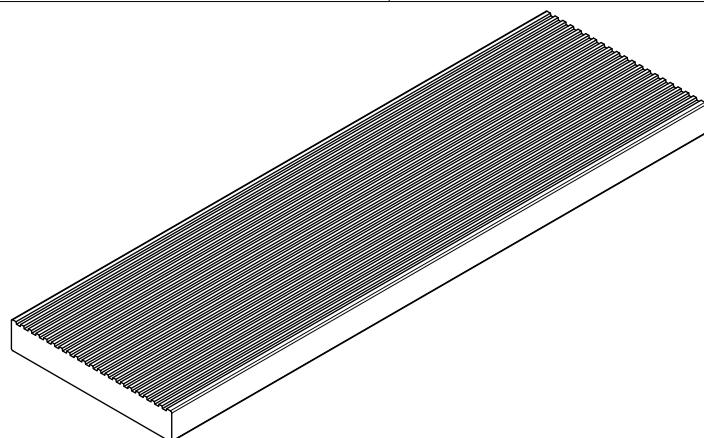

59



$\times 6$
K3-06269
 $\varnothing 6 \times 35$



Si $L = 100$

alors ajoutez abb

U

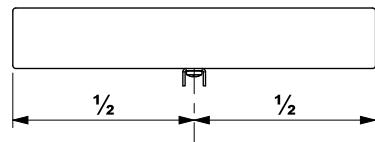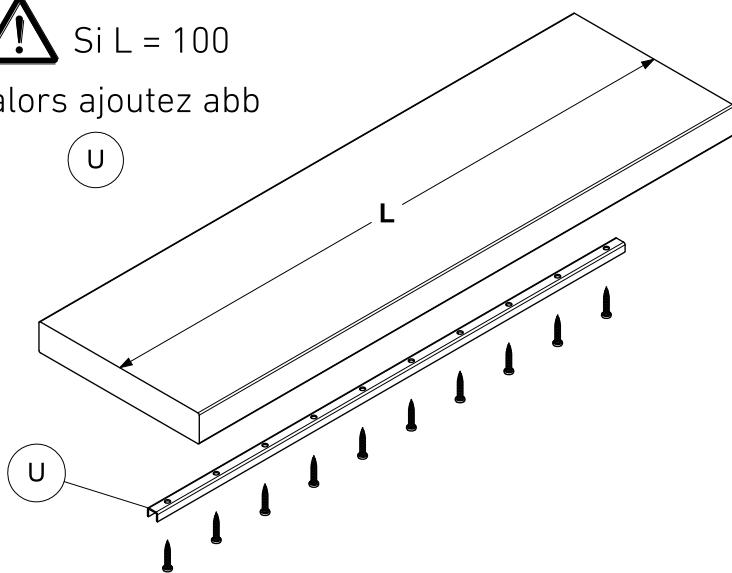


68030KIT 3 Rampe d'escalier
pour 6 marches


14

x 6
K2-41050

15

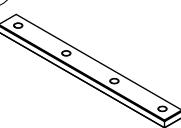x 1
K1-01221

16

x 6
K1-02130

17

x 2
K2-04040


18

 $\phi 22\text{mm}$

1010mm

x 6
K1-41055

19

 $\phi 40\text{mm}$

2000mm

x 1
K1-01100

46

x 6
K3-01004
 $M4 \times 25$


47

x 6
K3-03004
 $M4$

48

x 12
K3-05006
 $M6 \times 8$

53


x 4
K3-05050
 $M5 \times 12$ **68040**

Rampe d'escalier Kits 4 du système Prova : Kits de base pour respectivement 4 marches


17

x 2
K2-04040

20

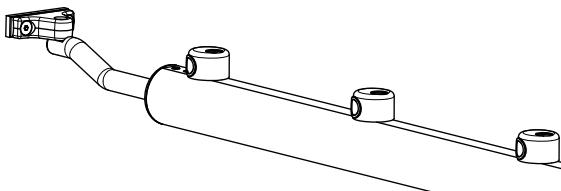

21

x 2
K1-41090

22

x 4
K1-01160x 2
K2-41090

26

 $\phi 40\text{mm}$ x 1
K1-01107

1240mm

27

 $\phi 10\text{mm}$ x 5
K1-18060

1240mm


28

x 10
K1-01010

29













x 1
K2-14930



51




x 4
K3-02010
 $M10 \times 70$ 


68041

Rampe d'escalier Kits 5 du système Prova : Kits de d'extension pour respectivement 4 marches

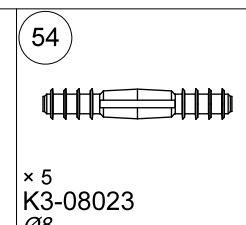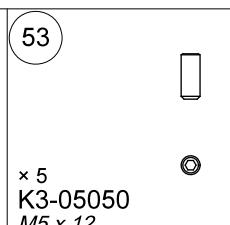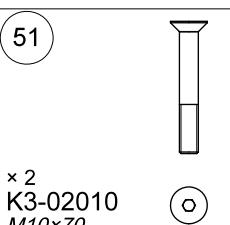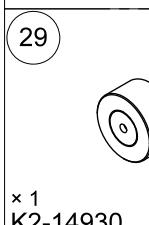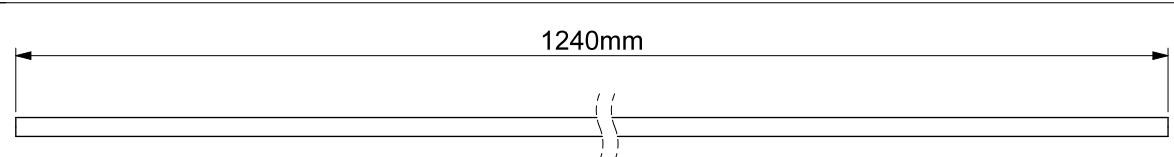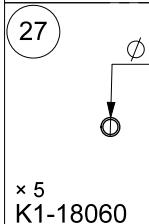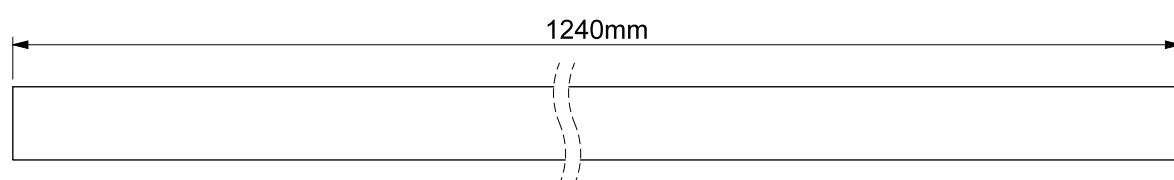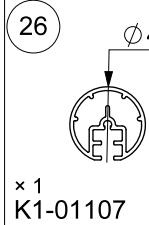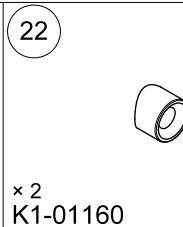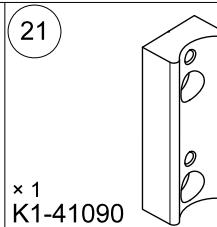
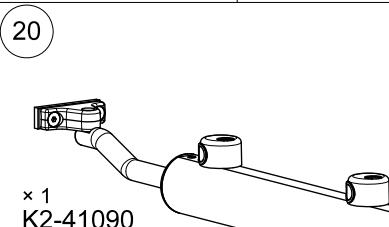
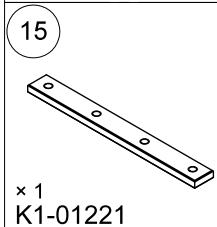


68098		Soutien	OPTION		
24		26  x 1 K1-41955	27  x 1 K1-41956	41  x 1 K3-04110 Ø10	43  x 1 K3-03051 M10
		53  x 2 K3-05007 M5 x 5	54  x 1 K3-08002 Ø8 x 40	55  x 1 K3-06032 Ø6 x 60	52  x 1 K3-02375 M10 x 75

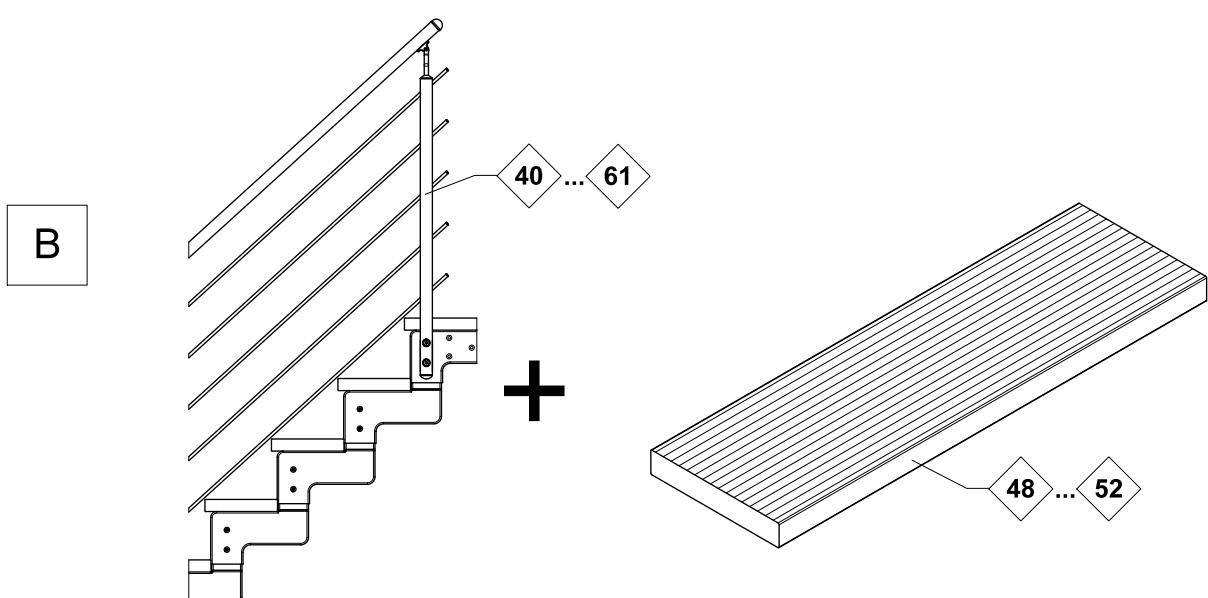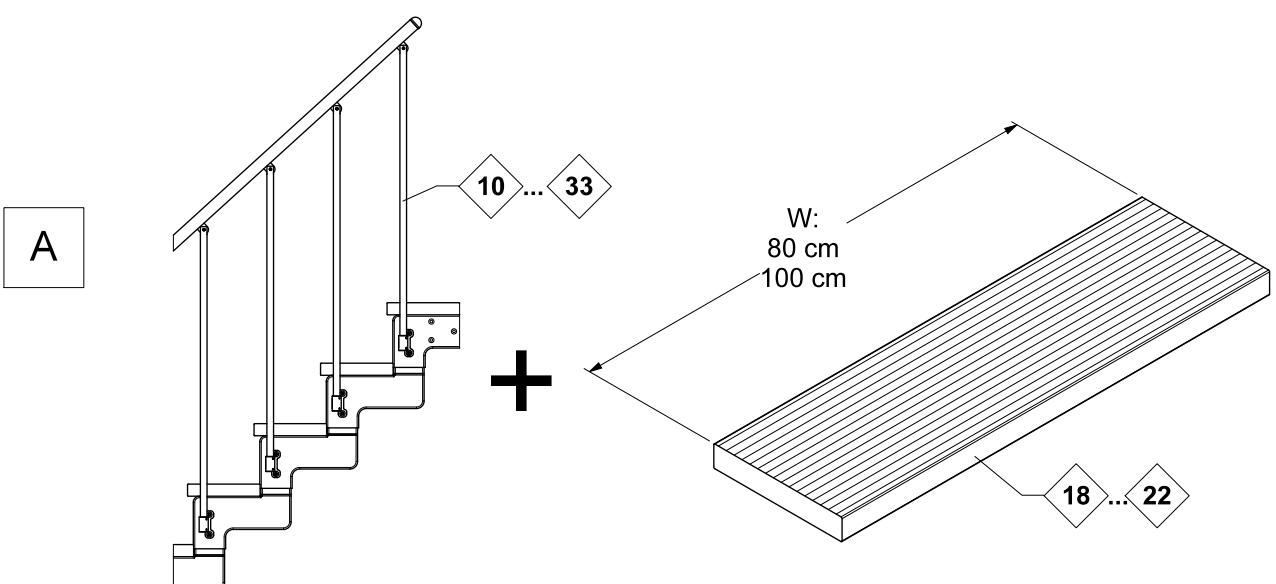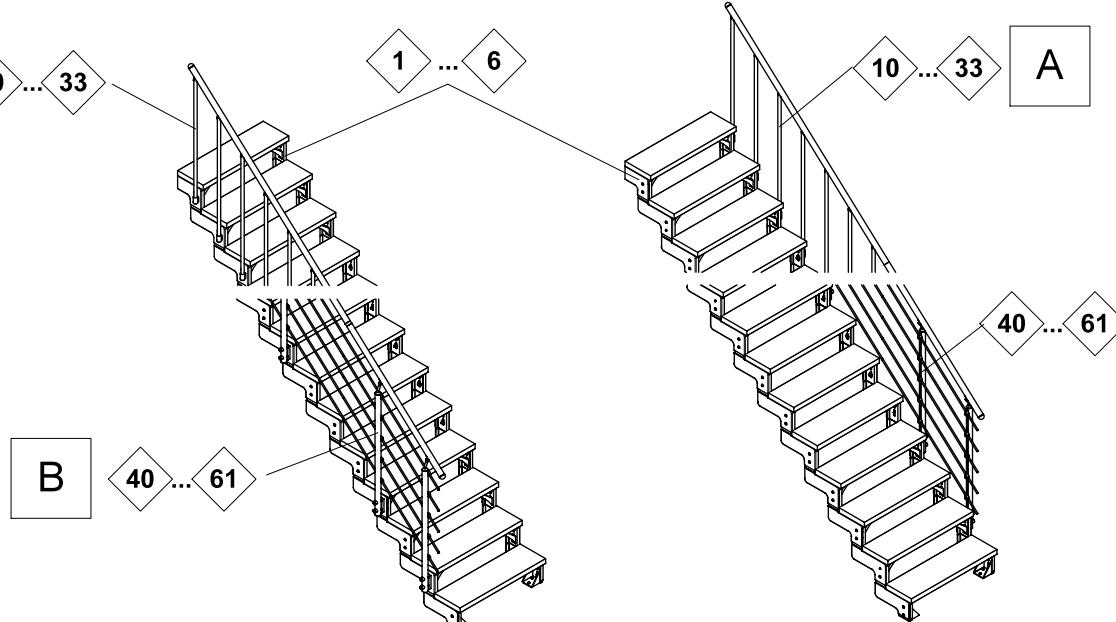



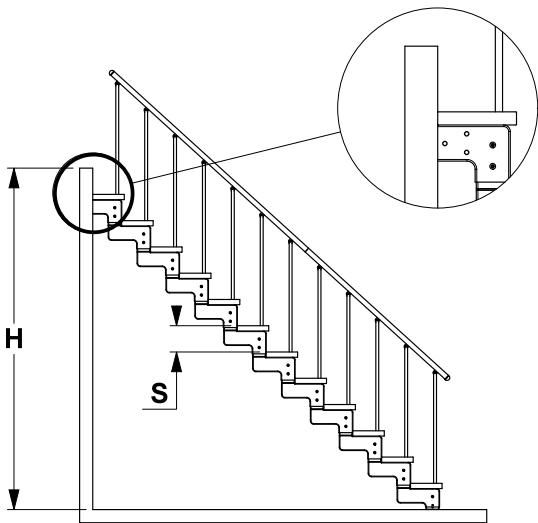









H	S				
	180 mm	190 mm	200 mm	210 mm	220 mm
2	540	570	600	630	660
3	720	760	800	840	880
4	900	950	1000	1050	1100
5	1080	1140	1200	1260	1320
6	1260	1330	1400	1470	1540
7	1440	1520	1600	1680	1760
8	1620	1710	1800	1890	1980
9	1800	1900	2000	2100	2200
10	1980	2090	2200	2310	2420
11	2160	2280	2400	2520	2640
12	2340	2470	2600	2730	2860

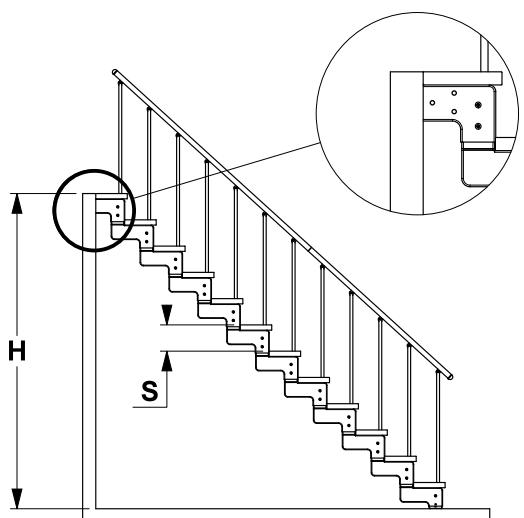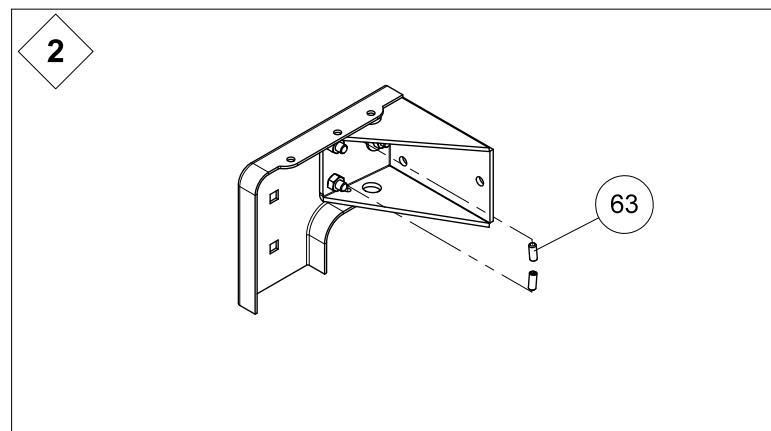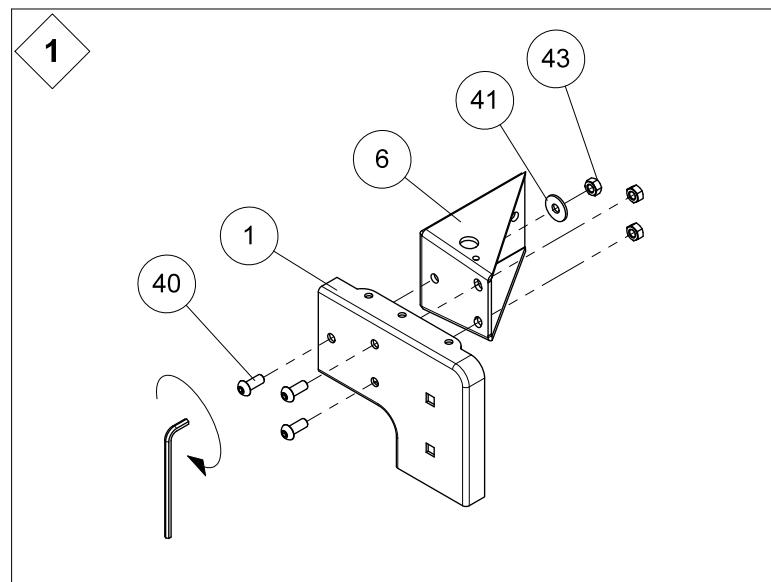

H	S				
	180 mm	190 mm	200 mm	210 mm	220 mm
2	360	380	400	420	440
3	540	570	600	630	660
4	720	760	800	840	880
5	900	950	1000	1050	1100
6	1080	1140	1200	1260	1320
7	1260	1330	1400	1470	1540
8	1440	1520	1600	1680	1760
9	1620	1710	1800	1890	1980
10	1800	1900	2000	2100	2200
11	1980	2090	2200	2310	2420
12	2160	2280	2400	2520	2640


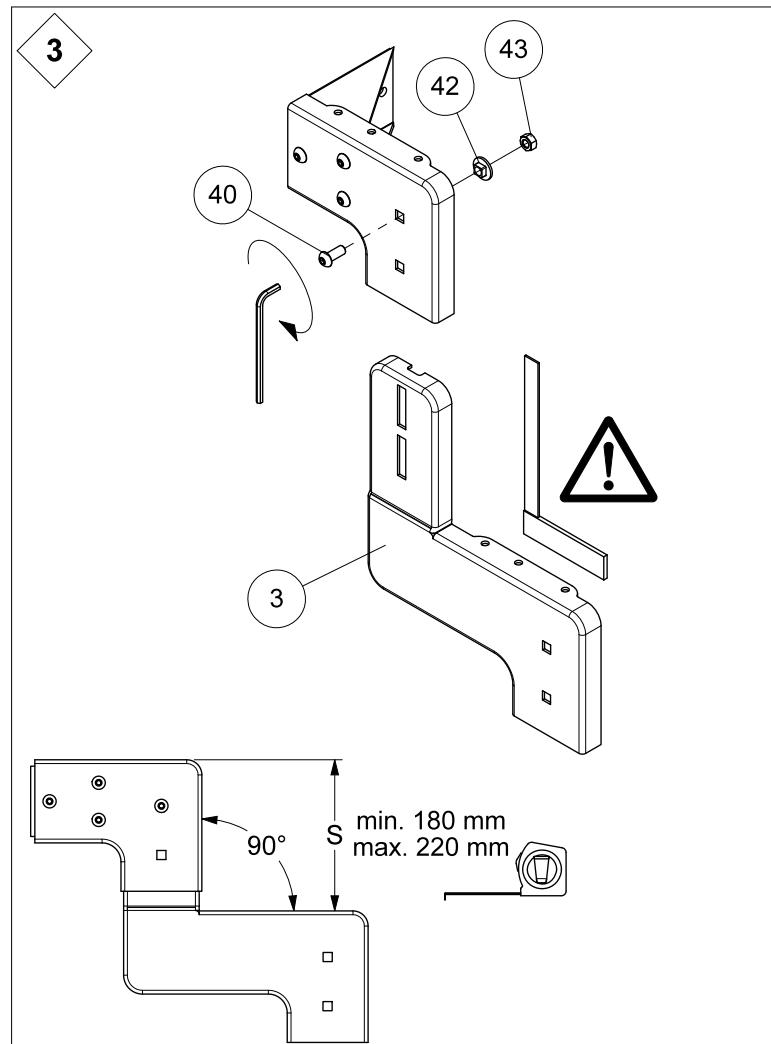


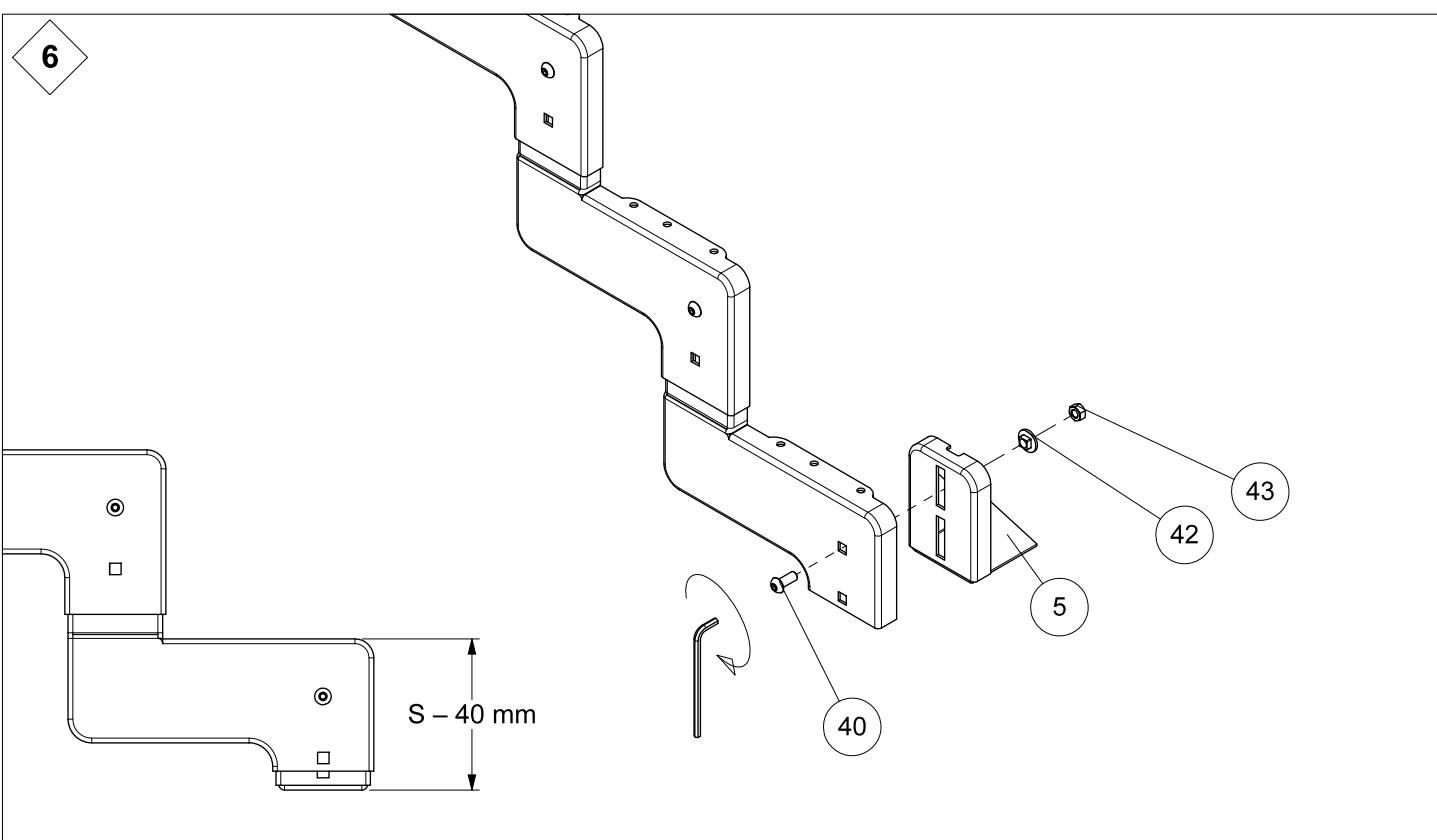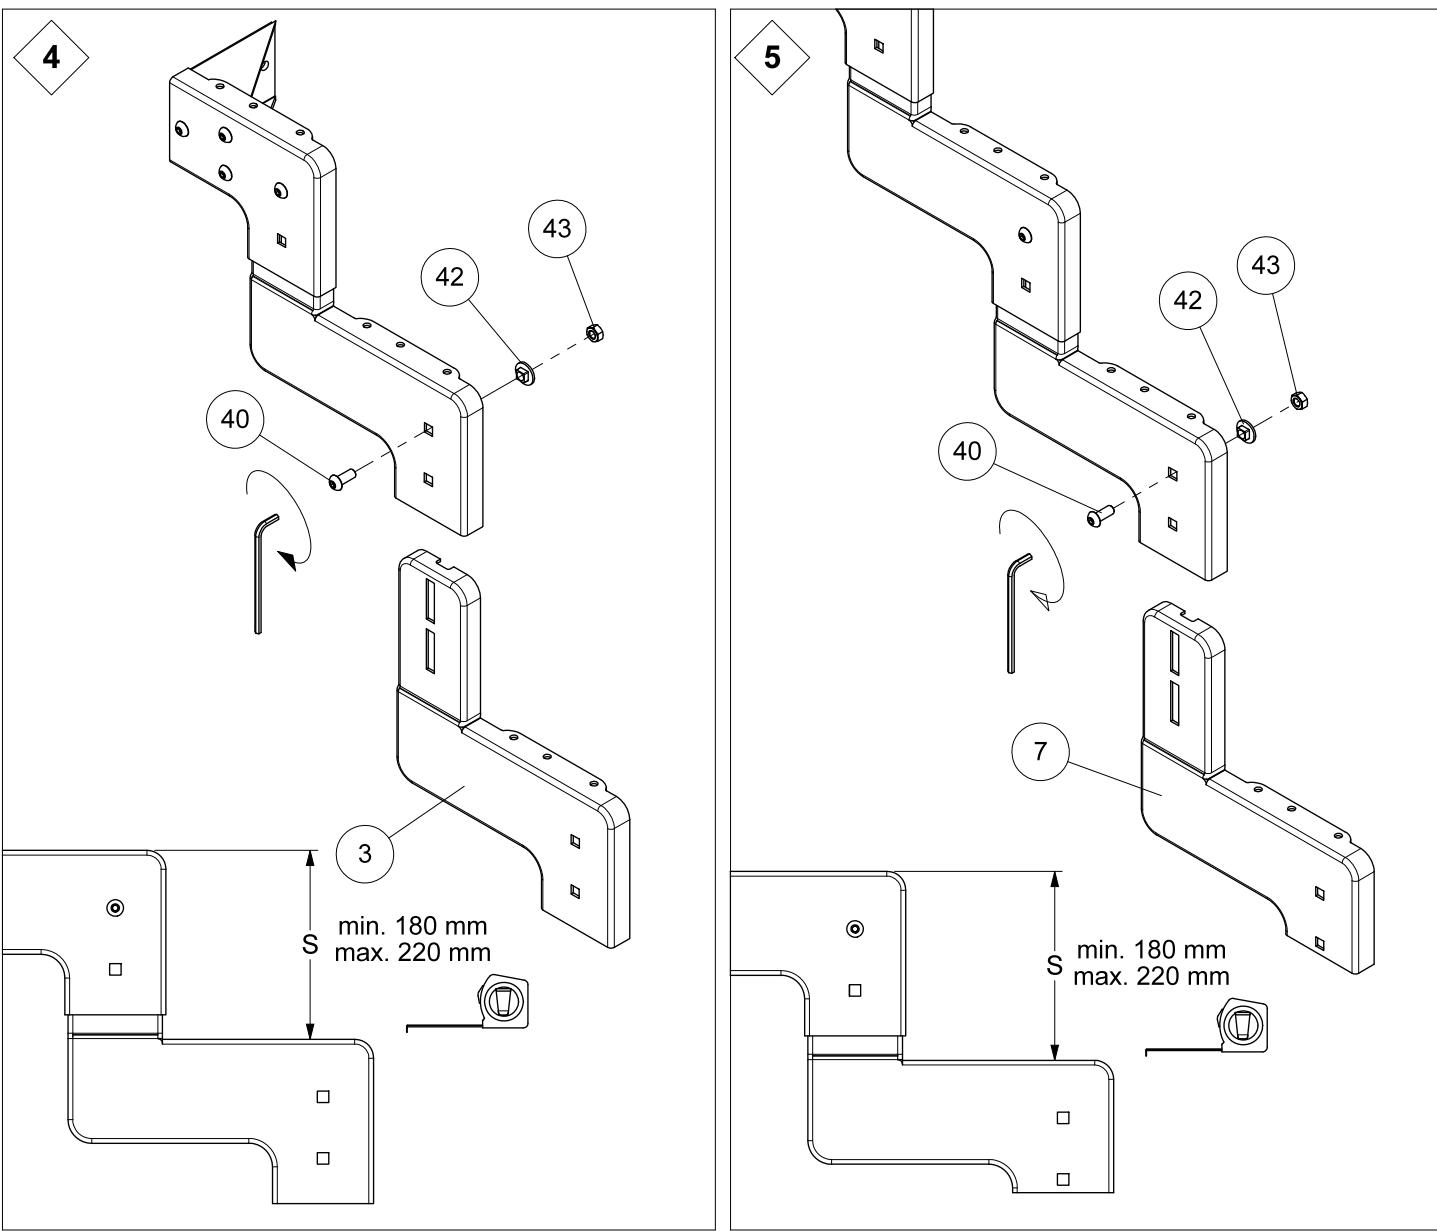

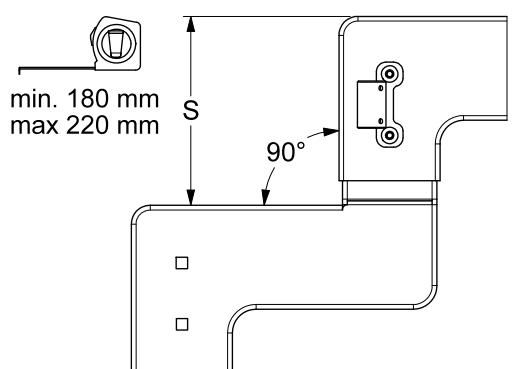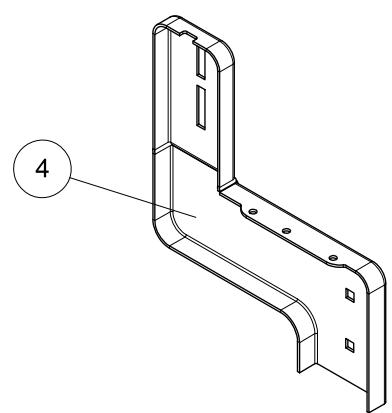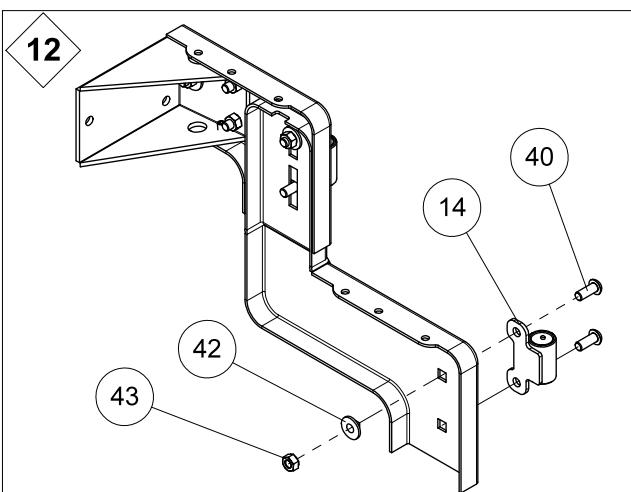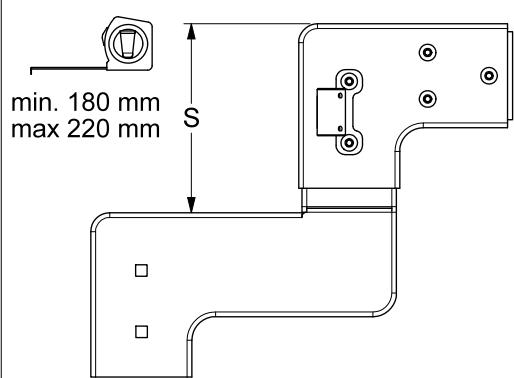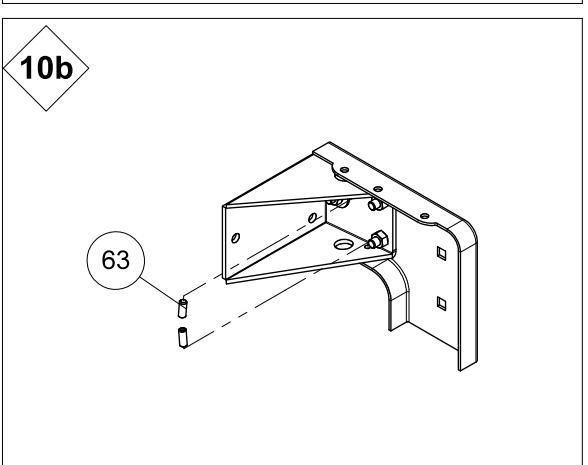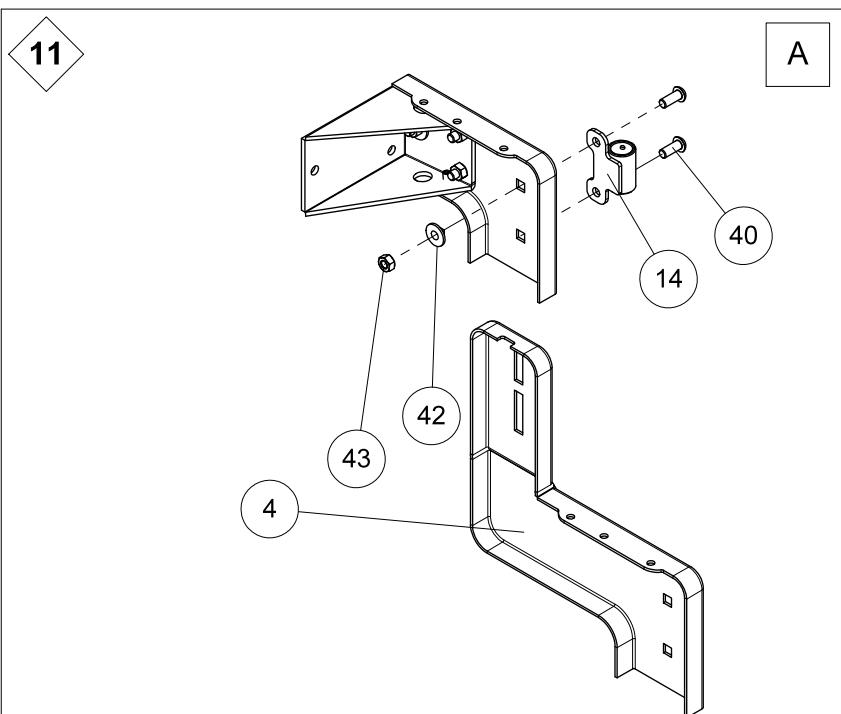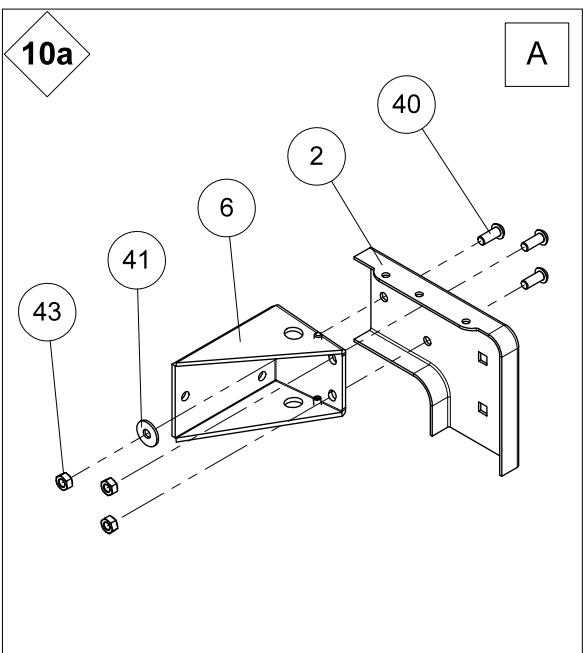



13

A

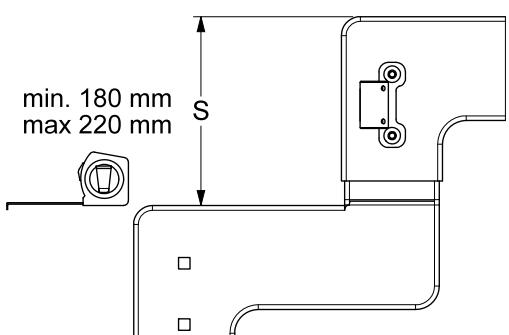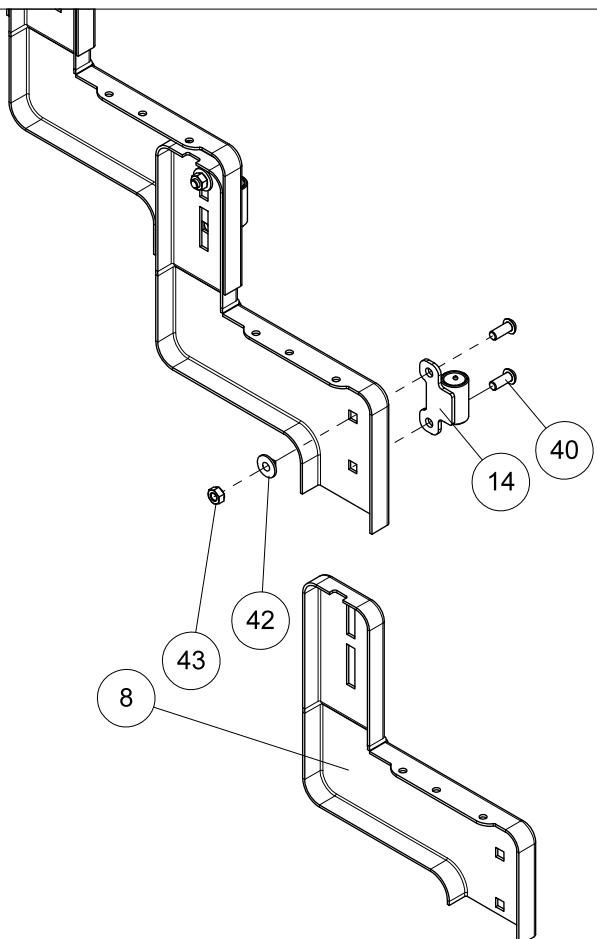


14


A

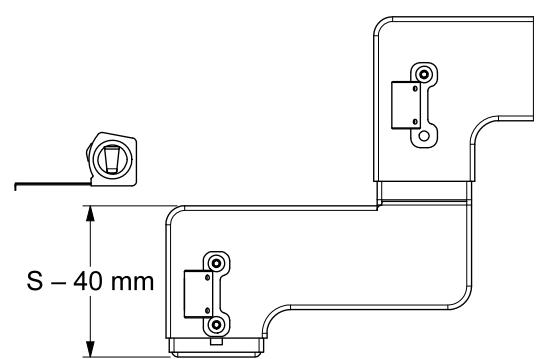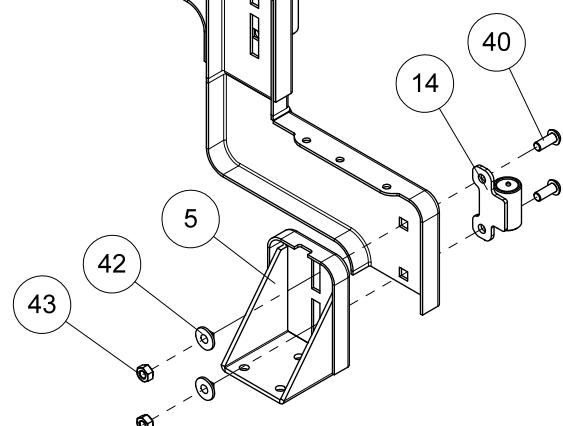

15


A



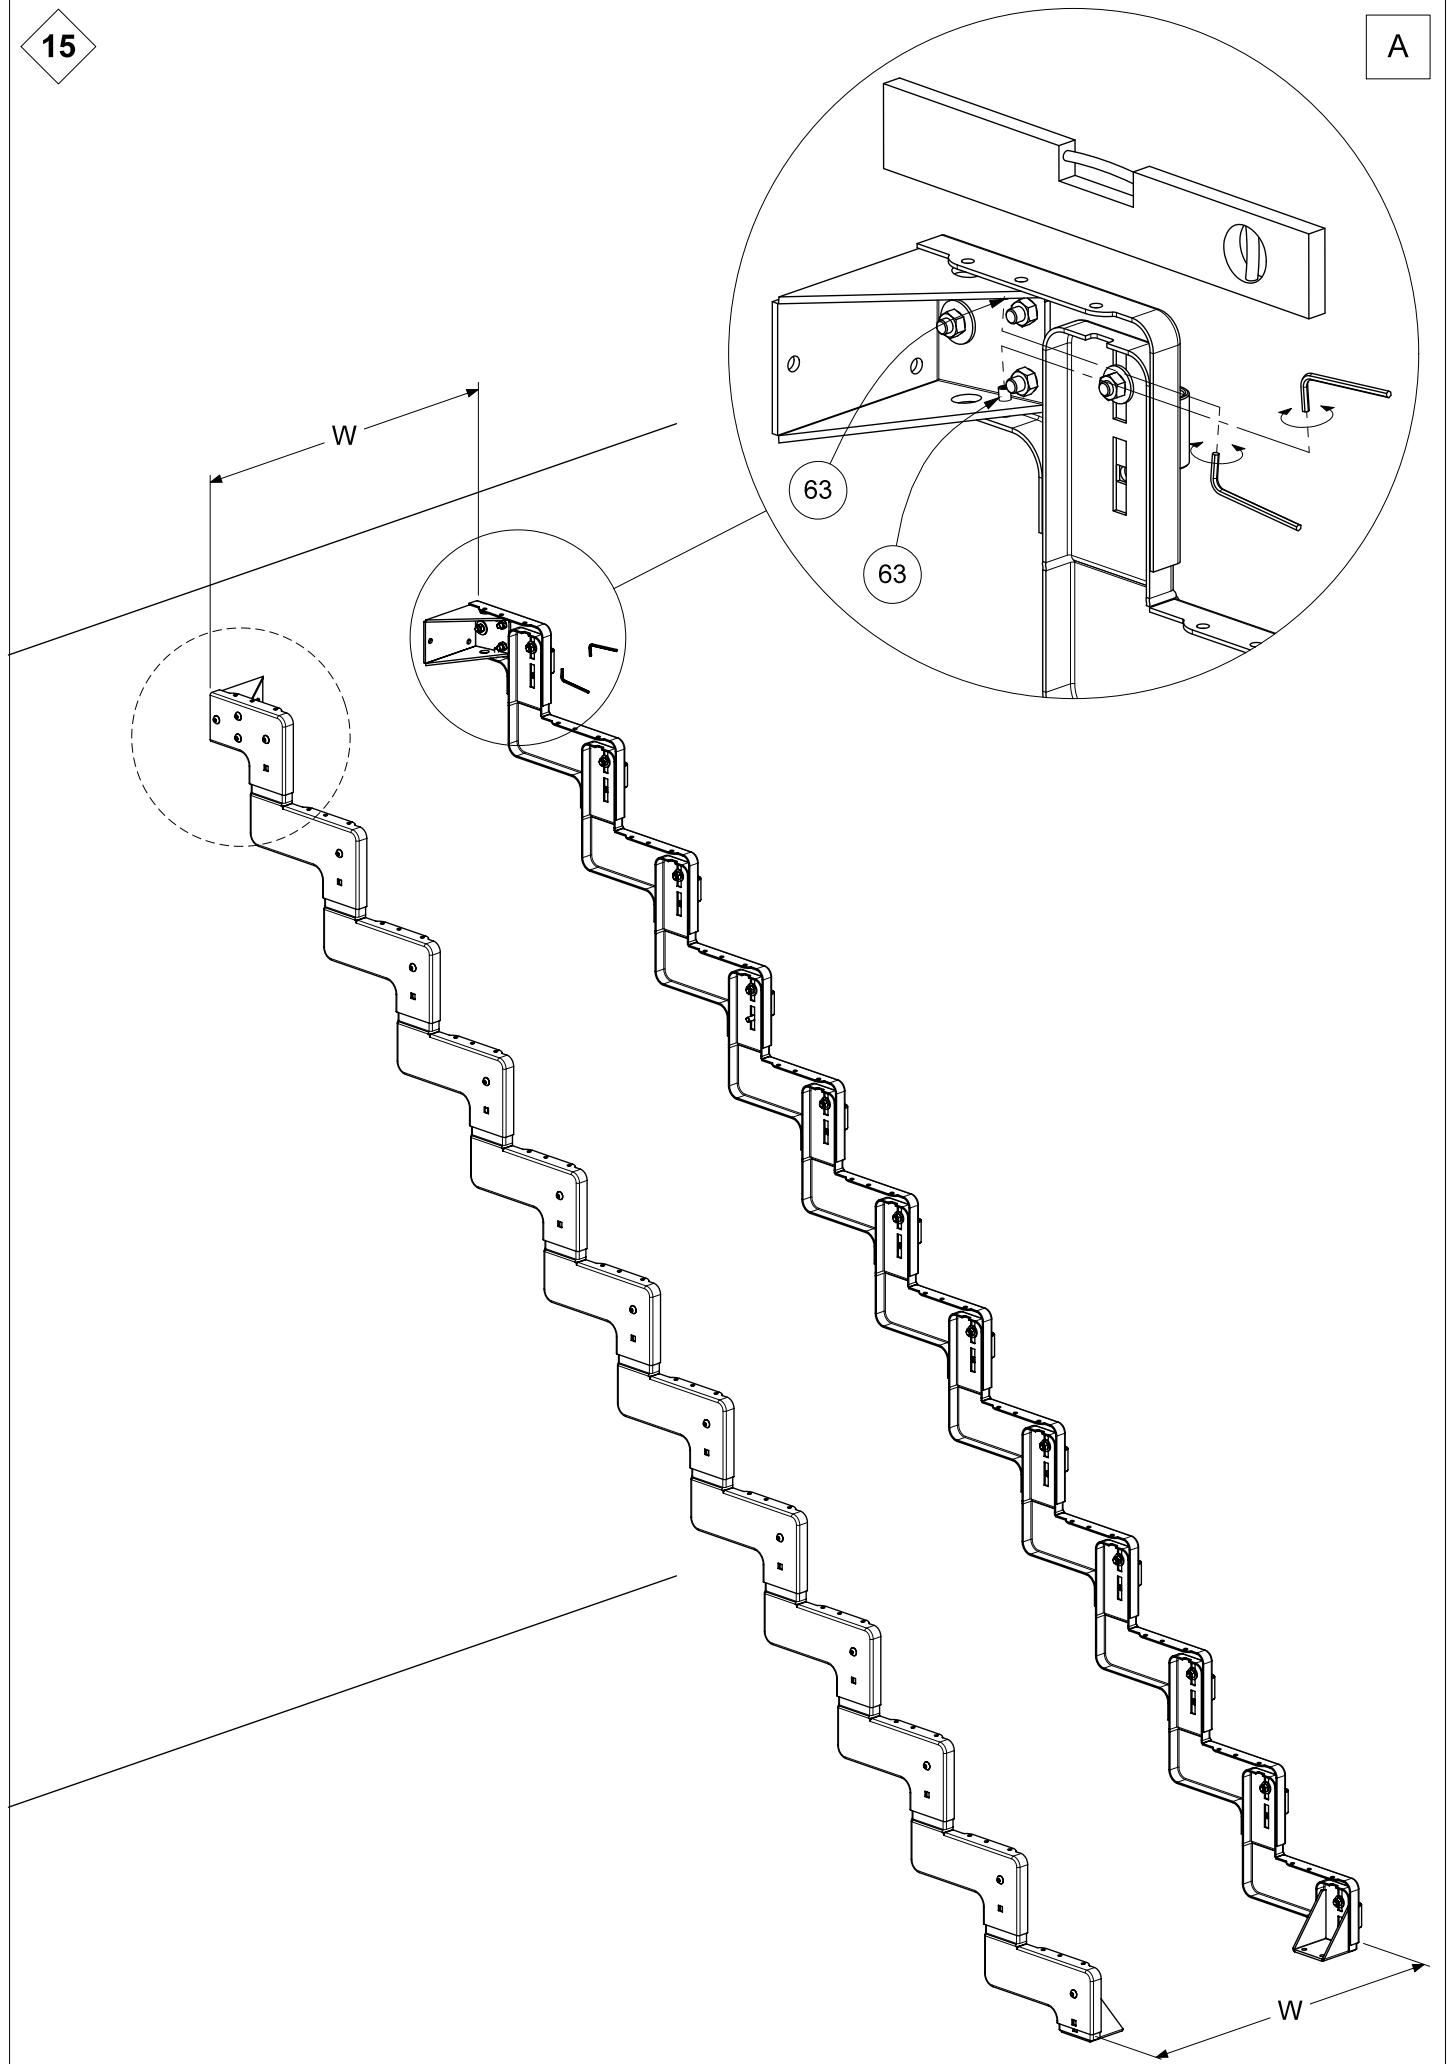


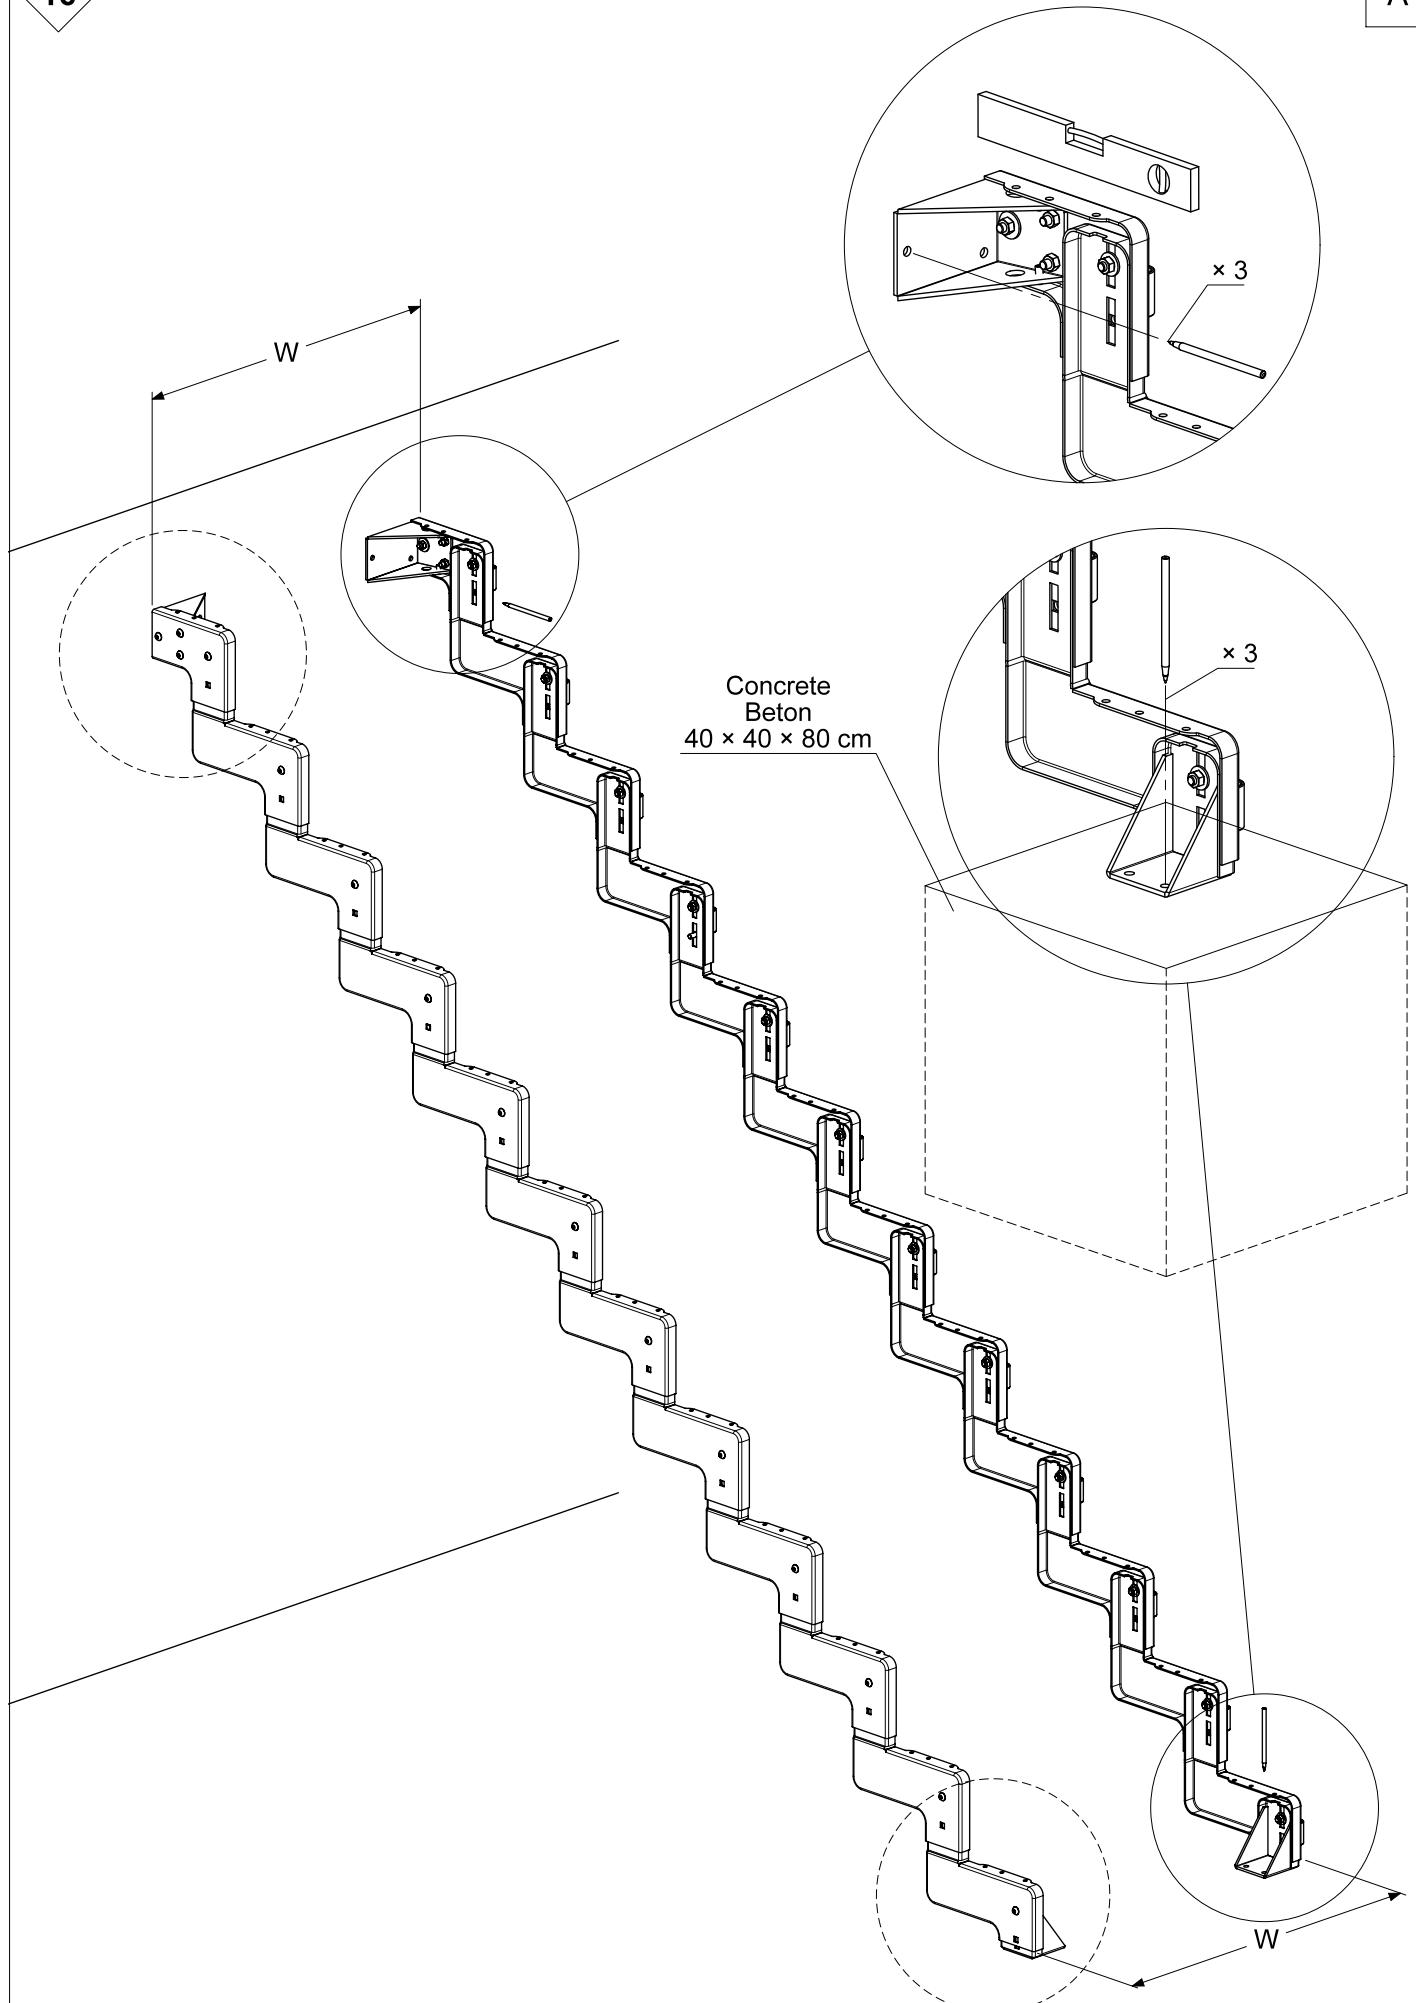

17


A

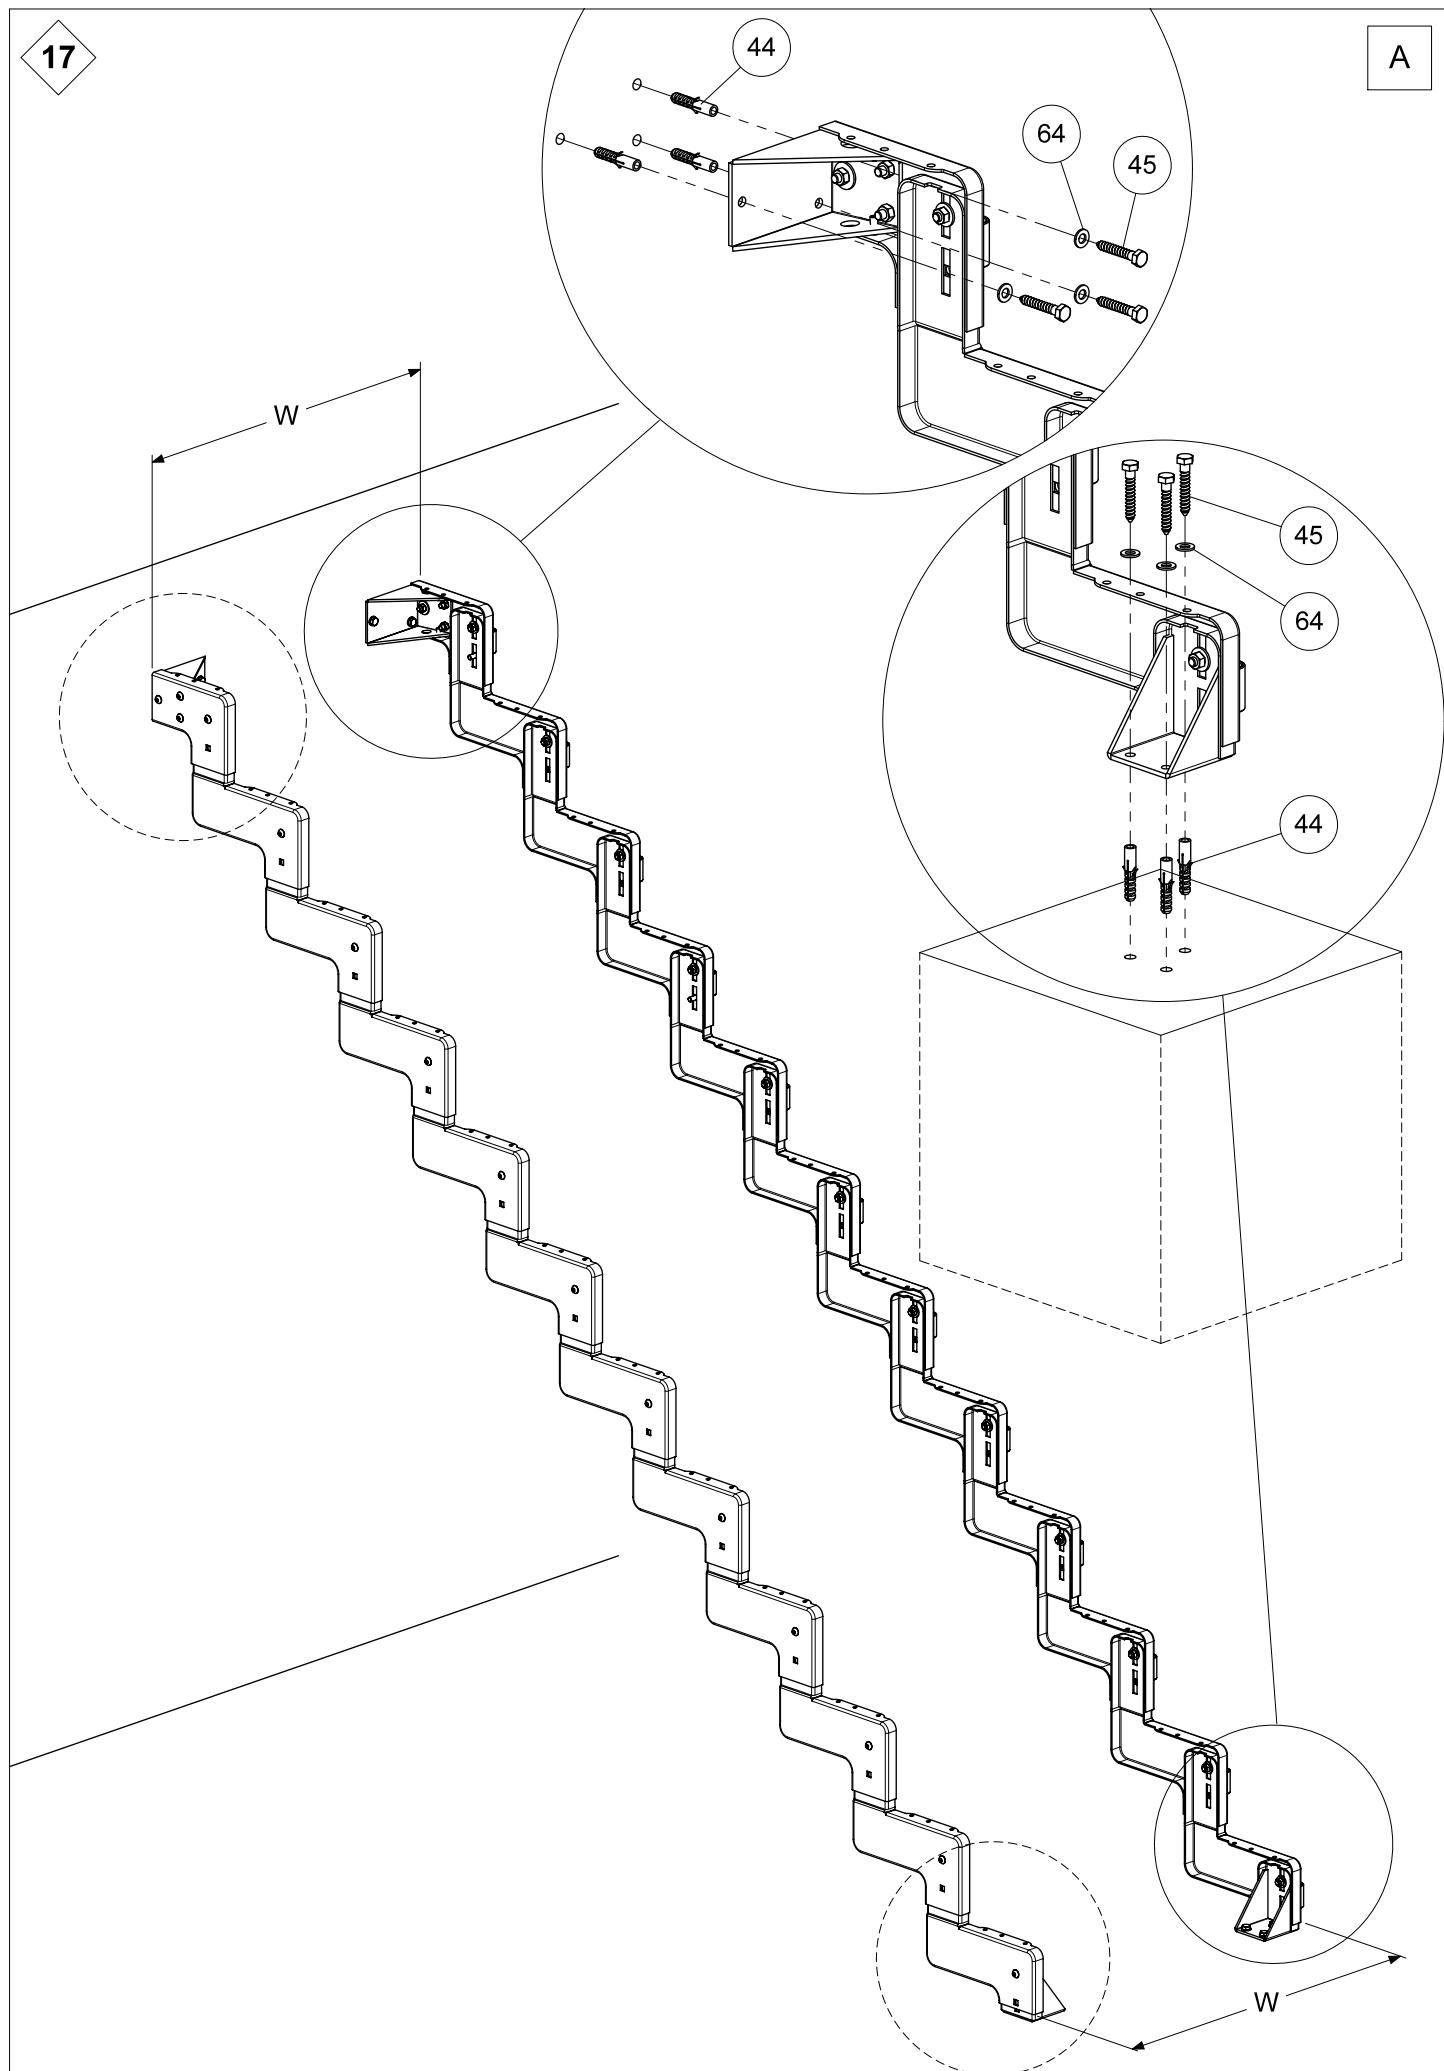

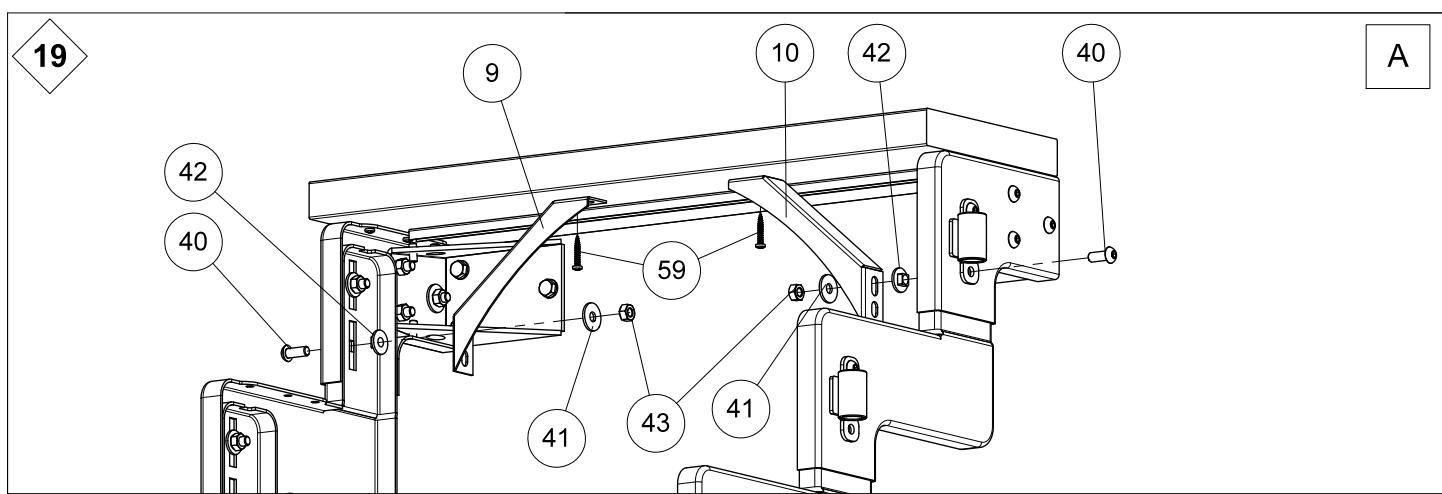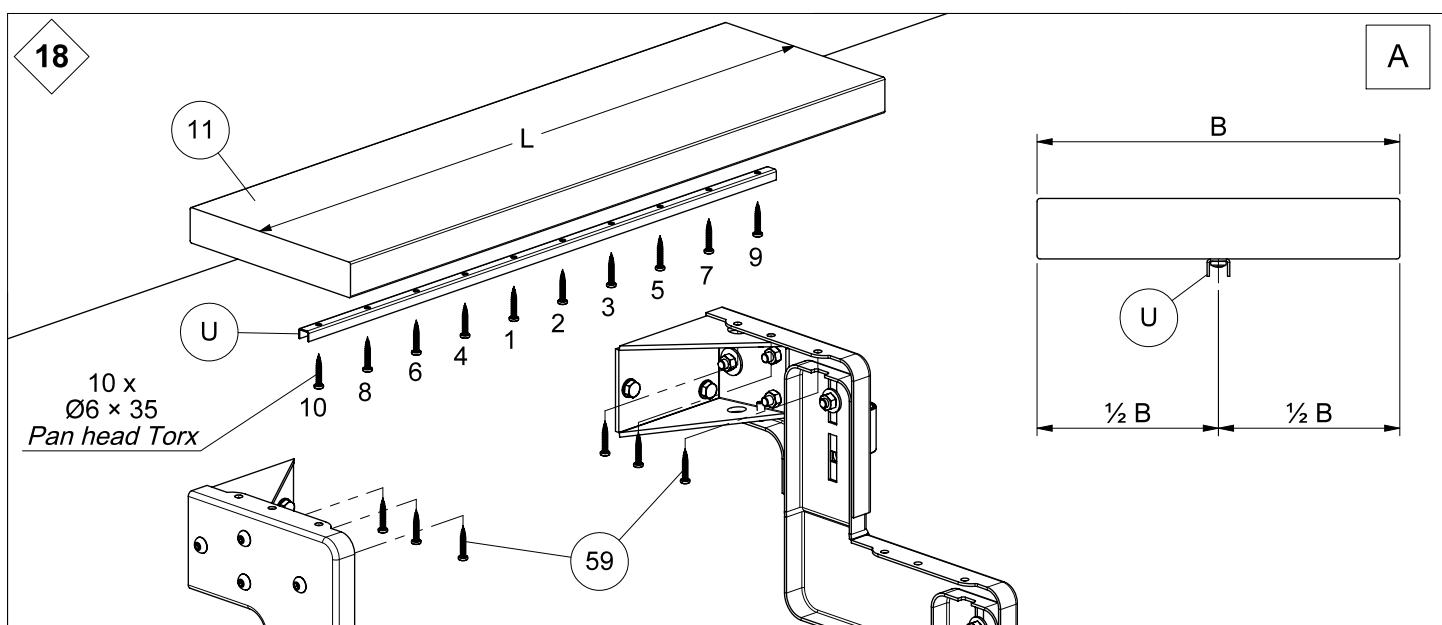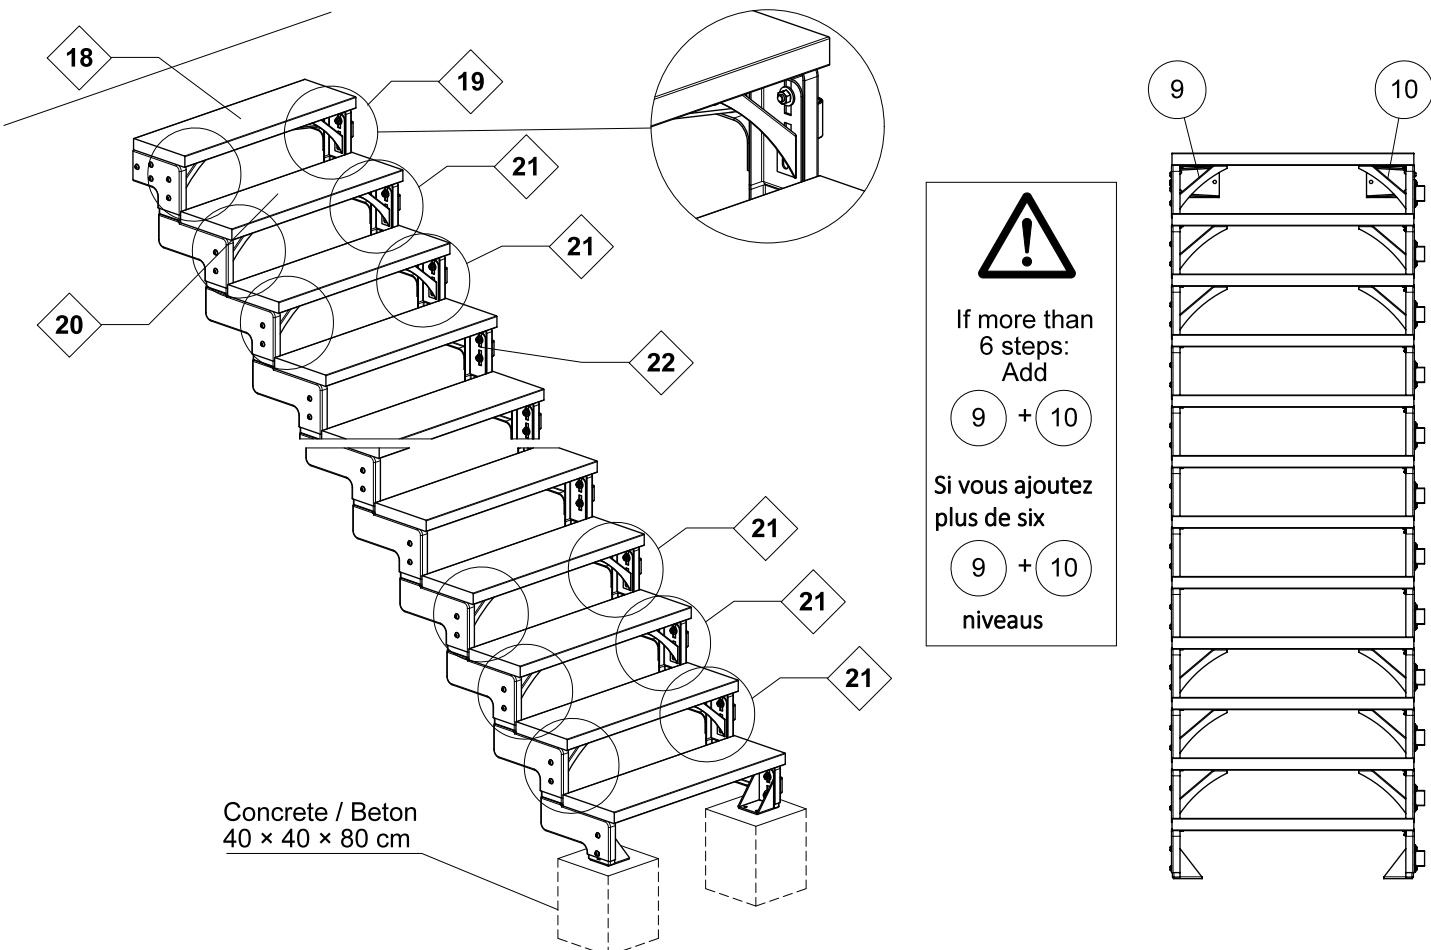


20

A

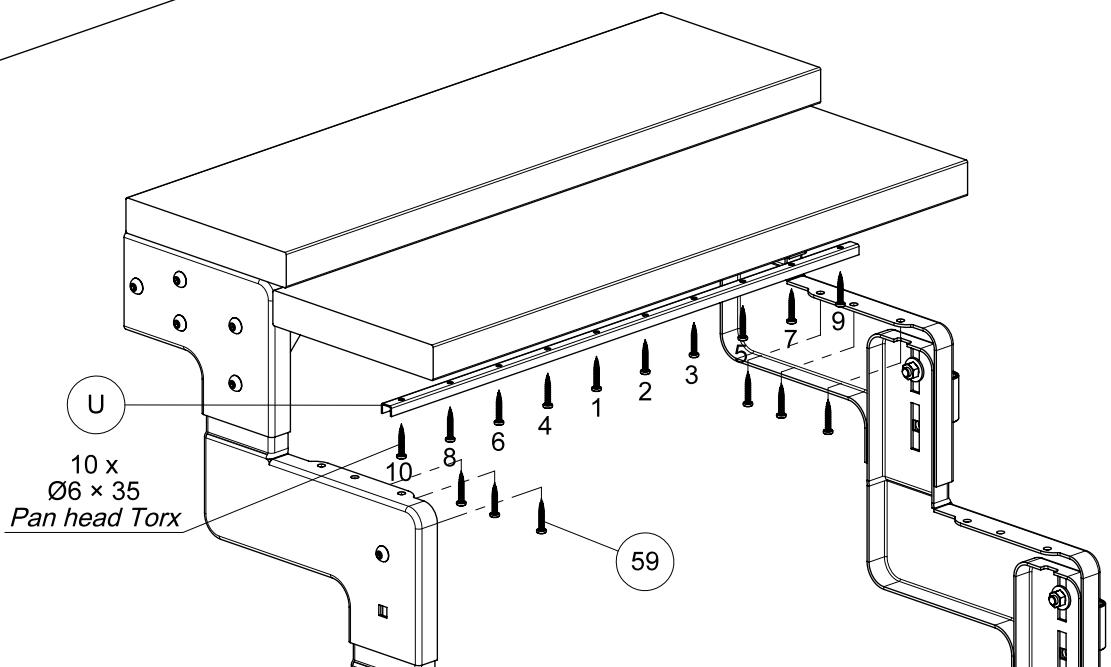


21




A




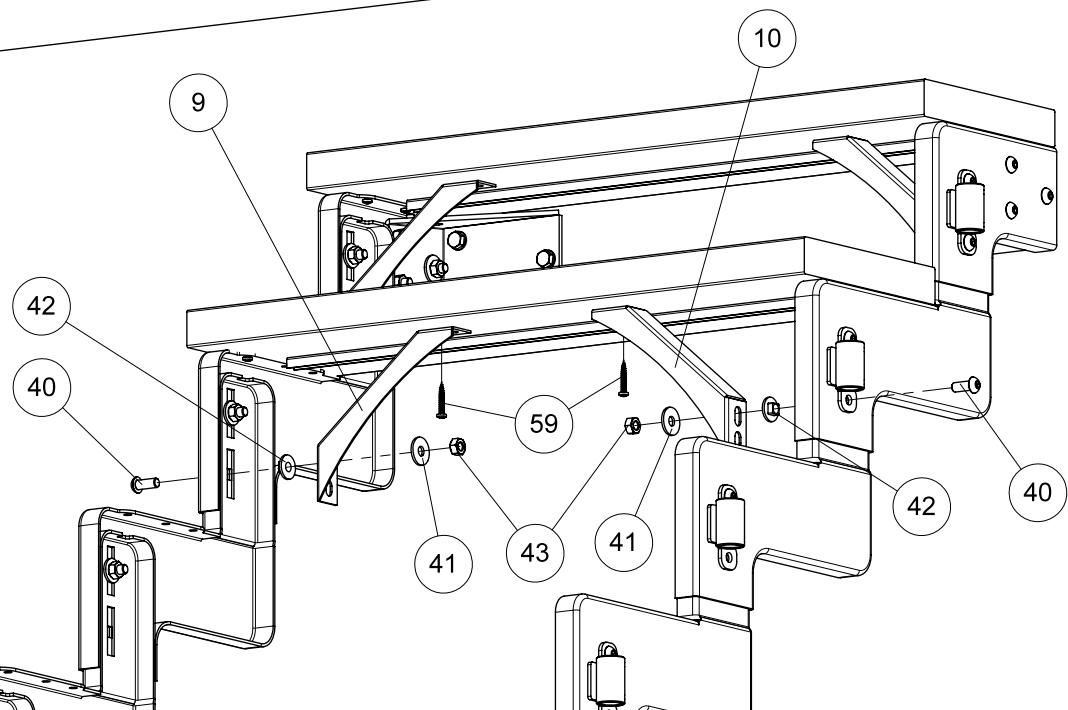








22





A

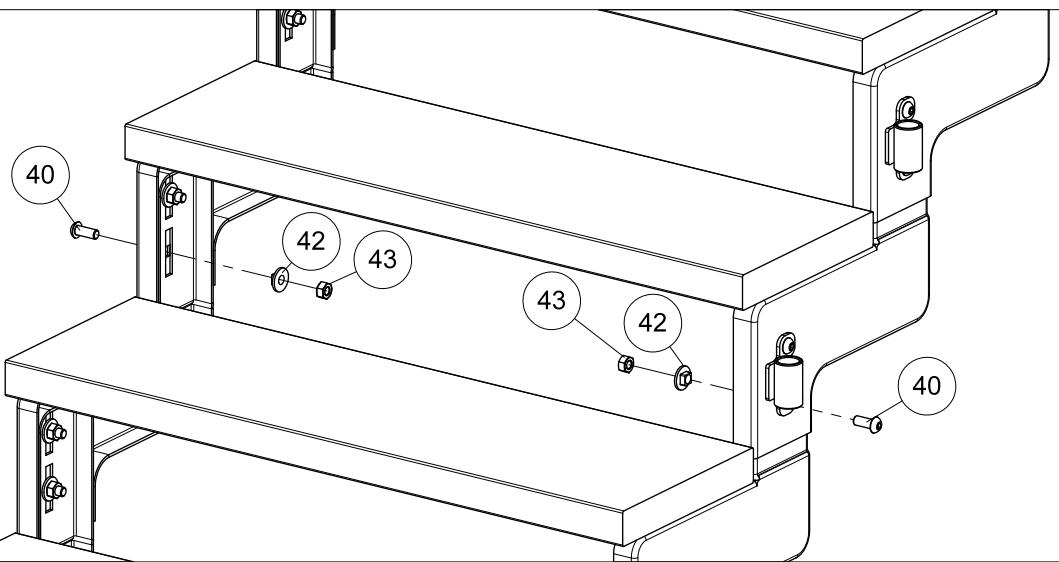

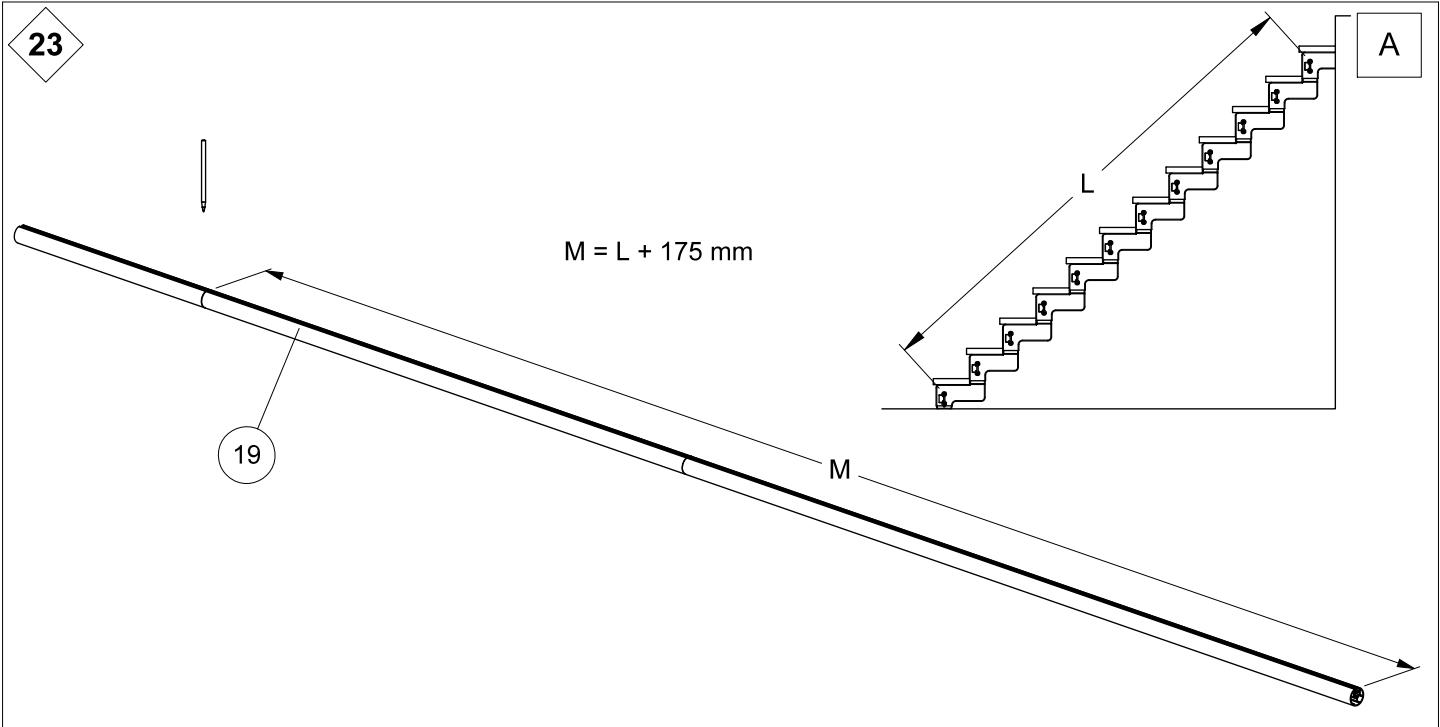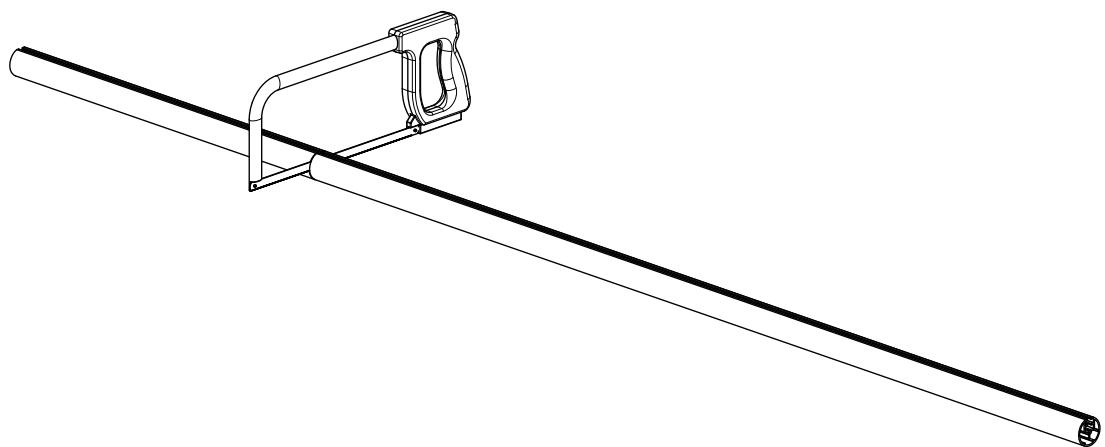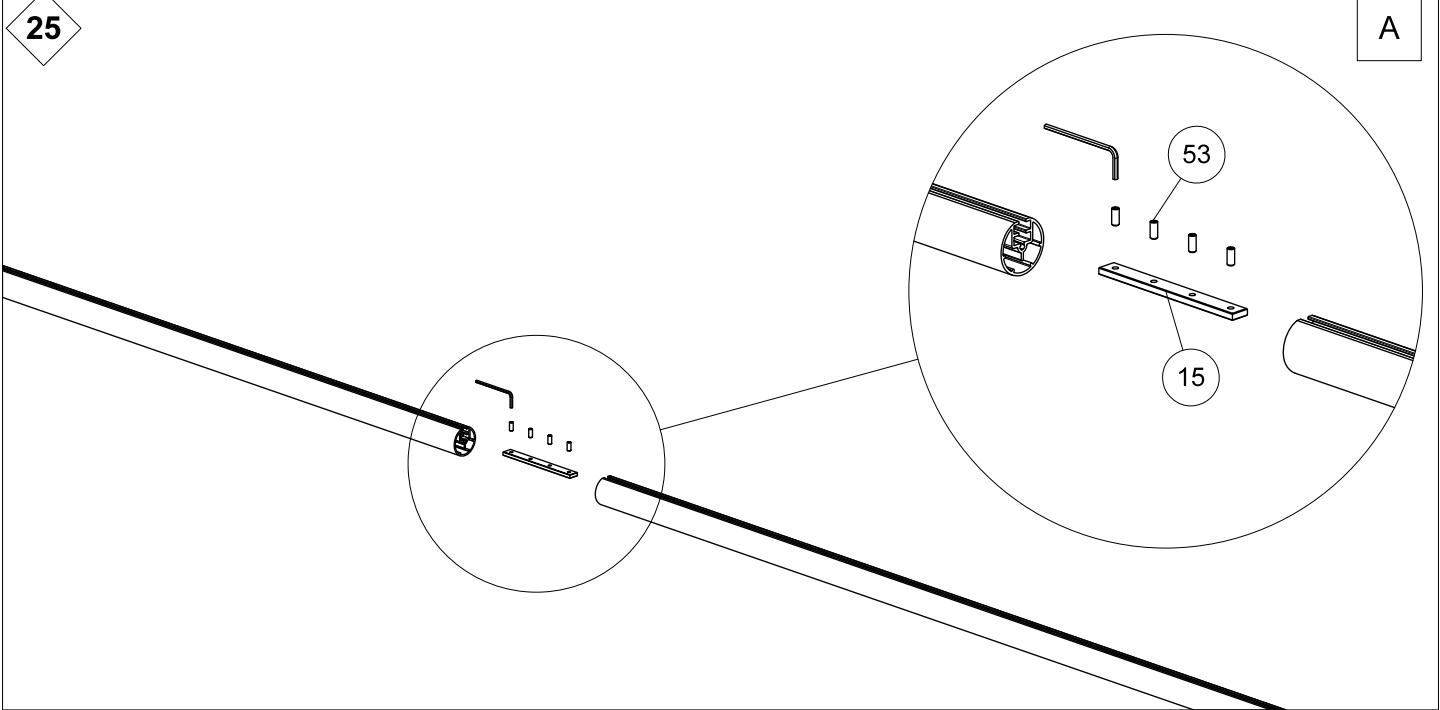23**A****24****A****25****A**

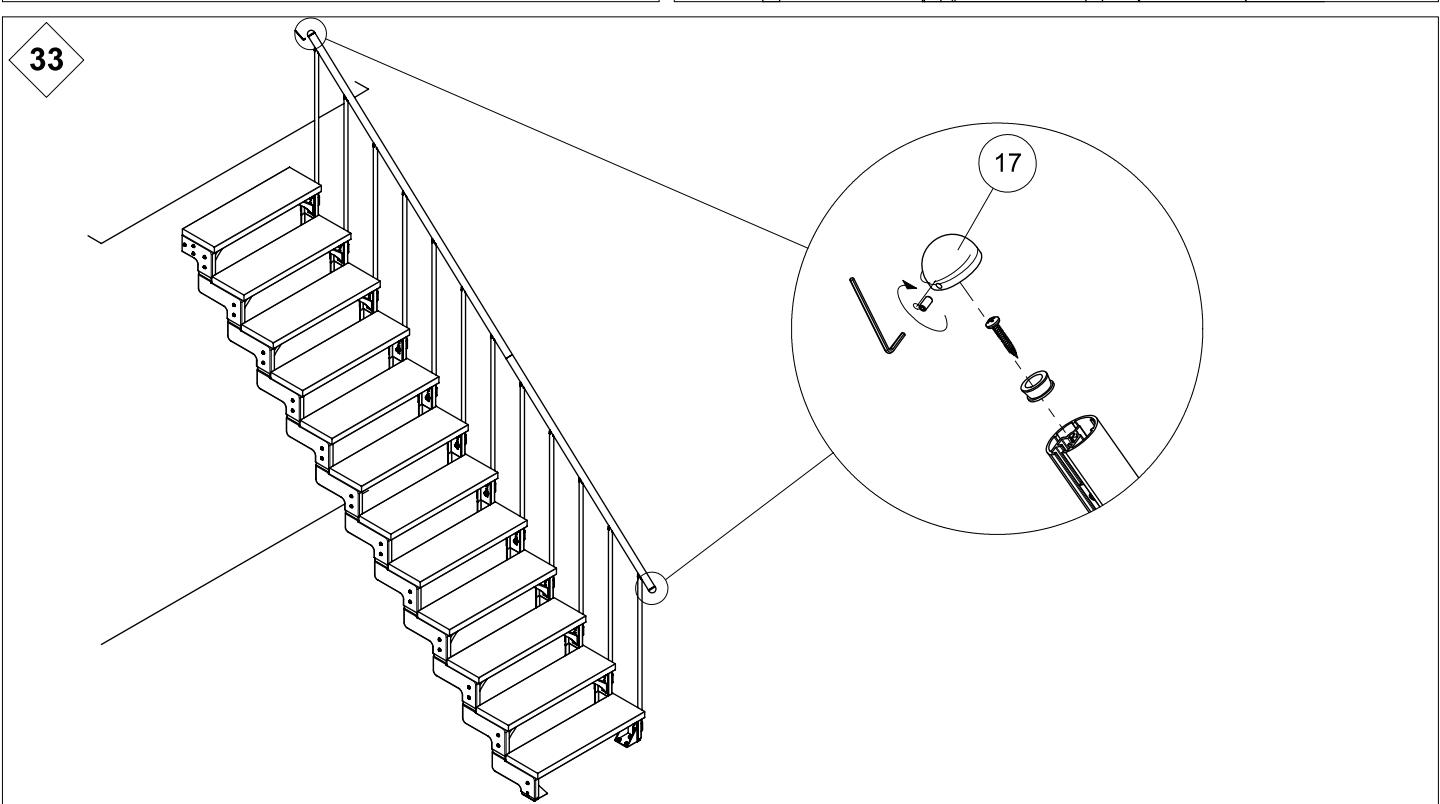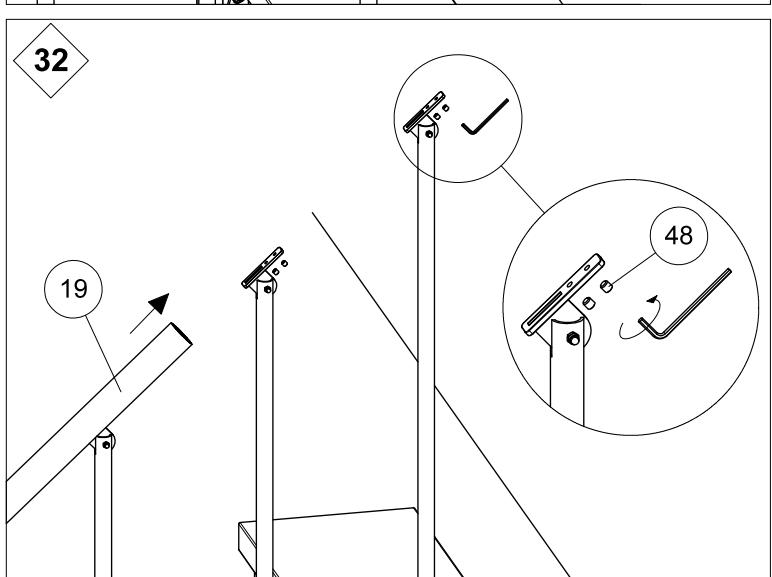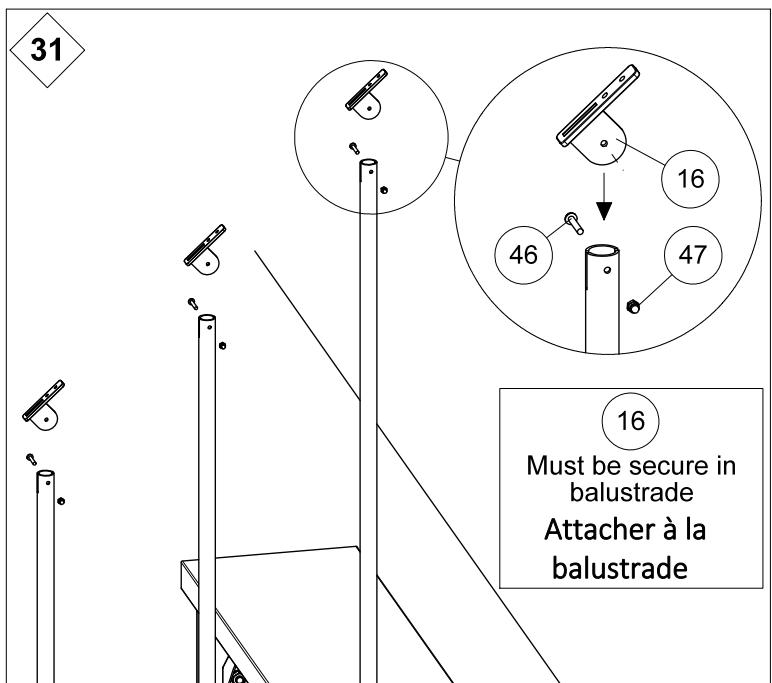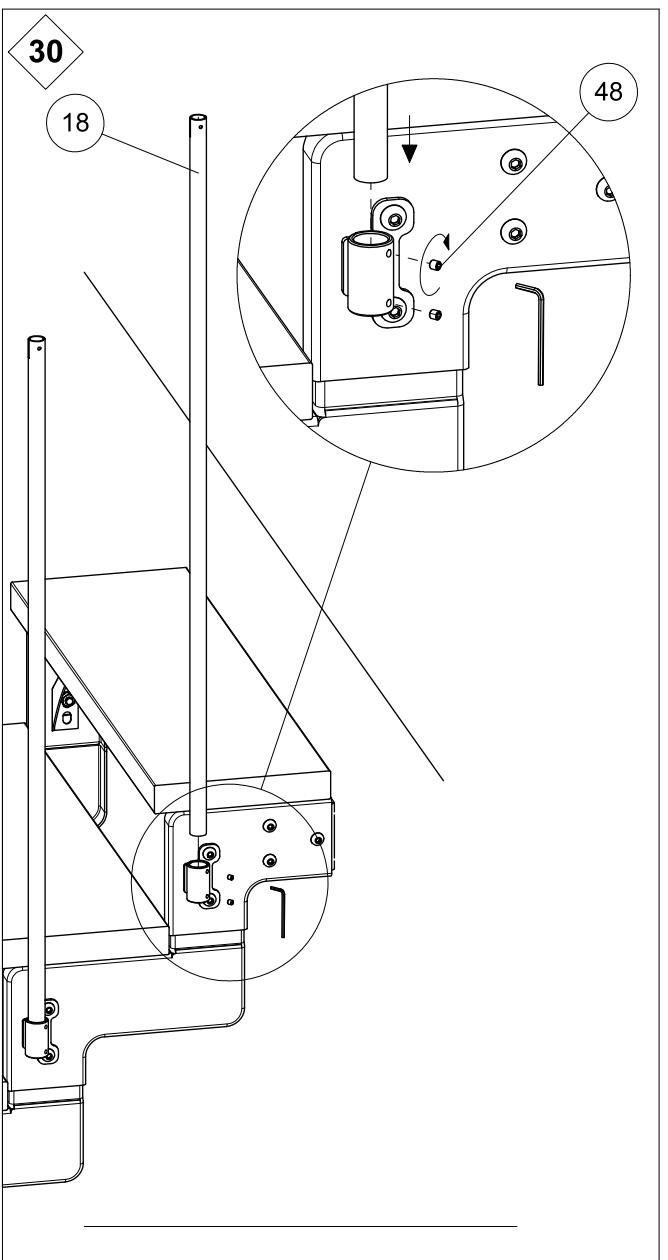


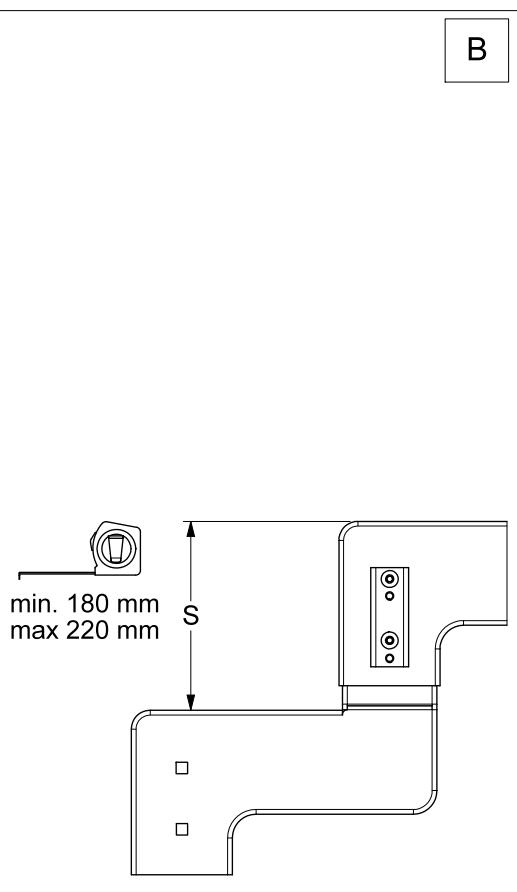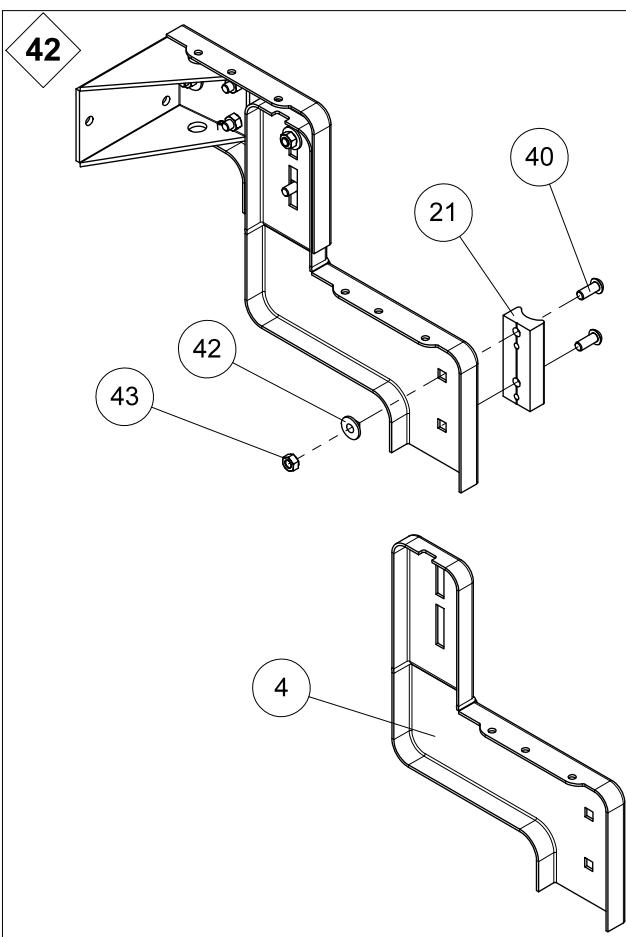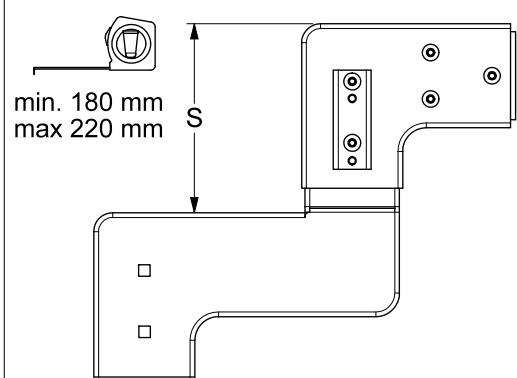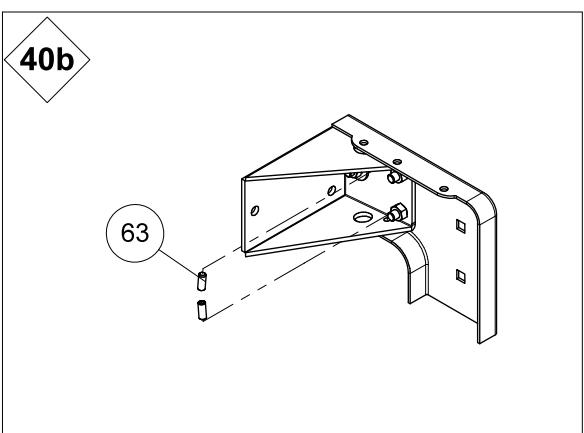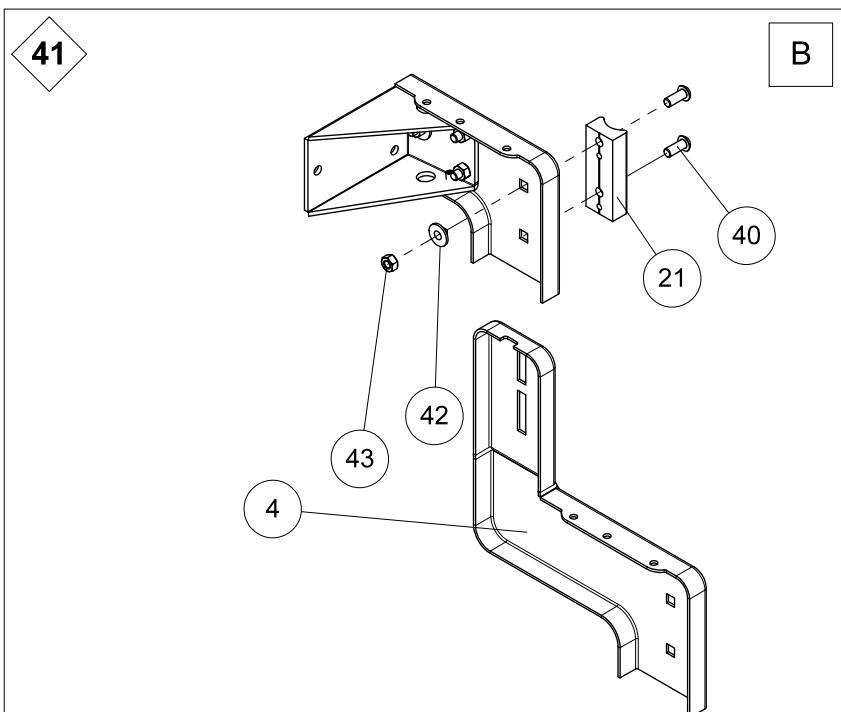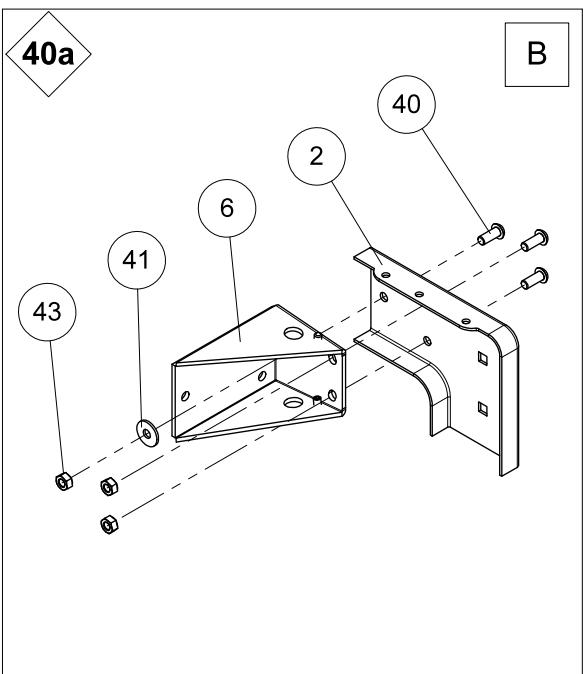


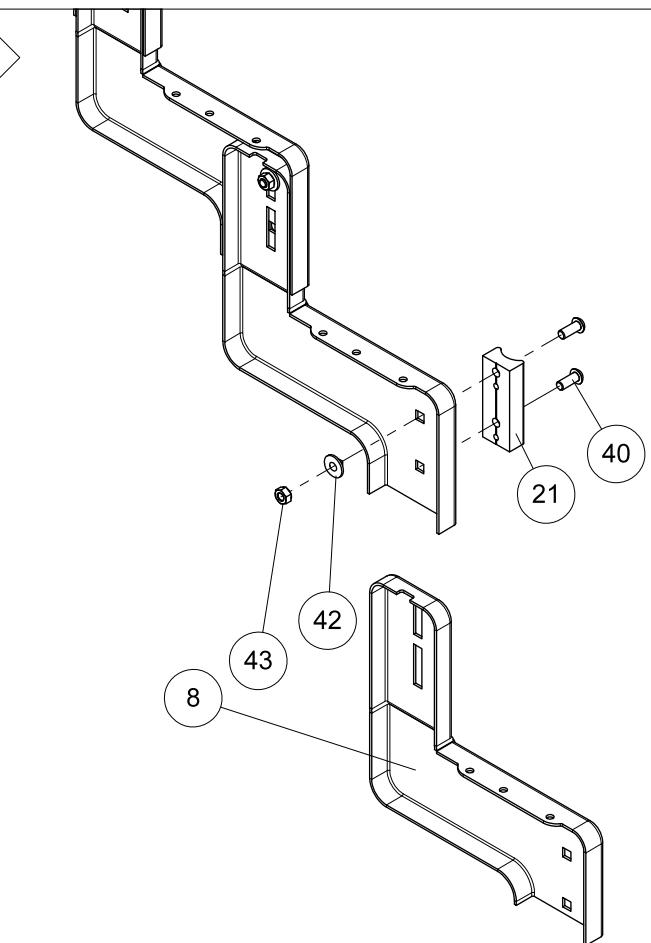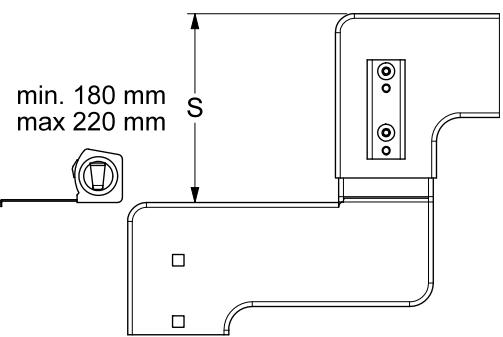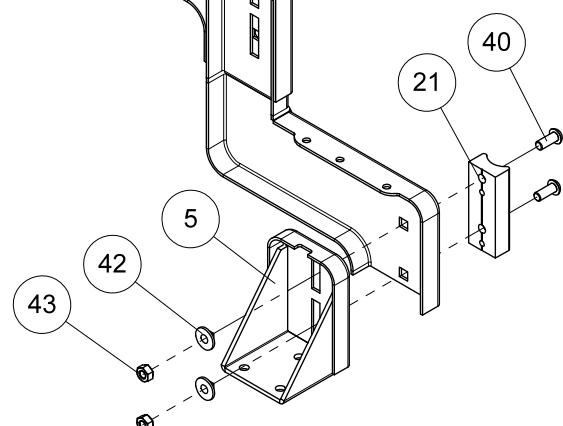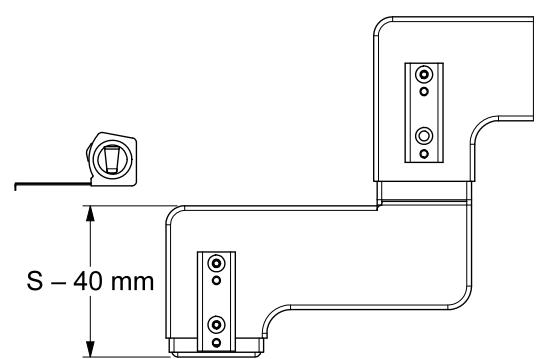43**B****44****B**

45


B



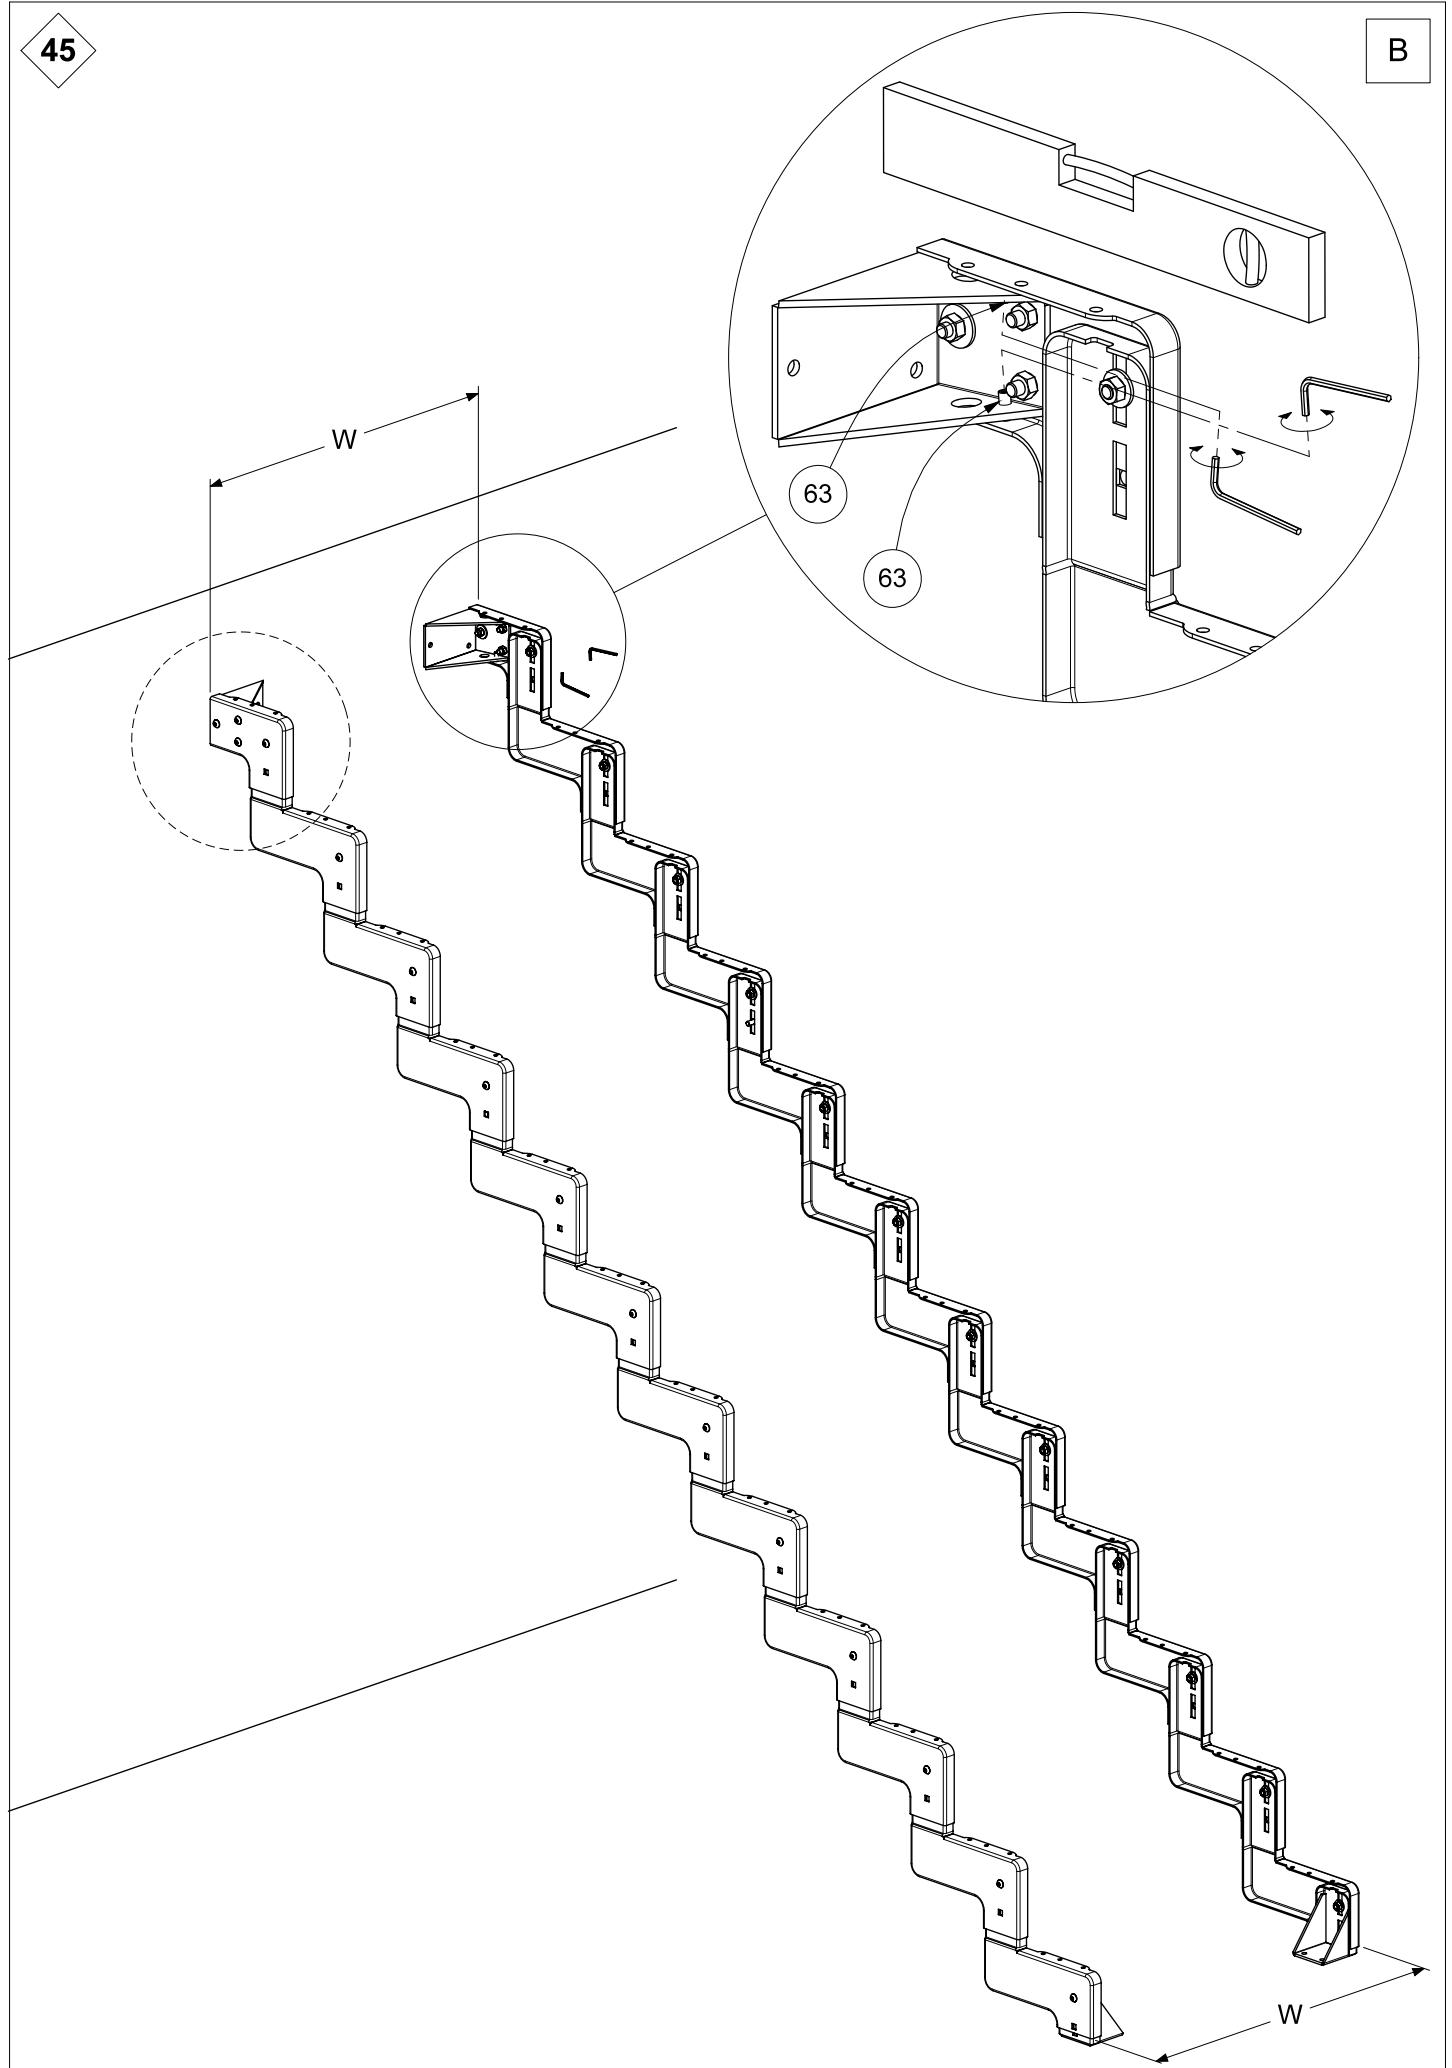


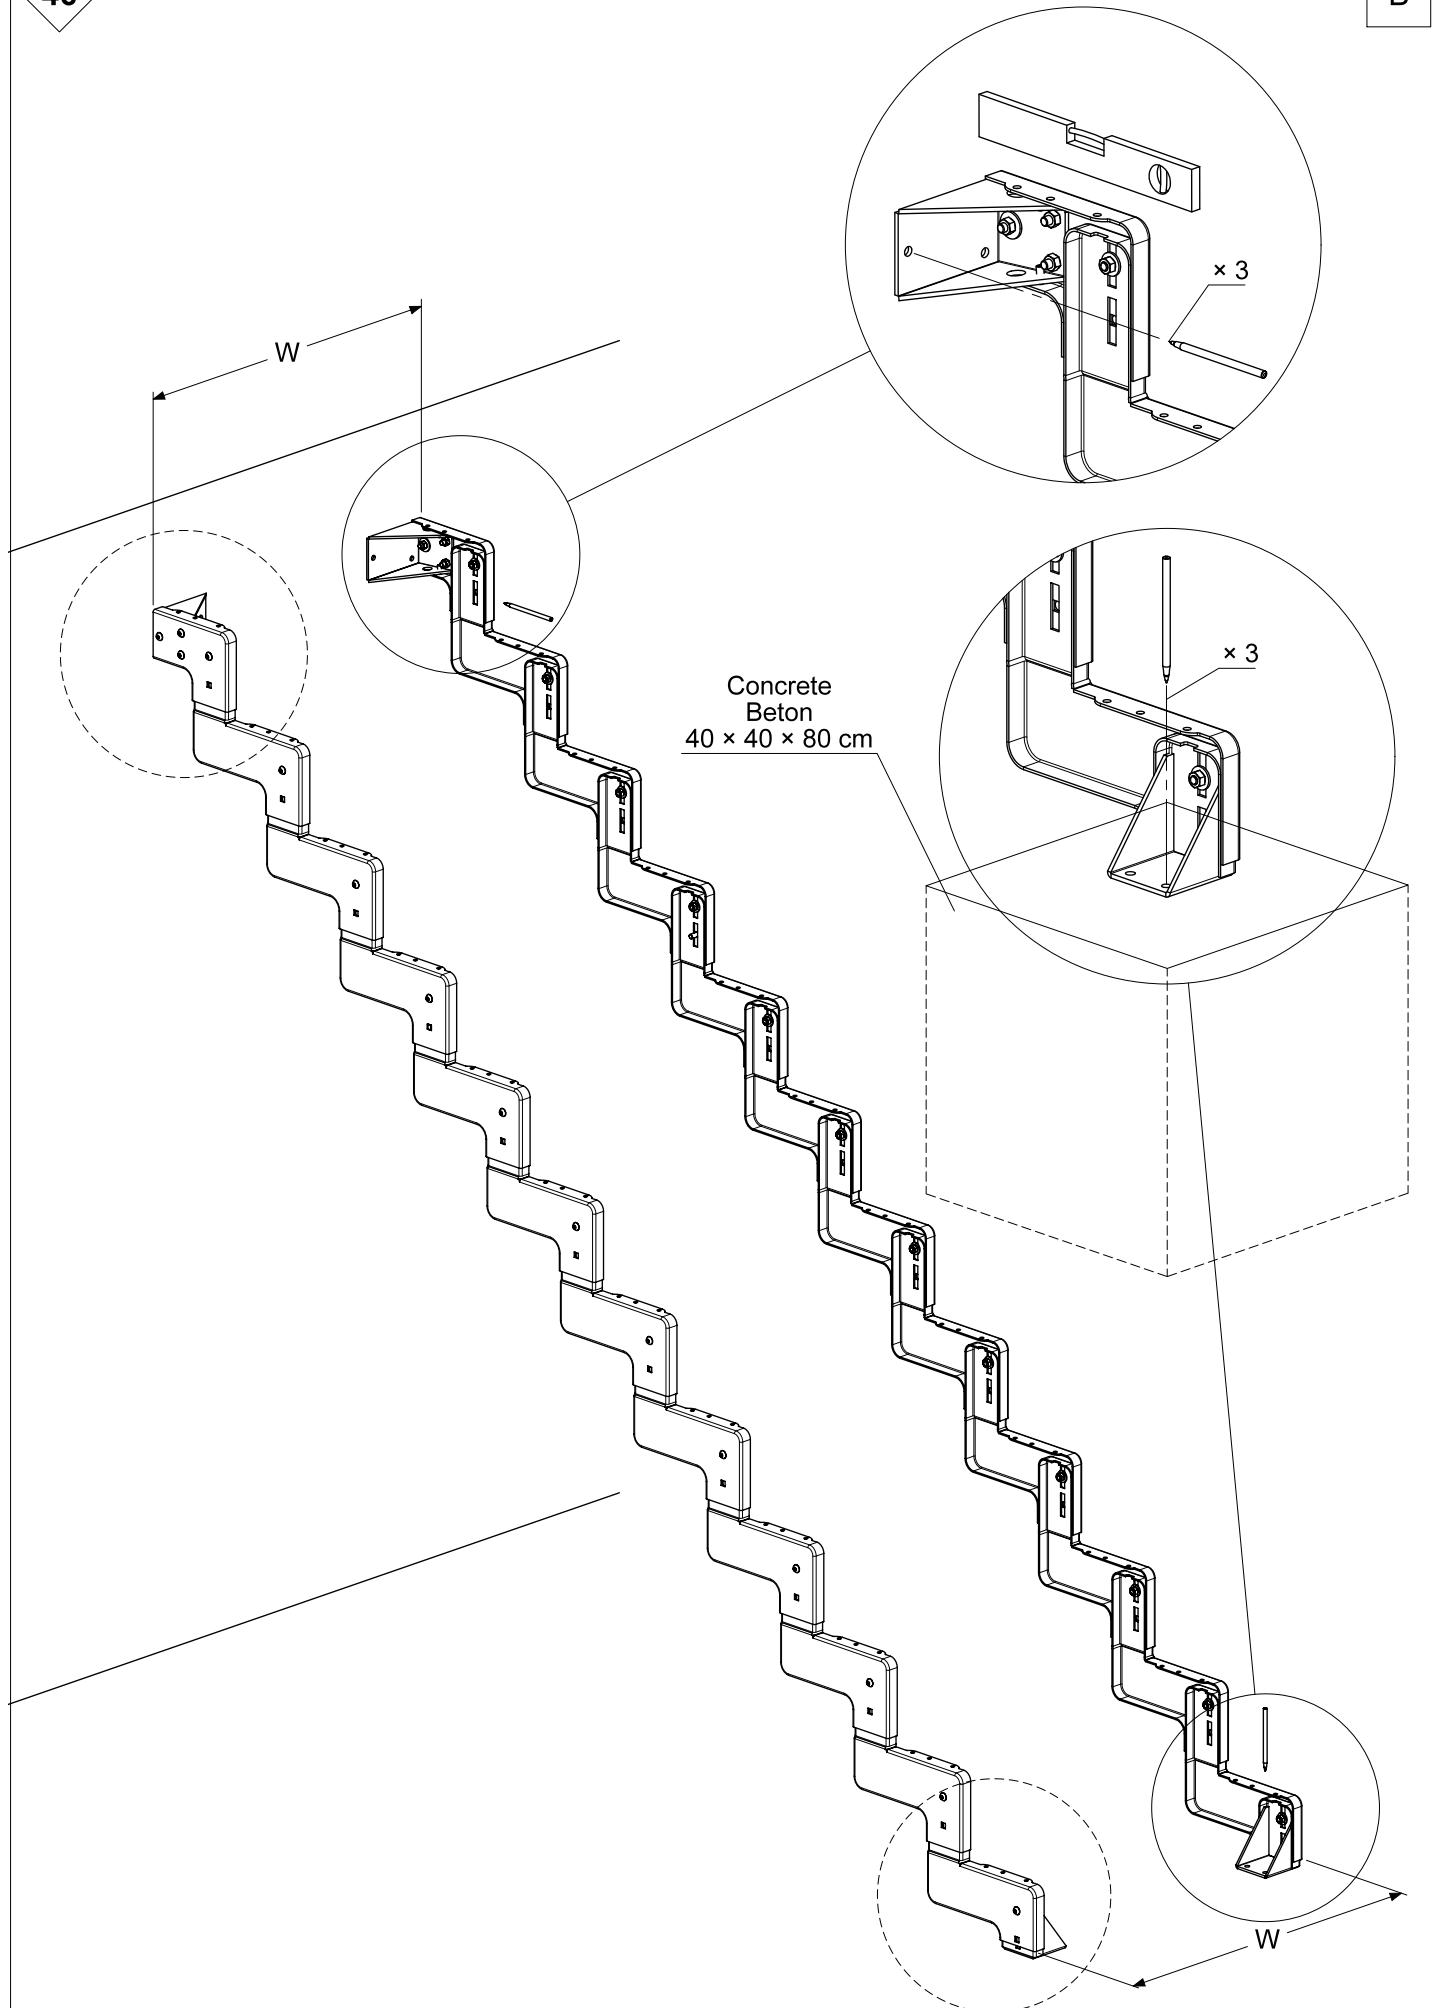

47


B

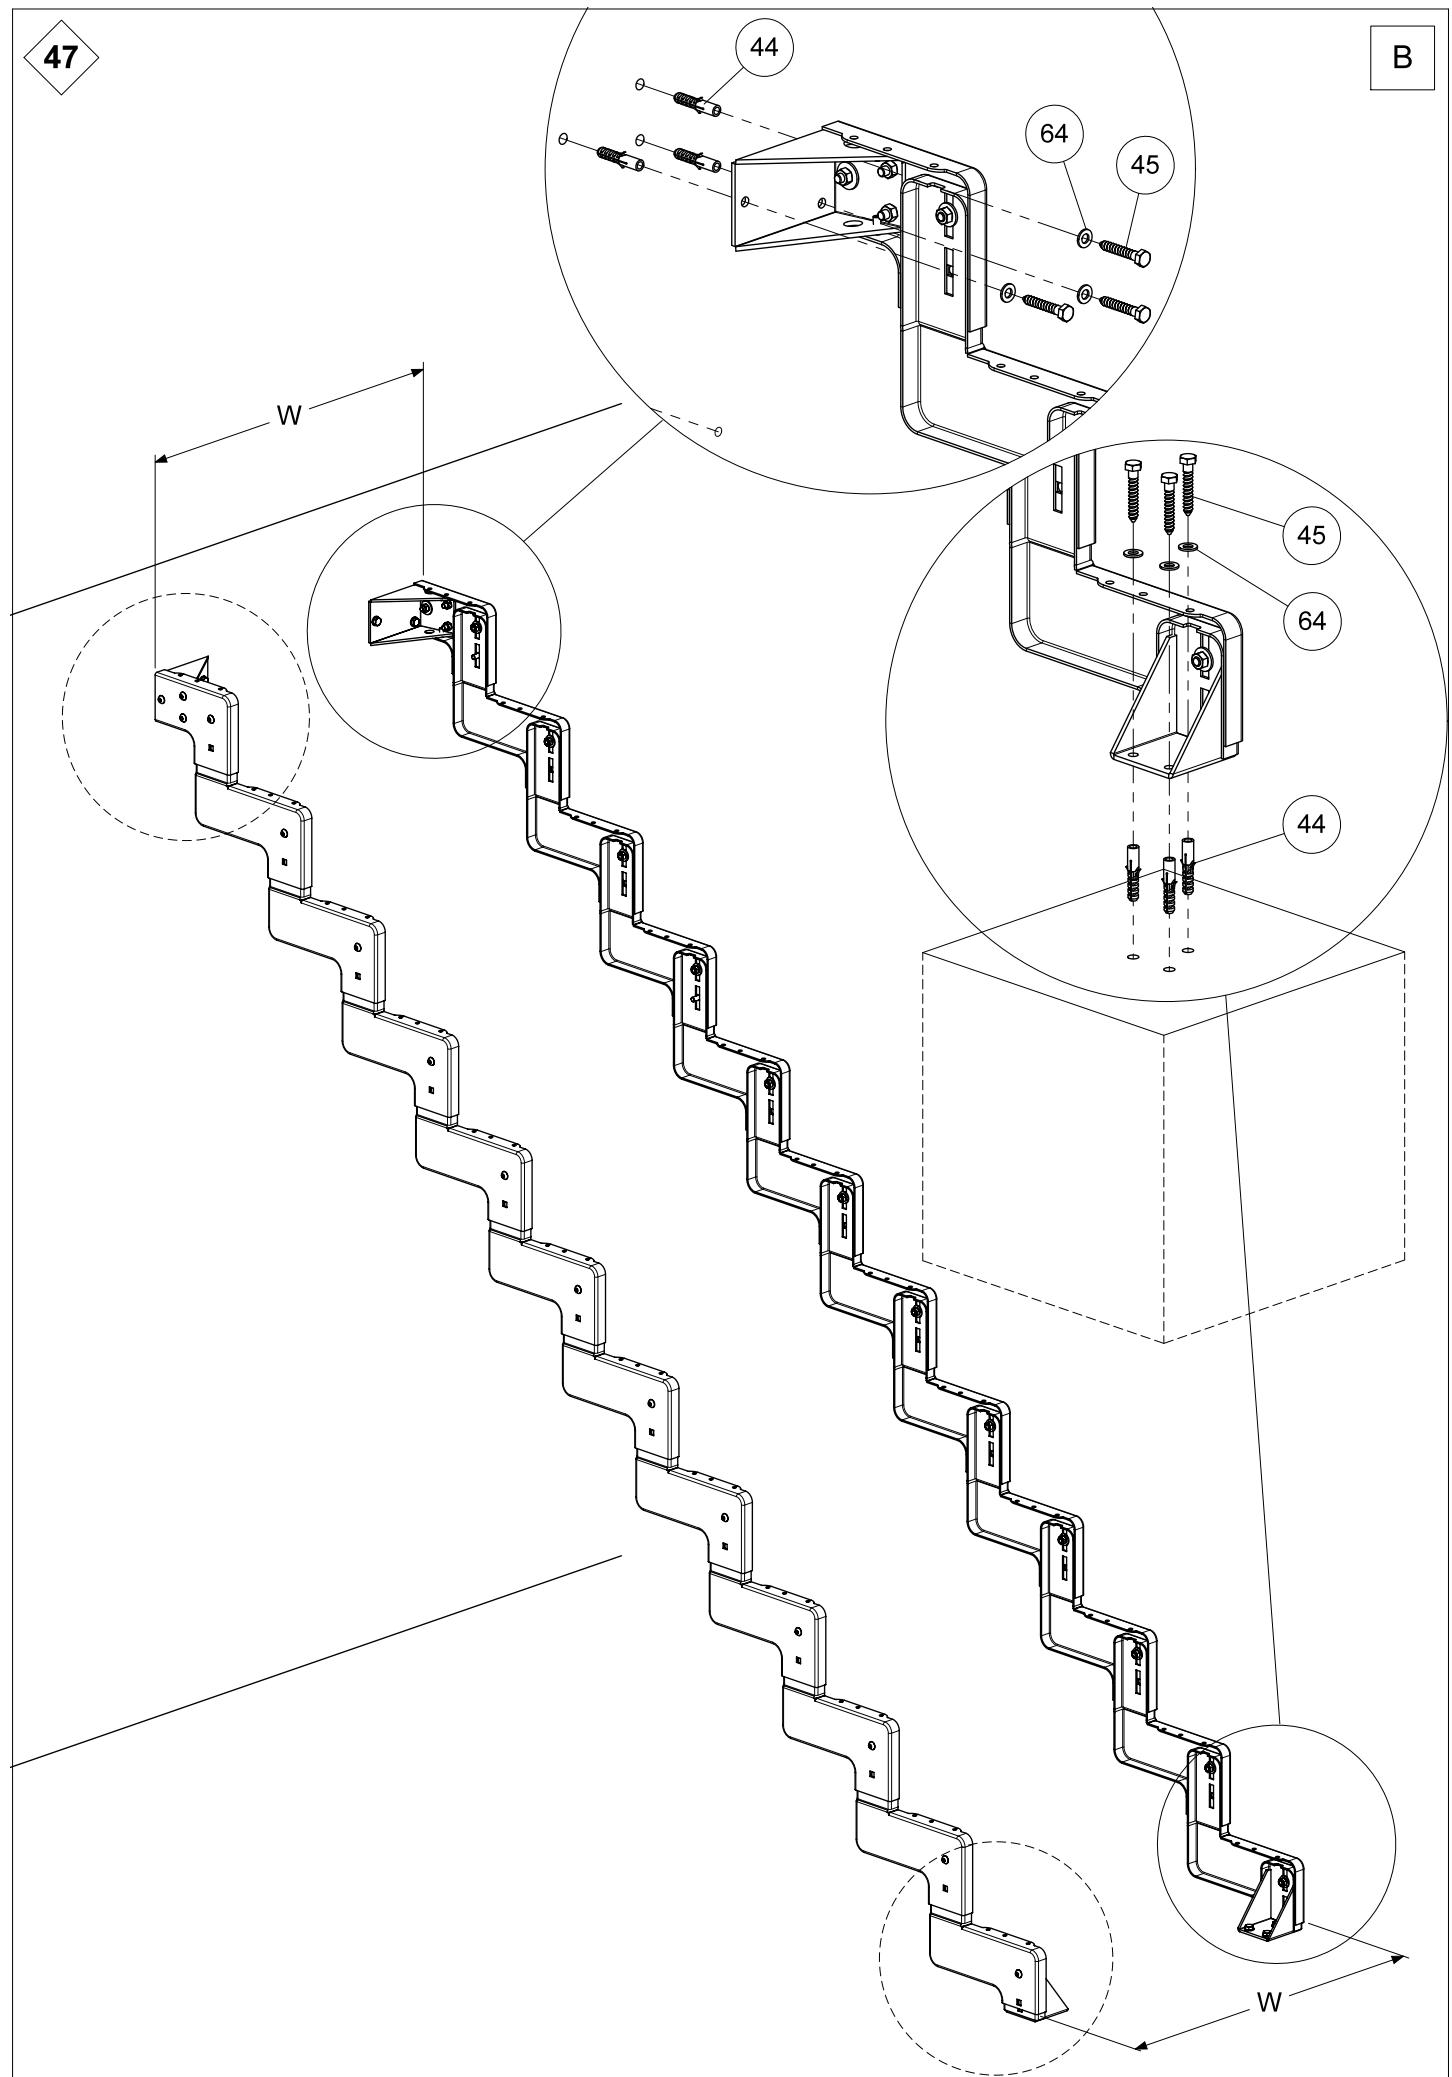

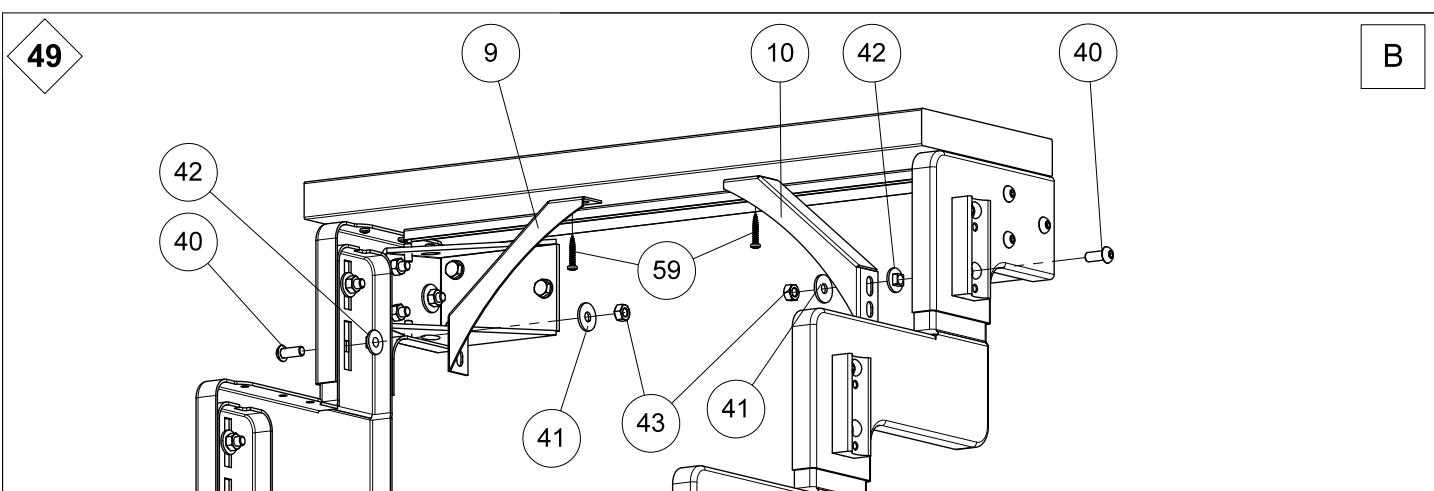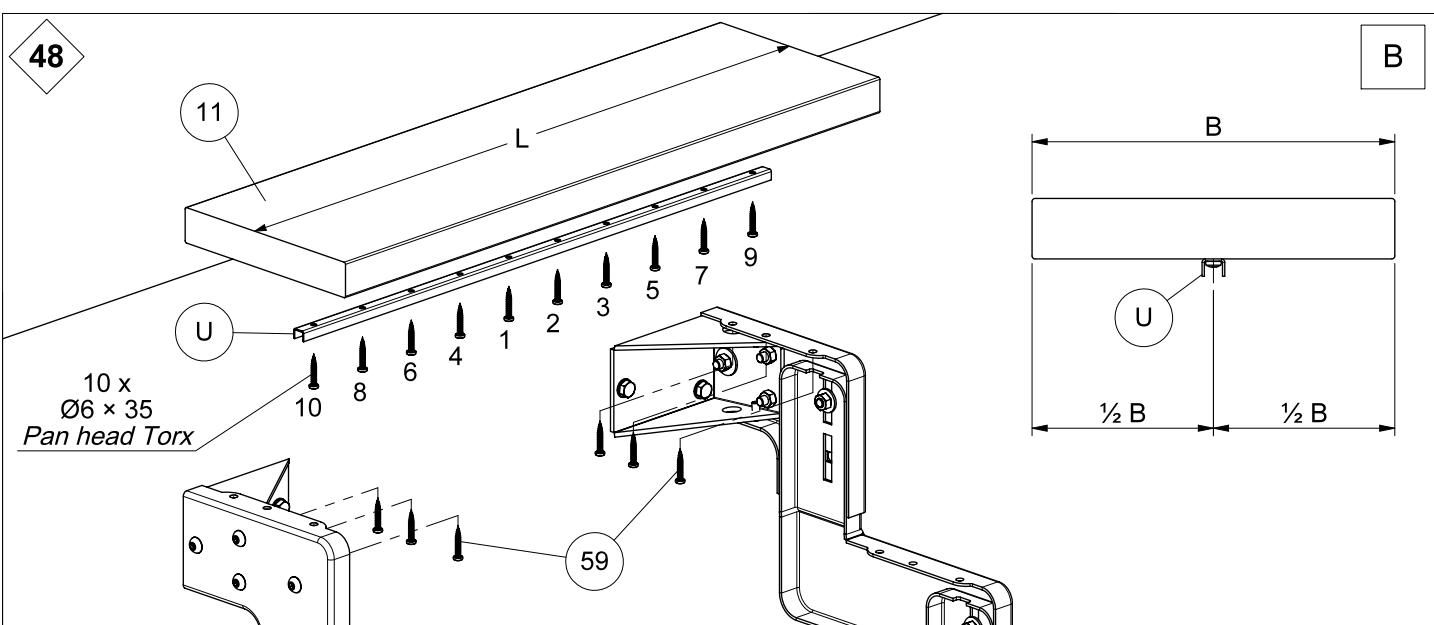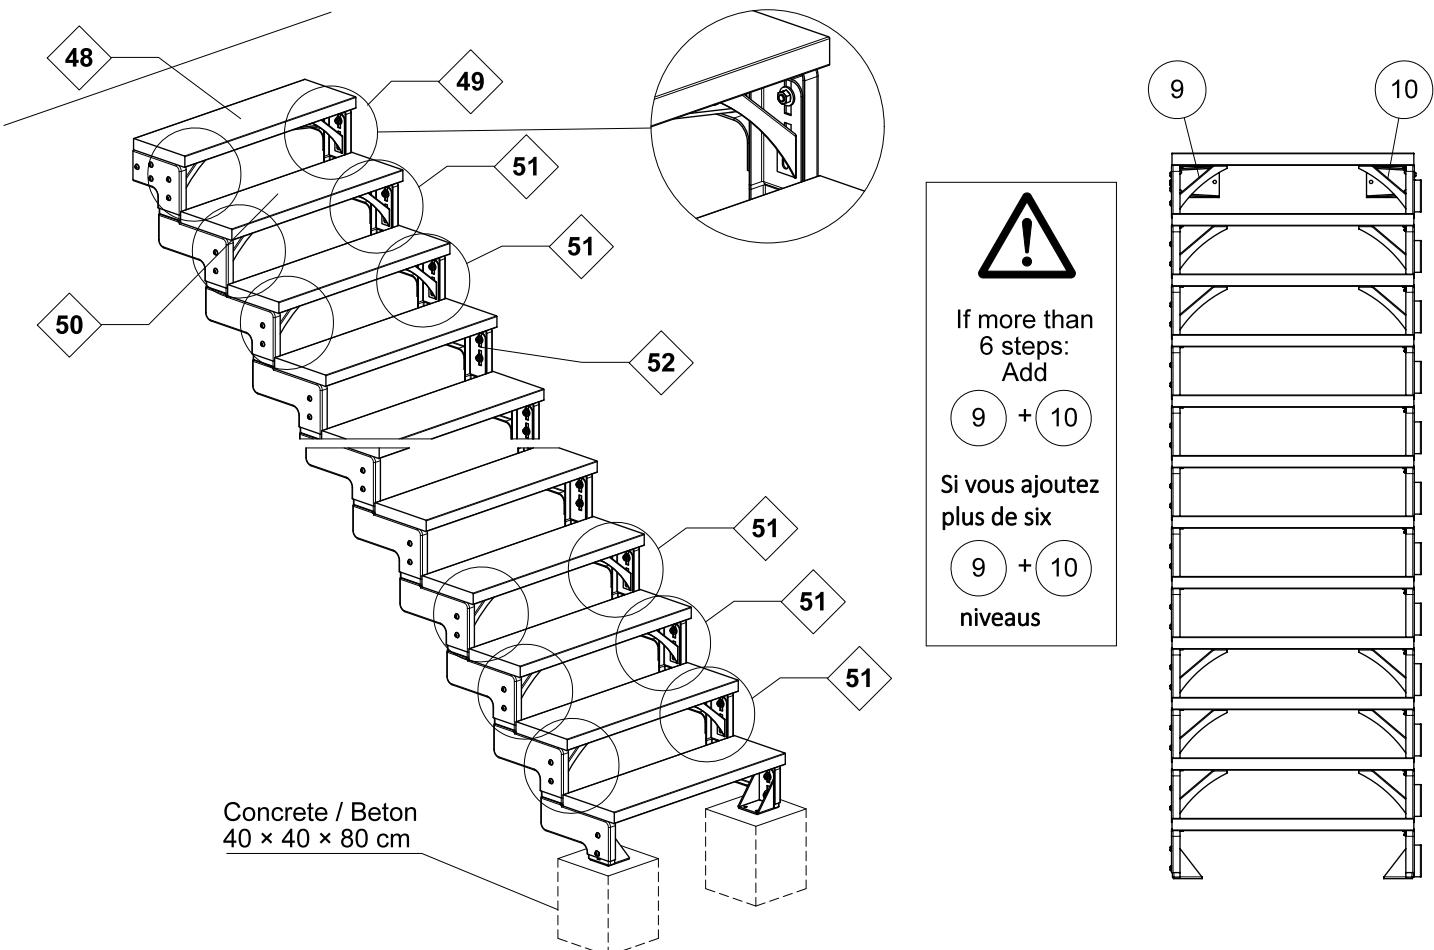


50

B

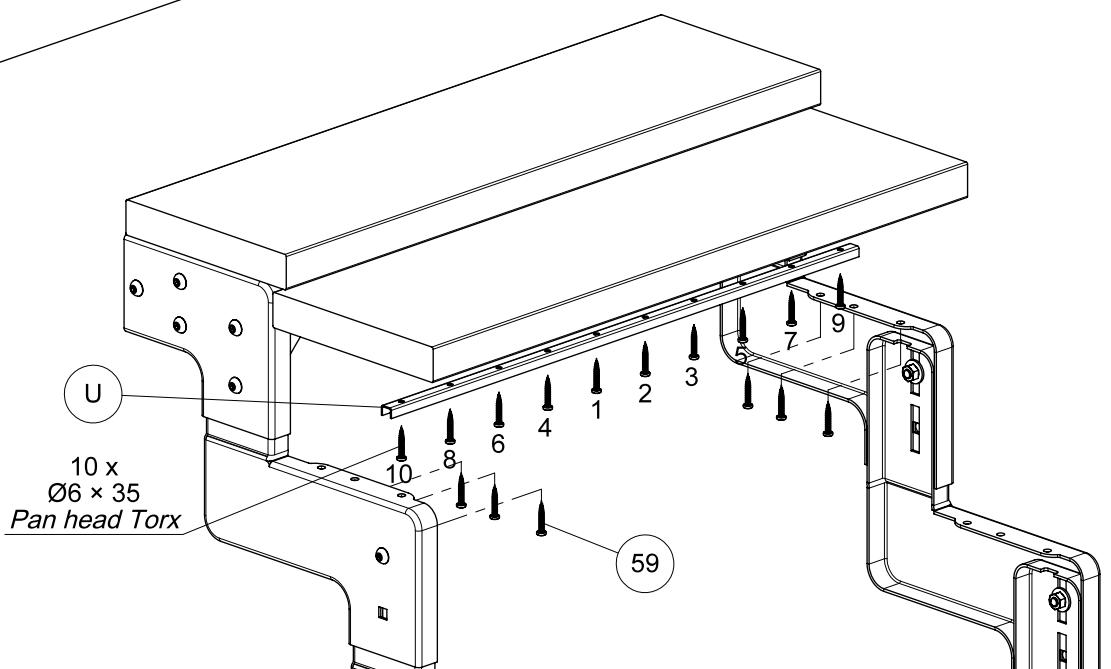


51







B





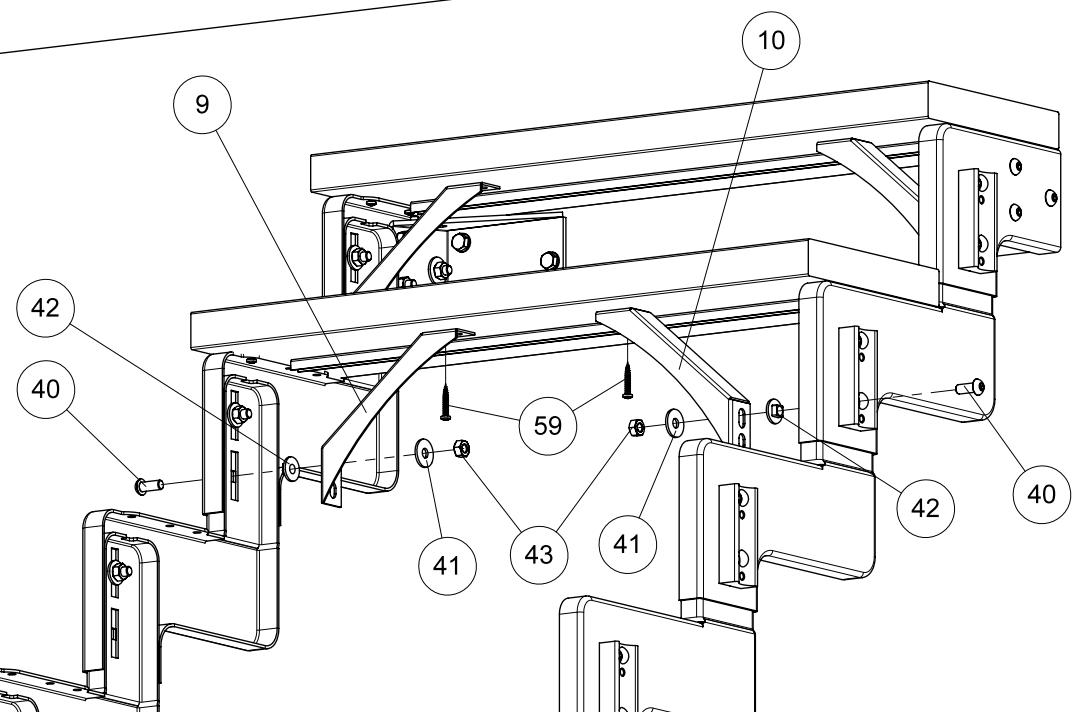


52

B

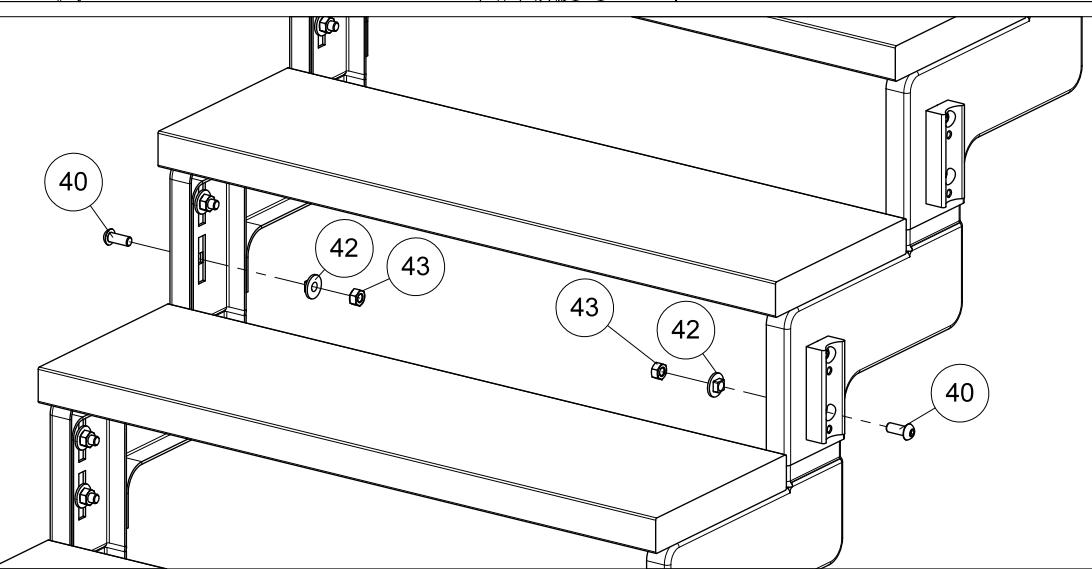

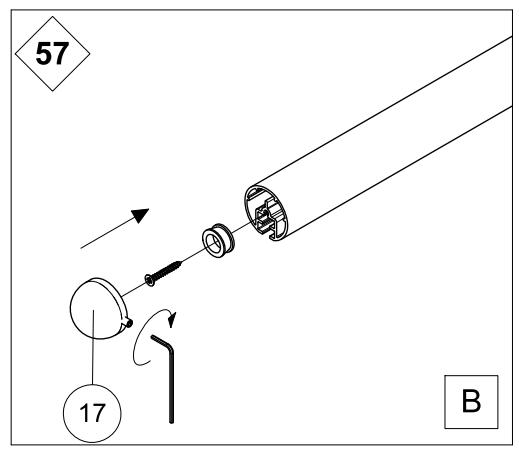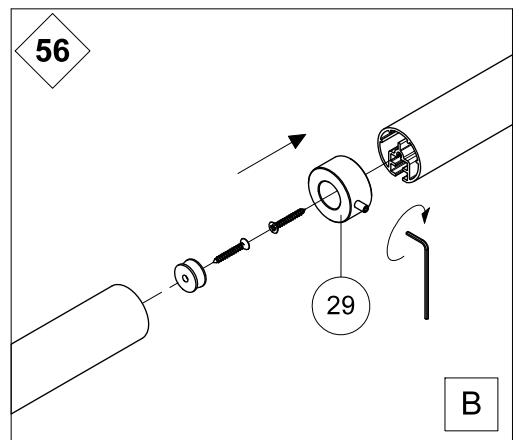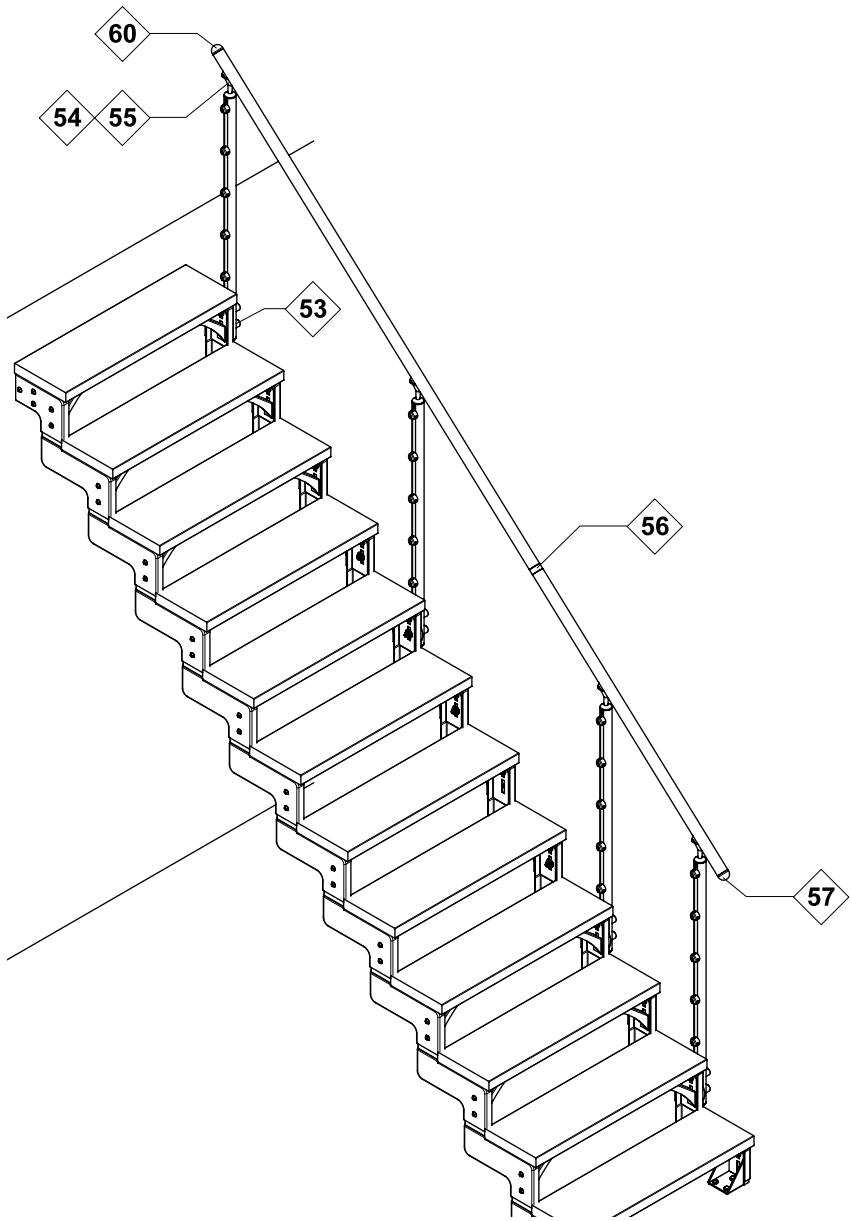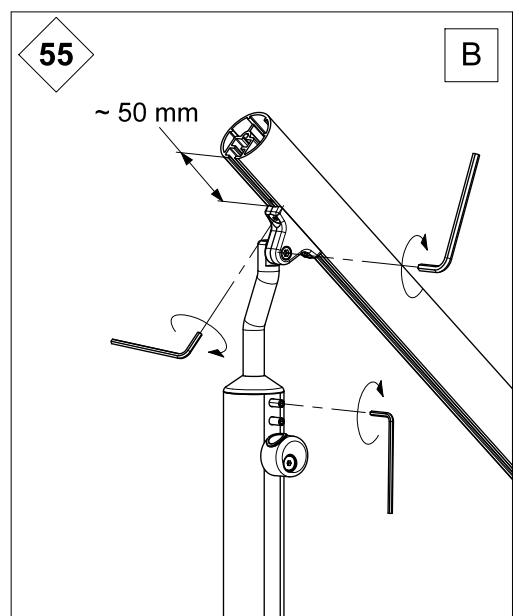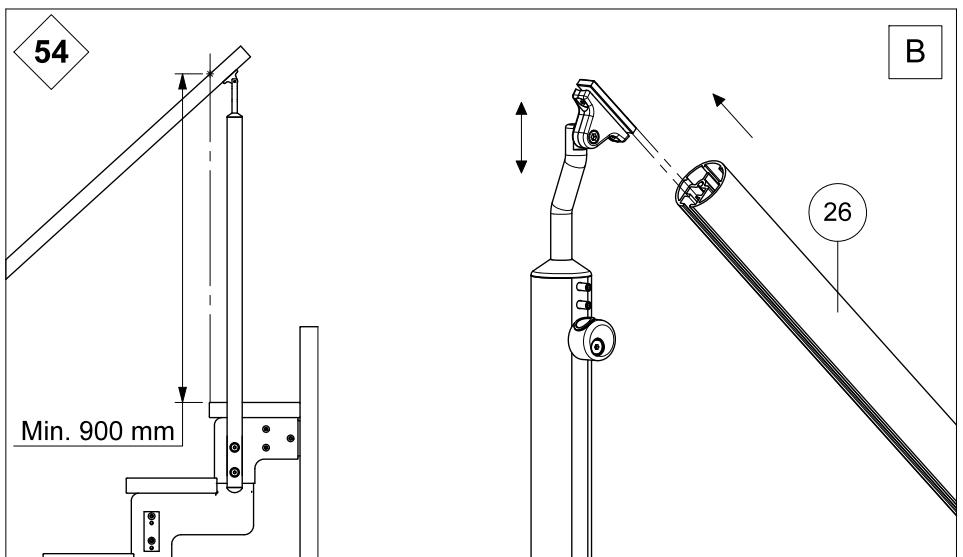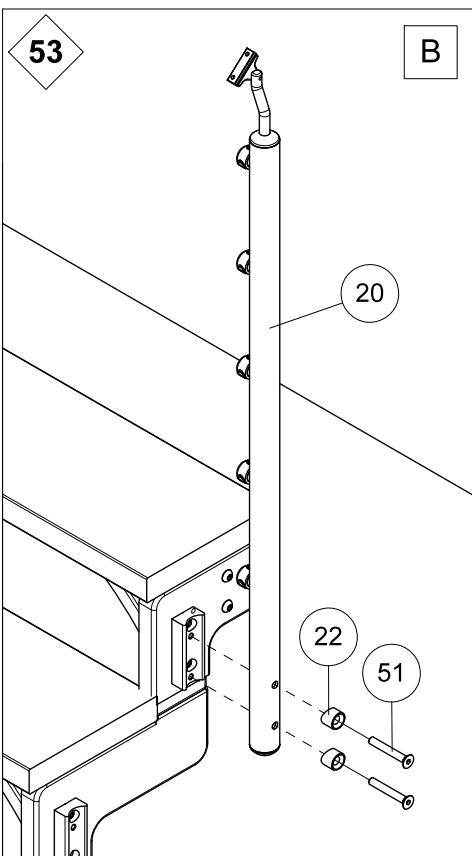

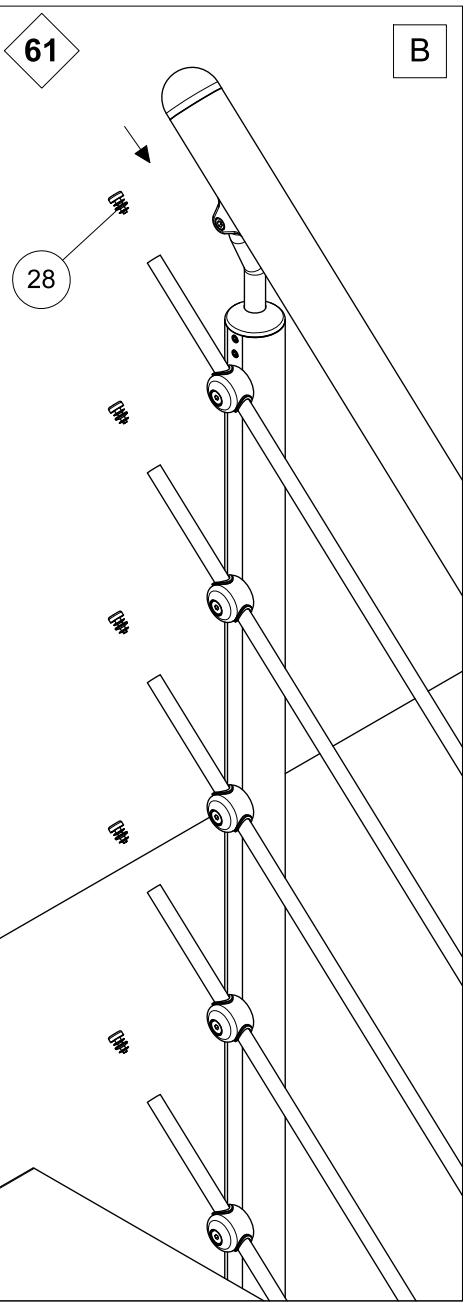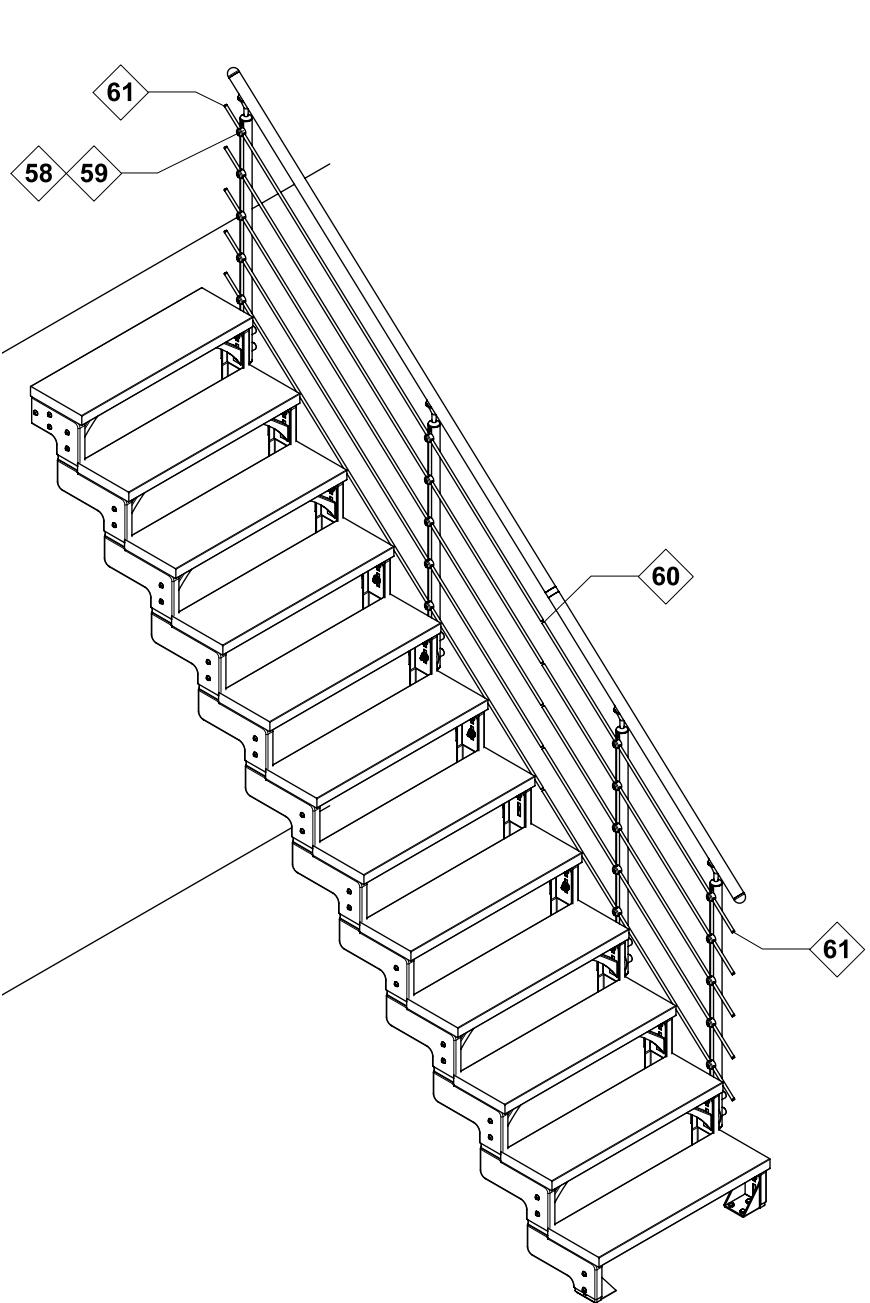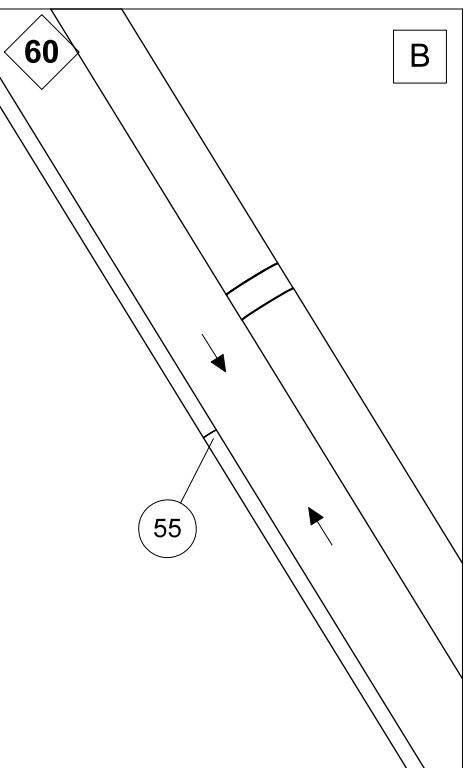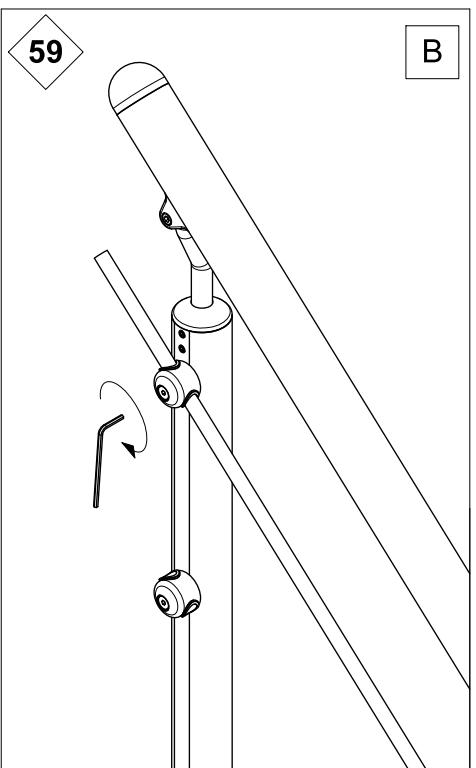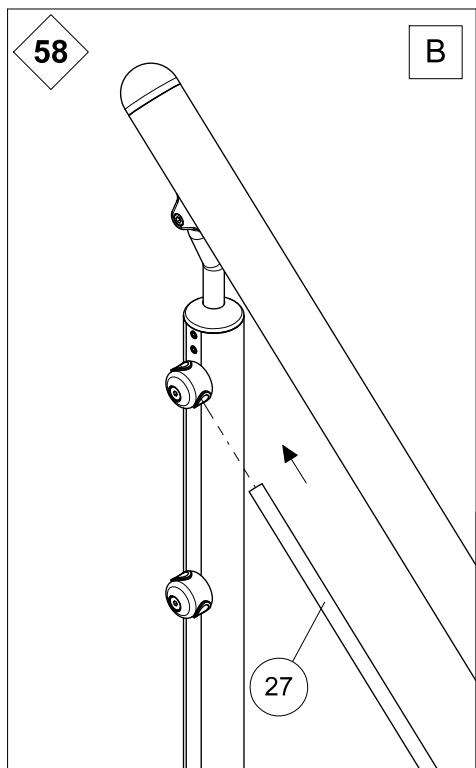



We recommend
using a support
column from 8
treads

A partir de 8 marches,
nous recommandons
un support de l'escalier

